


Set Joy

Able

SU-275 / SP-275

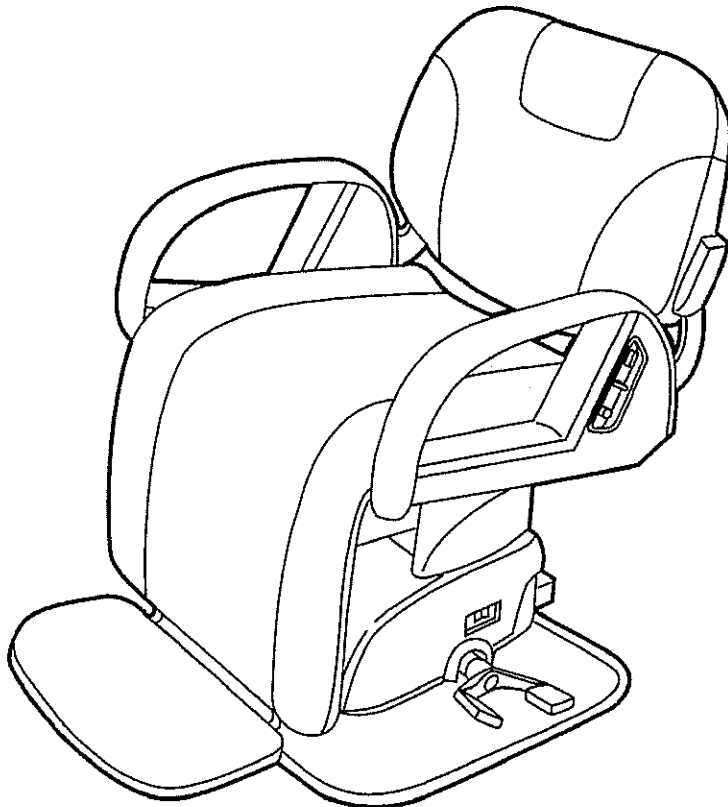

OPERATING INSTRUCTIONS

IMPORTANT

This manual provides information and instructions for the installation procedures for TAKARA BELMONT Able shampoo chair. The instructions contained in this booklet should be thoroughly read and understood before attempting to install the chair. After the installation is completed, file this manual and refer back to it for future maintenance.


 **TAKARA
BELMONT**

BEDE65A0

TABLE OF CONTENTS

1. OVERALL VIEW AND MAJOR PARTS -----	1
2. DIMENSIONS AND SPECIFICATIONS -----	1
3. OPERATING INSTRUCTIONS -----	1
4. ADJUSTMENT OF PRESET POSITION -----	3
5. CARE AND MAINTENANCE -----	3

1. MAJOR OVERALL VIEW & COMPONENTS

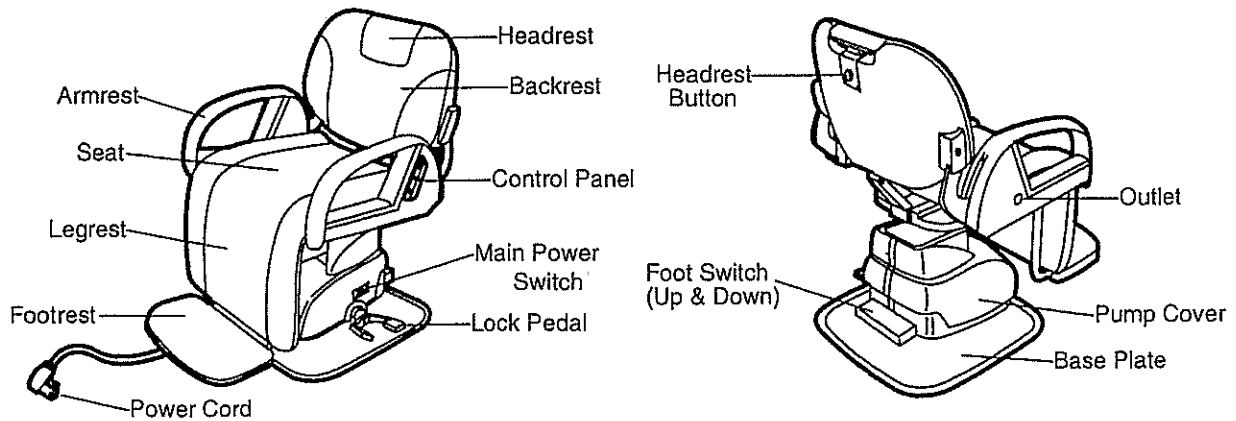

2. SPECIFICATIONS

Chair Lifting and Lowering Mechanism	Electro-Hydraulic System
Chair Seat Height	510 ~ 790mm
Chair Lifting Stroke	280mm
Backrest Reclining Mechanism	Electro-Hydraulic System
Backrest Angle	70 - 4 (degrees)
Headrest Adjustment	Manual Control
Power Supply	115V, 50/60Hz, 460 / 400 W 220V, 50/60Hz, 350 / 400 W 230V, 50/60Hz, 410 / 430 W 240V, 50 /60Hz, 470 / 470 W
Net Weight.....	78kg

3. OPERATING INSTRUCTIONS

(1) Main Power Switch (Fig.1)

Turn ON the main power switch.

A circuit breaker of 15 Amp. is built in the main power switch.

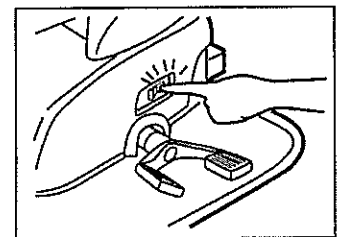


Fig.1

CAUTION

Operate the main power switch only by hand. When the chair is not used for long term, turn OFF the main power switch.

(2) Foot Switches (Fig.2)

The chair seat height can be adjusted by foot switches.

Keep depressing UP or DN switch to raise or lower the chair seat until it reaches at the desired height.

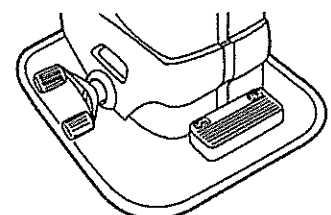


Fig.2

(3) Control Panel (Fig.3)

Control panels are provided on both sides of the chair under the armrest.

(1) Backrest angle adjustment switch (Manual)

Keep depressing the switch forward (or backward) until the backrest reaches at the desired angle.

(2) Seat height adjustment switch (Manual)

Keep depressing the switch upward (or downward) until the chair seat reaches at the desired height.

(3) Automatic switch

Preset Position

Momentarily depress the switch upward, the chair seat and backrest will be brought to the preset seat height and backrest angle

Auto-Return

Momentarily depress the switch downward, the chair will be brought to the initial position - at lowest seat height and backrest upright.

Safety stop

An automatic procedure (preset or auto-return) can be stopped immediately by depressing any switch except automatic switch.

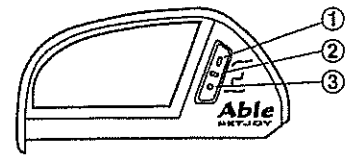


Fig.3

(4) Chair Rotation (Fig.4)

The chair can be rotated freely by depressing left side of the lock pedal, and can be locked at any position by depressing right side of the lock pedal. Keep the chair rotation "locked" to prevent unexpected rotation.

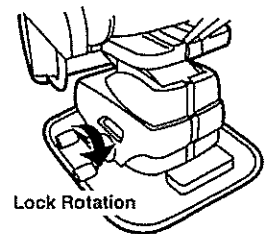
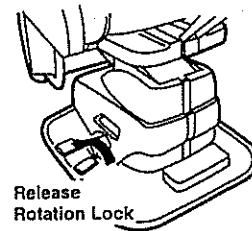


Fig.4

CAUTION

Keep the chair rotation "LOCKED" always except when the chair is rotated. This is to prevent the chair from unexpected rotation.

(5) Headrest Adjustment (Fig.5)

Simply pull up the headrest to raise it.

To lower the headrest, hold the headrest and press the headrest button, and push the headrest downward.

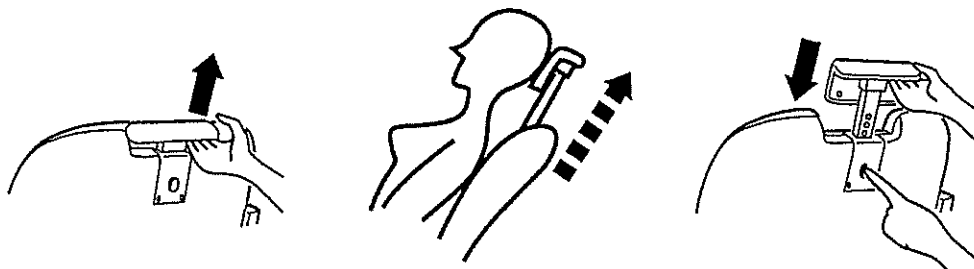


Fig.5

4. ADJUSTMENT OF PRESET POSITION

- (1) Set the chair seat and backrest to the required position, with manual switches.
- (2) Turn off main power switch.
- (3) Keep depressing the automatic switch upward, turn on main power switch.
Keep the automatic switch being depressed upward with the electronic sound is heard.
- (4) Then release the automatic switch.
Now, a new preset position is memorized.

5. CARE AND MAINTENANCE

- No maintenance is required except normal care and cleaning.
- Clean vinyl upholstery, surfaces of metal and plastic components with mild soap and water.
- Keep all the surfaces dry after cleaning.

NOTE



TAKARA BELMONT CORPORATION

1-1, Higashi-shinsaibashi 2-Chome, Chuo-ku, Osaka, Japan

TEL. : (06) 6213-5945

TELEFAX : (06) 6212-3680

Printed in Japan 0303