
ROLLER BALL F QUICK OPERATION GUIDE




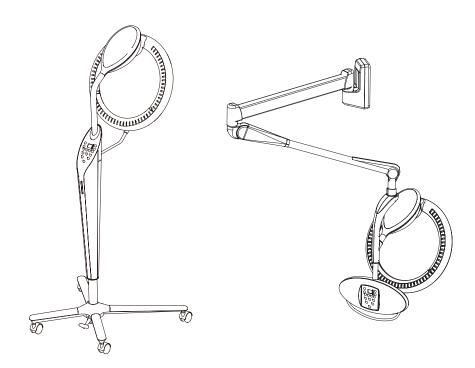


For details and safety information see the operating instructions.


https://beauty.takarabelmont.co.jp/manual-site/




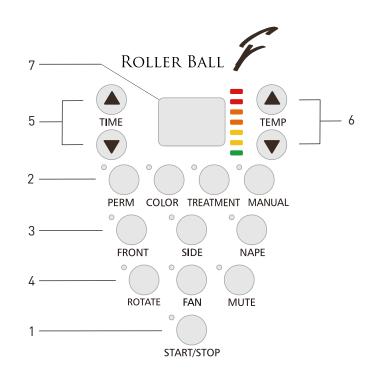

Note: FAN ON SELECTED MODELS ONLY.

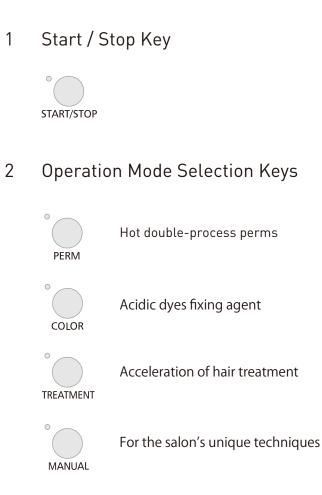

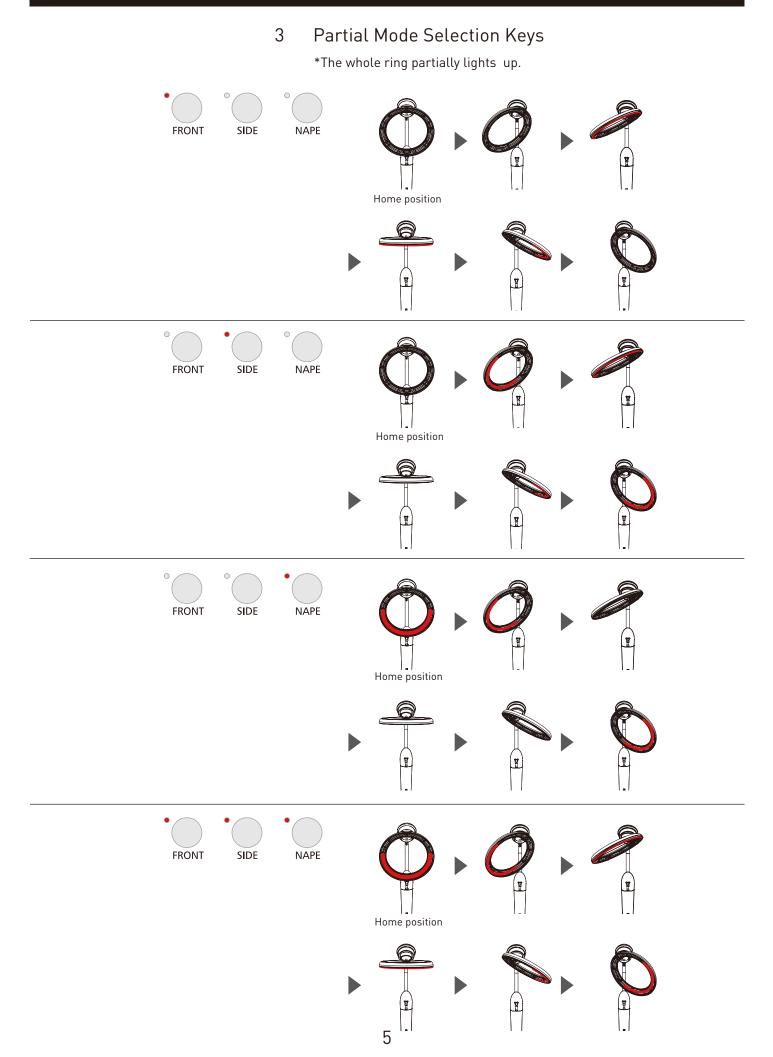

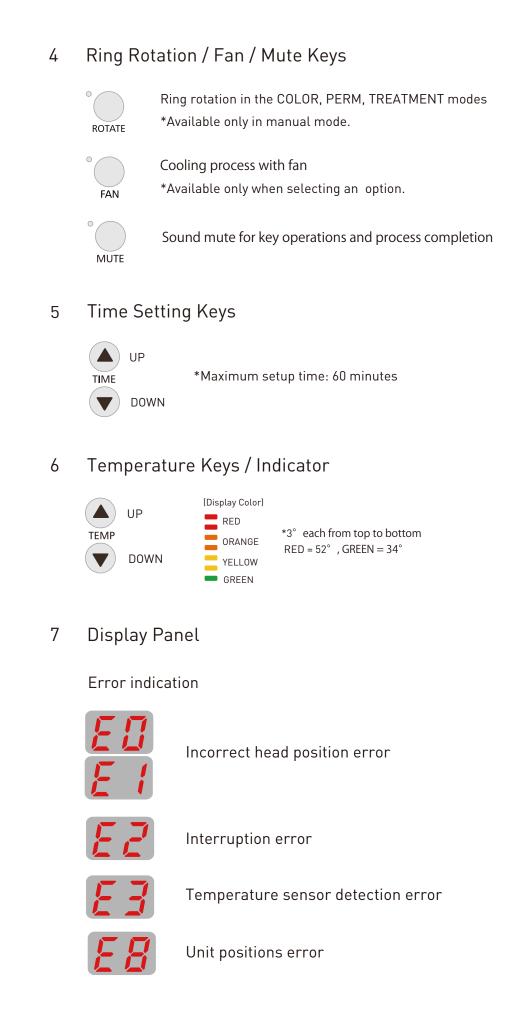


6


Adjust the height using both hands 1



Correct Setting Position 2

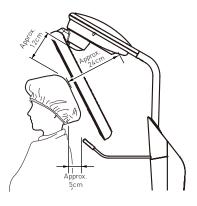

3 Setting the Roller Ball F in the correct position

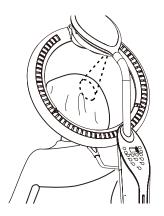


4 Alarm rings when the head position is misaligned





Treatment

1 Set the Roller Ball F in the correct position

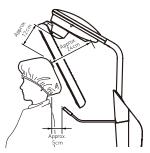


Adjust temperature with temperature level setting without changing the equipment position if it's too hot.

Moving it away might cause the error unable to detect the head temperature, and even if trying to get the temperature closer to adequate temperature, the temperature of whole ring may be higher.

2 Plug in and turn on the power switch



3 Mode Selection

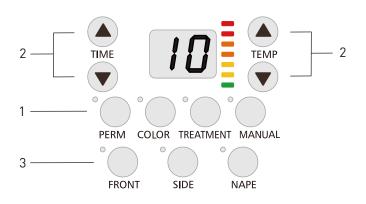


- 1 Select the preset mode
- 2 Adjust Temperature and Duration (option)
- 3 Select heating sections

4 Starting the operation



5 During Operation

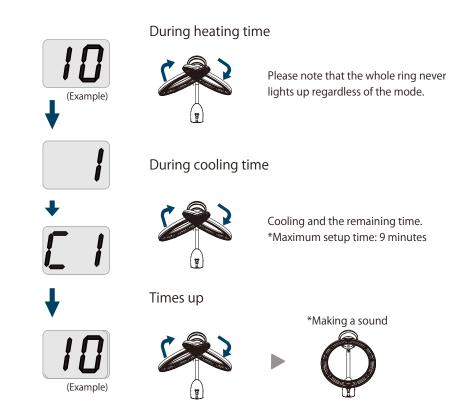

8 Switch off and unplug when not in use



