

 
 
Luxury MAXIM Installation Manual

Be sure to store this manual in a secure location together with the operation manual as it describes items that must be understood by the customer.

Installation Procedures

1 Move the chair to the installation location



- Move the chair by holding the skid.
(Carrying the chair by the upper part is dangerous because the base could come off and drop.)
- Remove the chair from the skid. Raise the chair off the floor by holding the metal plate under the foot switch. Move the chair by holding the base.

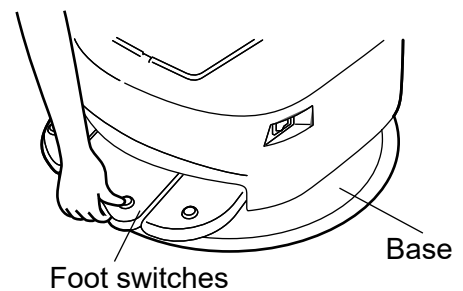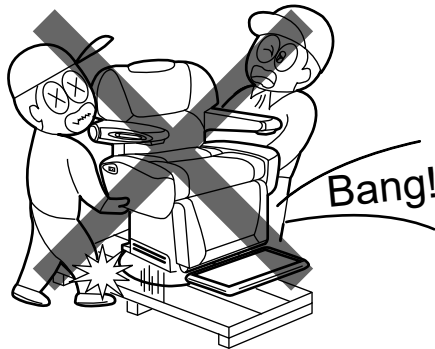

2 Attach the rubber ring to the base


Determine the installation location. Lift the base off the floor and attach the rubber ring to the rim of the base.

  - It's easier to lift it up one side at a time.

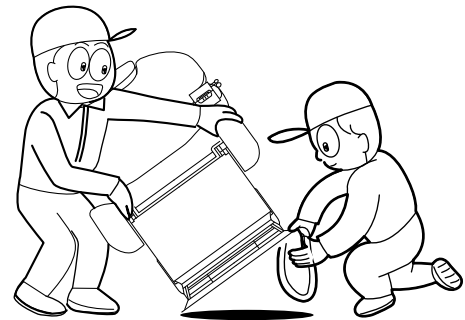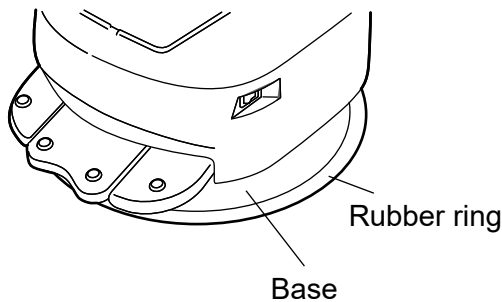

⚠ CAUTION

 - When transporting the chair, installing the rubber ring, or positioning the chair, if you cannot hold it by the base and foot switches, hold it by its armrests. During work, be careful not to deform the cape holder, wrinkle or dirty the leather, or let the base come off. Make sure not to apply excessive force that could damage the chair even when holding the armrests.
- When tilting the chair in order to attach the rubber ring, use a piece of cloth or similar material to protect the floor from getting damaged by the base edge.

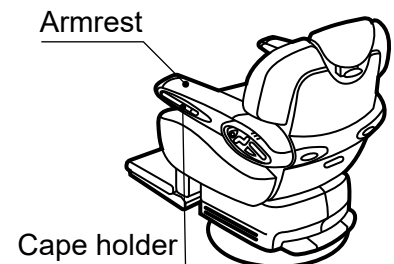

Luxury MAXIM Installation Manual

3 Connect the power plug to the outlet with ground terminal

The chair must absolutely be grounded in order to prevent electric shock.

4 Check that the chair operates normally

Turn the power on and check that the main unit, backrest, legrest, seat adjustment system, and other features function normally.

5 Adjust the preset positions

Although the setting positions of the preset switches are previously set when shipped from the factory, you can change the settings to positions that match your customers.

Refer to <Changing Settings of the Preset Function> in the MAXIM Operation Manual (p. 18), and change the position settings to match your customers.

6 Adjust the seat tilting position for the auto-return function

Although the position set by the auto-return switch is already configured when the chair is shipped from the factory, you can change the seat tilting position from the neutral to relaxation position to match your customers. Refer to <Changing Settings of the Auto-return Function> in the MAXIM Operation Manual (p. 19), and change the position settings to match your customers.

Usage environment

Temperature 0 ~ 40°C

Humidity 10 ~ 95% (No condensation)

Air pressure 700 ~ 1060 hPa

Transportation / Storage environment

Temperature -20 ~ 70°C

Humidity 10 ~ 95% (No condensation)

Air pressure 700 ~ 1060 hPa