

Shower Head Holder with Drainer

Operating Instructions

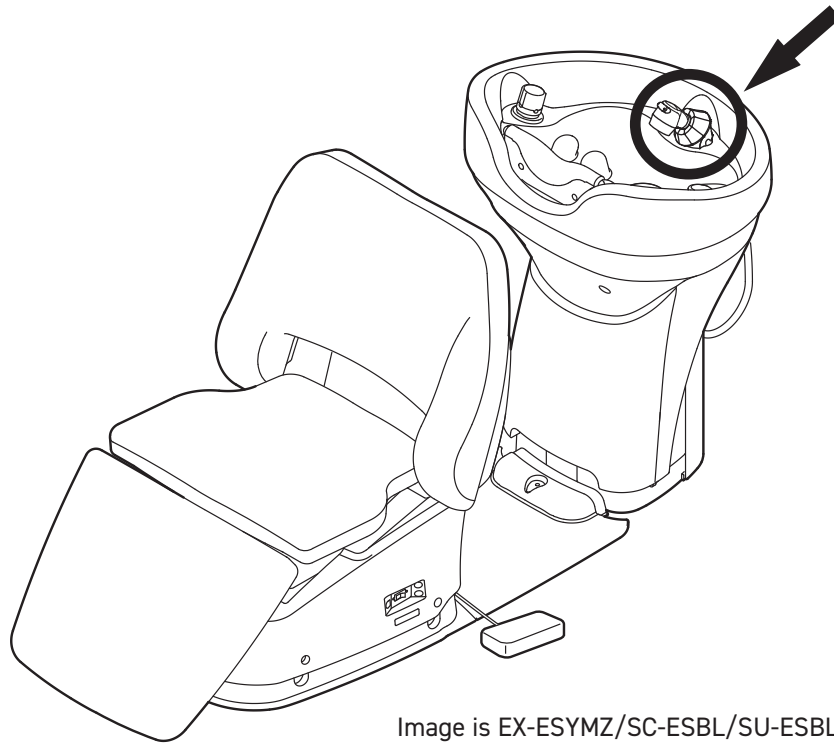


Image is EX-ESYMZ/SC-ESBL/SU-ESBL/EA-ESBP

Thank you for purchasing this Takara Belmont product.
The instructions contained in this booklet should be thoroughly read and understood before use.
Using this product before reading this operating instructions may result in an accident.
This product is an industrial shampoo unit designed for barbers and hair salons. Only use this product for its intended purpose and do not use it for non-hairdressing work.
Keep this instruction and refer back to them when required.
For installation and assembly of this product, contact your local Takara Belmont dealer.

Table of Contents

Introduction

| | |
|--------------------------------------|---|
| Description of Warning Symbols | 3 |
| Safety Precautions | 3 |
| Precautions for Use | 4 |
| Name of Parts | 4 |

Preparation

| | |
|---------------------------------|---|
| Remove the cover | 5 |
| Sponge Installation | 5 |
| Installation of the Cover | 5 |

How to Use

| | |
|---------------------------------------|---|
| Using the Shower Head | 6 |
| To Fill up the Basin with Water | 7 |

Maintenance

| | |
|-------------------|---|
| Maintenance | 8 |
|-------------------|---|

When Necessary

| | |
|---------------------------------|----|
| Before Requesting Repairs | 10 |
| Daily Inspections | 10 |
| Consumable Supplies | 10 |

Description of Warning Symbols

■ Before using this product



The "Safety Precautions" and "Precautions for Use" contained in this booklet should be thoroughly read and understood before use.

■ Precautions listed here


The precautions listed here are to ensure that this product can be used safely, and to prevent any danger or risk to the person using this product or those around them.

These precautions are important for ensuring safety. Adhere to these precautions at all times. Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents if this product is used without adhering to the "Safety Precautions" and "Precautions for Use". In this case, the person failing to adhere to the "Safety Precautions" and "Precautions for Use" will be responsible for any damage or risk incurred.

Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading this instruction.

| Classification | Level and urgency of harm or damage |
|--|--|
|  Warning | If this symbol is ignored and the product is used, "there is the risk of death or serious injury to the user". |
|  Caution | If this symbol is ignored and the product is used, "there is the risk of light or moderate injury or physical damage". |

The specific points that are to be abided by are explained using the following symbols.

| Symbols of prohibited matter |
|---|
|  Common prohibited actions |

Safety Precautions

(Adhere to these precautions at all times)

Caution

Precautions for Use/Maintenance




- Do not turn the water fully on with the shower head in the shower head holder. Failure to follow this instruction may cause water to spill out of the basin, covering the customer with water. When turning the water on with the shower head in the shower head holder, check the surrounding area and turn the tap slowly.

Precautions for Use

- Do not leave the shower head immersed in water.
If pressure in the water pipes decreases due to repairs that follow water stoppages, the water in the basin may flow back through the shower head.
- Do not wet the shower head holder with water.
Failure to follow this instruction may cause water leaks.
- Return the shower head to the shower head holder so that the shower head plate faces the basin.
Failure to follow this instruction may cause water to spill out of the basin or splash the customer with water.
- Do not remove the cover of holder forcibly.
Failure to follow this instruction may cause damage to the product.
- Do not cover the drain outlet when this product is not in use.
Do not cover the drain outlet with the drain cap, towel, or shampoo cloth after finishing use.
Water may overflow when water is improperly discharged or a small amount of hot water is discharged due to an increase in water pressure during the night, resulting in water leaks. Be sure to remove the trap cover from the drain outlet when the product is not in use.
- Do not collect water until it overflows from the shower hose slot.
The amount of water should be below the designated maximum water level. [Page 7]
- Put shower head securely into the holder.
Failure to follow this instruction may cause water to spill out of the basin, covering the customer with water.

Name of Parts

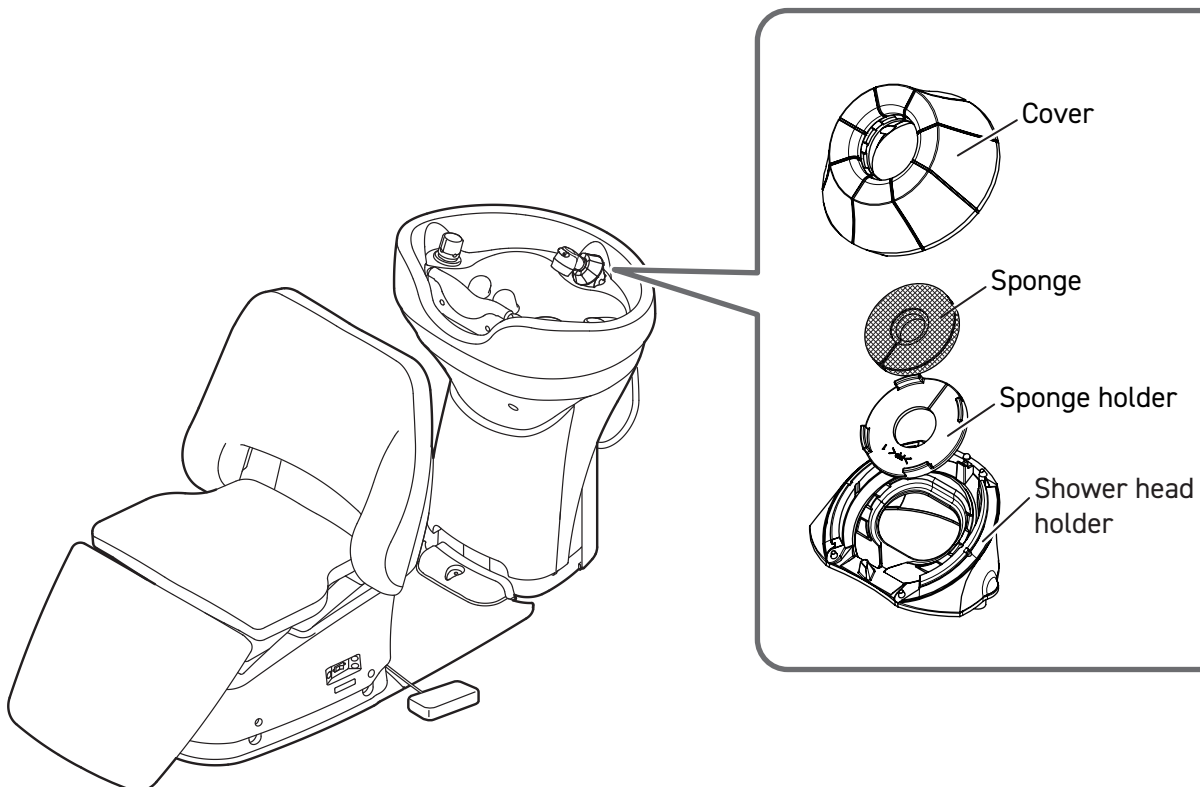



Remove the Cover

- 1 Turn the cover counterclockwise.

Turn the cover around 5 degrees.

- 2 Pinch the front and back of the cover to deform and remove the catch.

【Image】

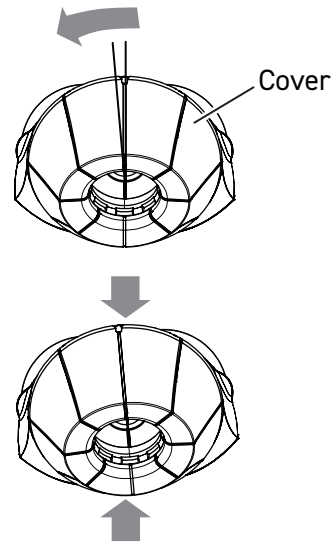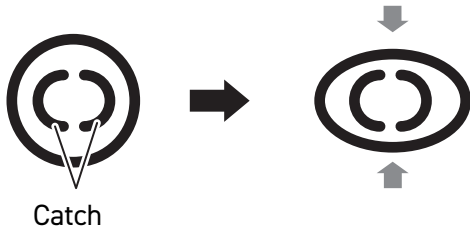

Caution

Do not remove the cover of holder forcibly.
Failure to follow the instruction may cause damage the product.

Sponge Installation


Attach the sponge to the shower hose.

Attach the sponge and sponge holder to the shower hose, between the shower head holder and the cover.





Caution

Ensure that the harder side of sponge is facing upwards.

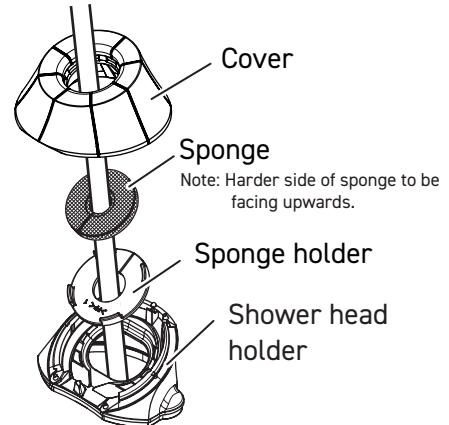

Installation of the Cover



Align groove in the cover and protrusion of the holder until they snap into place.

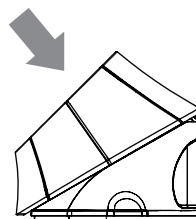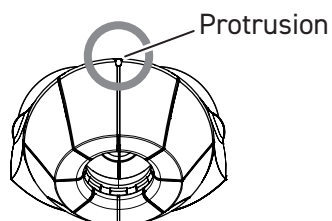


Using the Shower Head

Spa-shower head


Changing the selection switch position switches between Shower Mode and air Low-splash Mode.

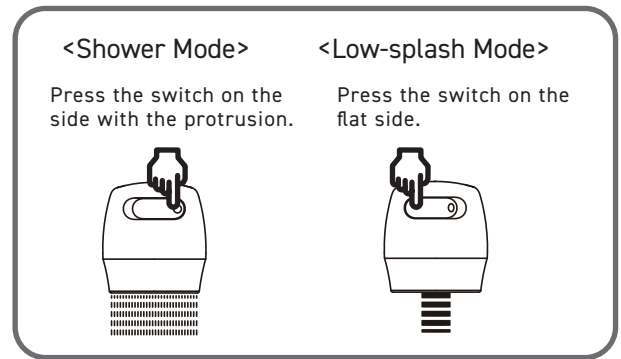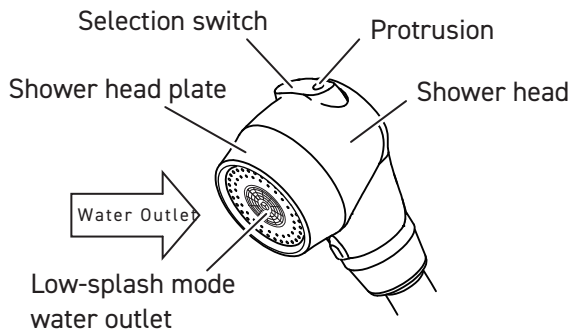

YUME shower head

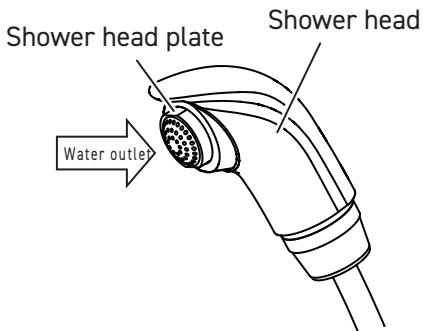


Side shower head

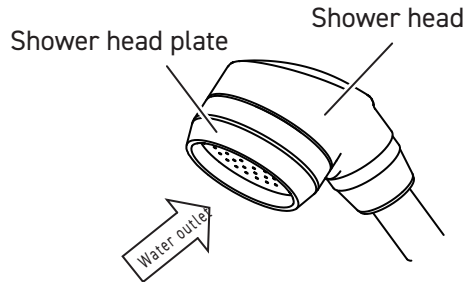


⚠ Caution

- Do not discharge a strong water stream when the shower head is in the shower head holder. Failure to take this precaution may result in system failure due to spilled water or damage to the floor.
- Return the shower head to the shower head holder after use so that the shower head plate is pointed toward the basin.


Shower head holder

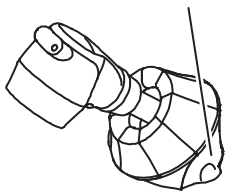

Shower head holder

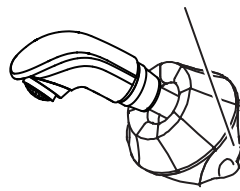


Shower head holder

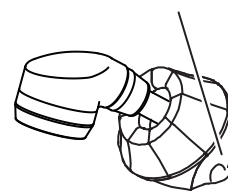


To Fill up the Basin with Water

To fill the basin with water, rotate the drain cap in the clockwise direction to close the drain outlet. The amount of water should be below the level shown by the dotted line in the illustration below (just below the shower hose slot).


When water accumulates and exceeds the dotted line, water may overflow from the shower hose slot. To drain the water, rotate the drain cap in the counterclockwise direction to open the drain outlet.

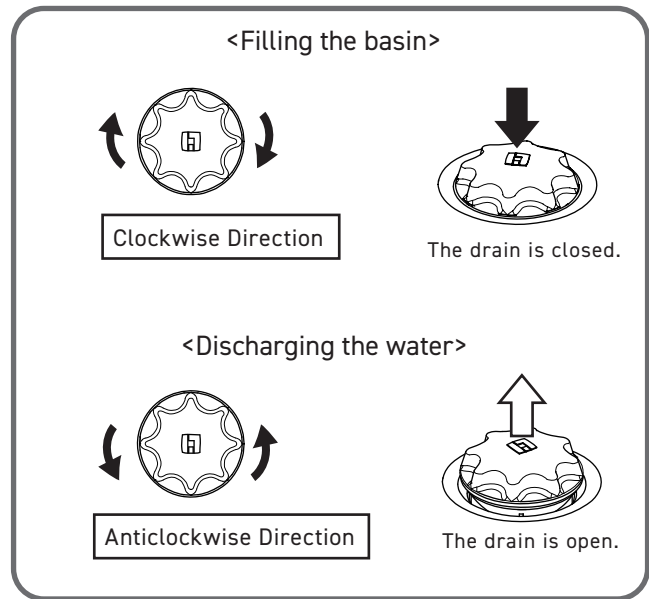

For Back wash basin (YUME basin)

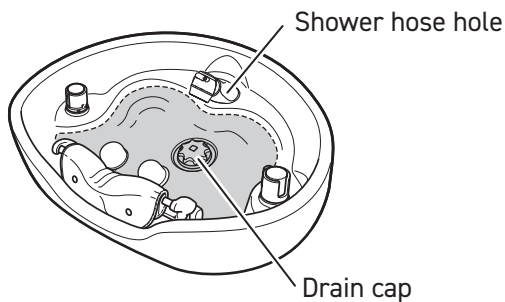



For Side wash basin

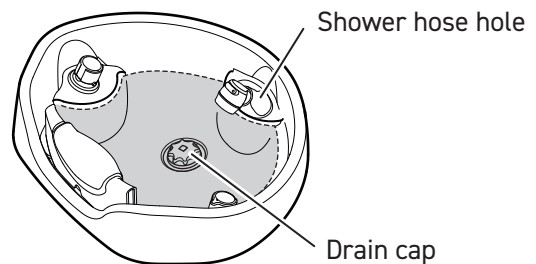

⚠ Caution

- The amount of water should be below the designated maximum water level. (See right figure.)
- Do not leave the shower head in the water to ensure that water doesn't leak out the shower hose slot. Water may flow back into the water pipe which could cause issues.
- When the drainage speed slows, there is a possibility that dust and dirt may have clogged the drainpipe.
- The drain cap must be detached from the drain outlet when the product is not in use. If the drain cap is not detached, the drain may accidentally close, and the water may overflow from the failure to notice water dripping, thus resulting in water leaks.

Designated maximum water level

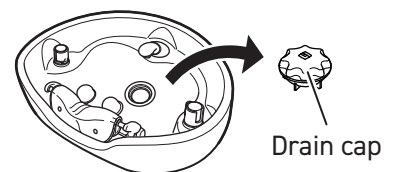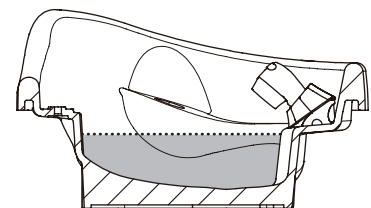

The hot water may decrease slightly in an amount that will not affect use. If the water level is decreasing significantly, the gasket of the drain cap may have deteriorated or become worn. Replace the drain cap. (Available at additional cost.)

Maintenance

Conduct the after-use care and always keep this product clean for later use. Leaving dirt uncleaned may cause them to get moldy or smell.

Warning

- Turn off the power switch and pull off the power plug when conducting maintenance. There is a risk of electrical shock or ignition. Furthermore, an unexpected action of this product may cause an injury.
- Do not splash water for washing. There is a risk of failure or electrical shock.

Caution

The metallic parts or mechanical structure of this product has sharp edges. Pay attention to avoid hurting the hands or fingers when cleaning.

Maintenance of various components

Resin component

Conduct dry wiping using a soft, dry cloth.

For severe stains

Wipe using a soft cloth dipped in neutral detergent diluted ten times with water, then wipe with water, then wipe with a dry cloth thoroughly.

- Never use the following substances:

The volatile chemicals, such as thinner, alcohol, remover, gasoline, and kerosene, acid, alkaline or chloric detergents, antiseptic solution strongly corrosive to metals (Providone Iodine, sodium hypochlorite, etc.), waxes containing abrading agent, sponges containing abrading agent, etc.

- Do not use brushes, scrubbers, etc., for maintenance. It may leave scratches or stains.

When restarting the use of this product after not using for a certain period, clean before using. After cleaning, be sure to confirm normal operation of this product.


Maintenance

Sponge

Sponge is consumable supply.
Replace the sponge if degradation causes rubbing sound when the hose is moving. (Available at additional cost)

Remove the cover from the holder. [Page 5]

- Remove the sponge from the hose and wash with water.
- After washing the sponge with water, squeeze it like pressing with both hands.
- Clean the sponge every day.
- After cleaning the sponge, put it in the hose and put it back on the cover.

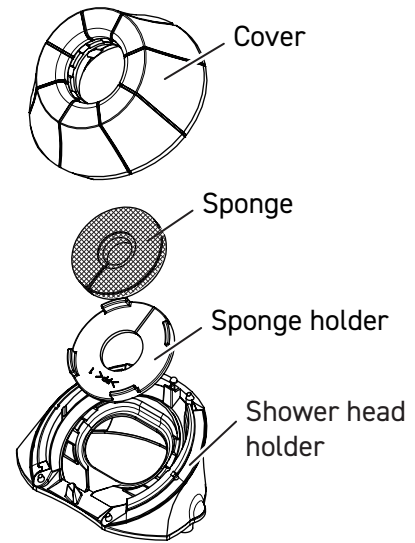

Caution

- Please keep the sponge in the net.
If the sponge protrudes from the end of the net, return it to the net.
- Do not twist the sponge as it may damage the parts.
- Be careful not to mistake the direction of the sponge.
The harder side is above.

Cover

Replace the cover if it easily comes off repeatedly when the hose is moving. (Available at additional cost)



[Replacement method]

- 1** Remove the shower head.
(The figure on the right)
- 2** Remove the cover from the shower hose.

Push the socket to remove the cover.

- 3** Install a new cover.

Tips for installation.
Put the socket into a plastic bag and push the cover to make it easier to enter.

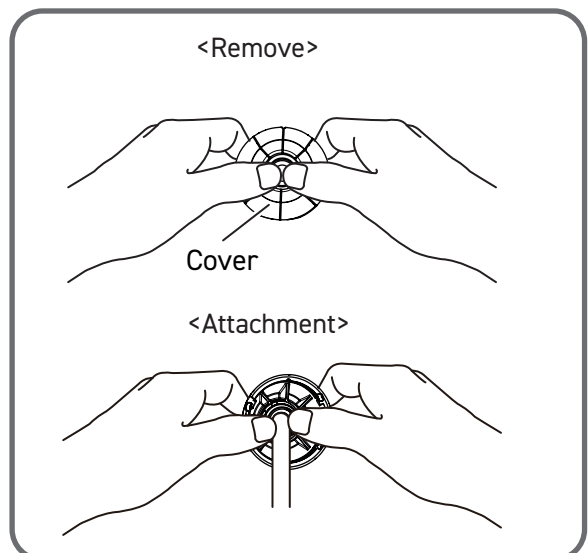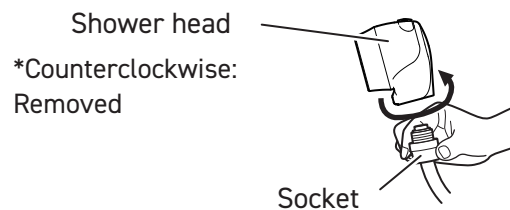

Before Requesting Repairs

If the following problems occur, check the product before asking for repairs.

| Symptom | Check this | Solution |
|---|---|---|
| The cover has come off. | Attach the cover. [Page 5] | Replace the cover if it easily comes off repeatedly when the hose is moving. |
| When the hose is moved, it makes a sound. | The sponge is protruding from the end of the net. | If there is sound even though the sponge is in the net, replace the sponge. (Available at additional cost) |
| | The surface of the shower hose has deteriorated and is rough. (The cover and shower hose rub and make noise.) | Replace the shower hose, if wiping the surface of the shower hose with a wet towel does not improve. (Available at additional cost) |

Daily Inspections

Conduct the check below for safe use of the product.

Inspect the product every day.

| Inspect item | Inspection method | If the inspection results show defects |
|--|---|--|
| There is a strange odor from shower head holder. | Check if there is a strange odor from shower head holder. | Replace the sponge, if the smell of sponge becomes a concern from outside the shower head holder. (Available at additional cost) |

Consumable Supplies

The following parts are "consumable supplies" and wear, degradation, changes in external appearance and damage are expected.

Please note that repair or replacement of these parts is not covered by warranty, and a fee will be required.

(* The level and period of wear, degradation or damage may differ depending on the environment and

Consumable supplies (the following parts are not covered by warranty, and a fee will be required)

- Sponge - Cover



TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : +81-6-6213-5945

FAX : +81-6-6212-3680

Printed in Japan