YUME DX QUICK OPERATION GUIDE






For details and safety information see the operating instructions.

https://beauty.takarabelmont.co.jp/manual-site/





EX-YM2XR : right side foot control

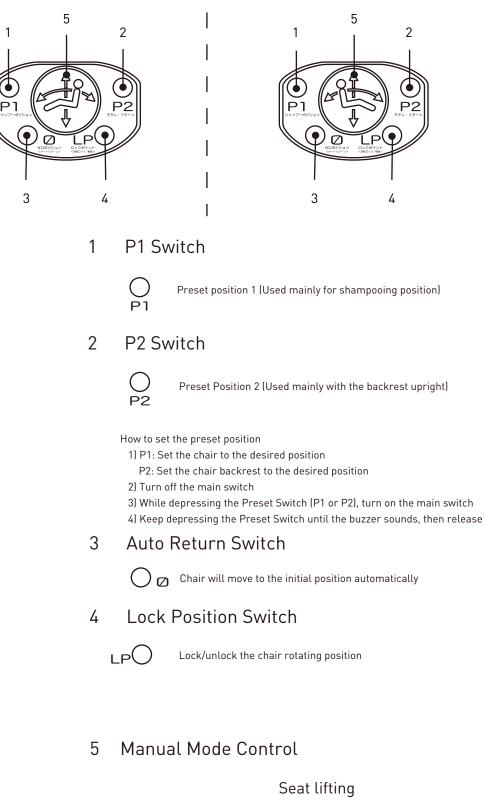


Backrest reclining



Backrest raising

Seat lowering

Legrest Switch

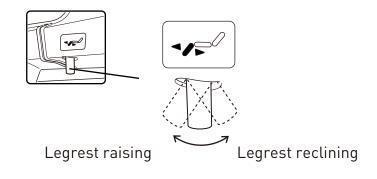


Headrest

Headrest Handle




Remove the headrest when not in use




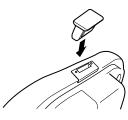


Shampoo Basin

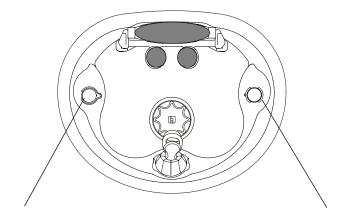

Тар

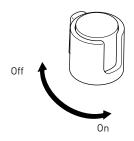


Thermostatic Control

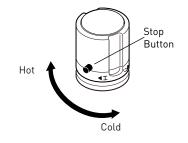


To adjust the temperature over 40 degrees, turn the knob while pressing the Stop Button

Drain Cap (Old)


Drain Cap (New)

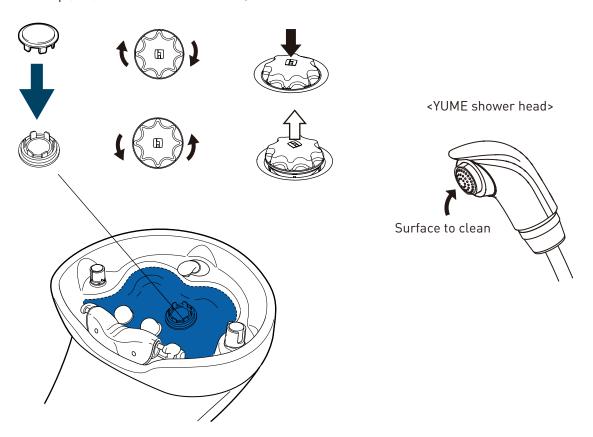


<Dual function shower head [OPTION]>

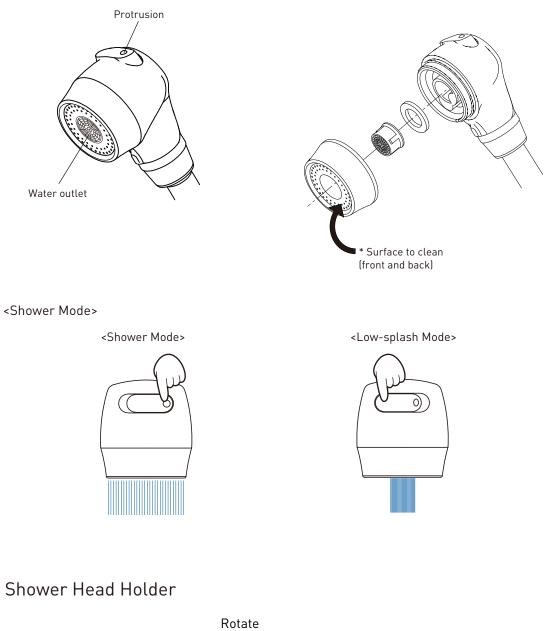


Shower head holder

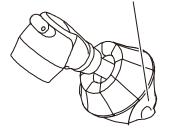


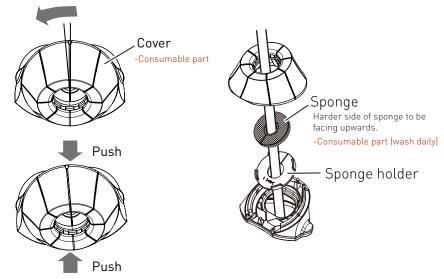


1 Attach the Neck Cushion and Head Pillow.

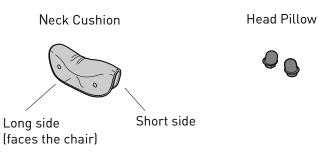


2 Attach both sides of the Neck Cushion with snap button.

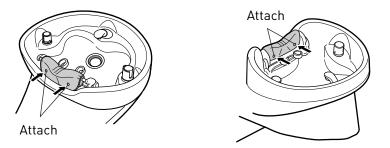


3 Attach the head pillow as shown below.

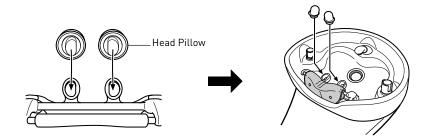

1 Turn on the power.

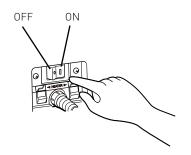


2 Press the auto return switch to bring the chair to its initial position.

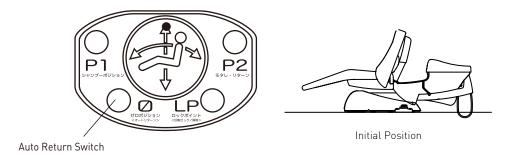


3 Instruct the customer to sit from the side, then face front.



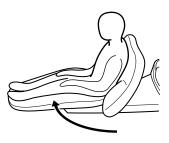

4 Press the P1 switch (or manual mode control) to bring the chair to its approximate position.

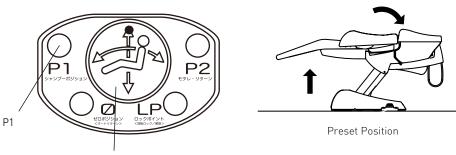



Manual Mode Control

8

5 Adjust the chair height.



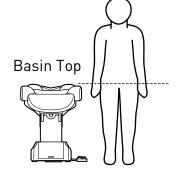

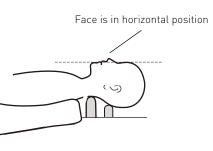


The basin top height should match the practitioner's hip



<Sitting position>

Confirm that there are no objects/people between the seat/shapoo basin and the floor when operating the chair.

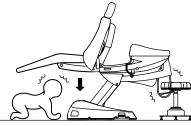

<Shampooing Style>

<Standing position>




Rear Shampoo






Side Shampoo

6 After the shampooing, return the chair to its initial position.

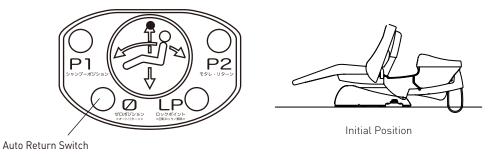

7 Wipe off the remaining water after use.

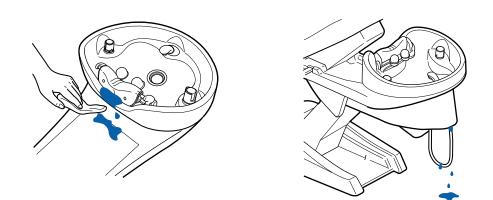

8 Clean the consumable parts.

Neck Cushion

Head Pillow




00


Drain Cap

Hair Catcher




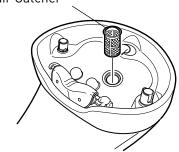


1 Press the P2 switch to bring the backrest to its upright position.

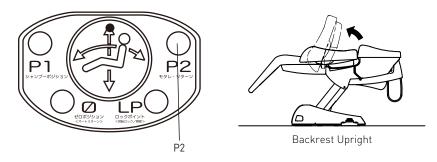


2 Press the lock position switch to unlock the chair rotation.

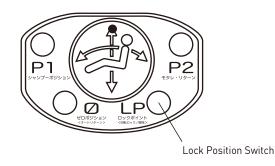

 
The chair lock will not release when the backrest is within 30 degrees.



- Rotate the chair to the desired position by gently holding onto the backrest
 ⇒ A clicking sound can be heard at the
 - ⇒ A clicking sound can be heard at the 60 and 90 degrees point

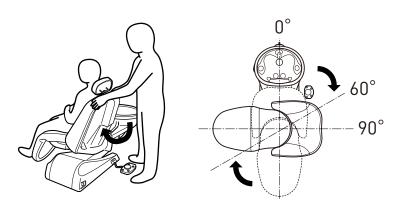


4 Press the lock position switch to lock the chair rotation.

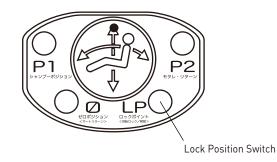



Confirm that there are no objects/people in the way when rotating the chair.

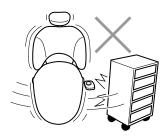

5 When finished, unlock the chair to return it to its initial position (0 $^{\circ}$), and lock.

