




YUME NAGOMI (iXi) Replacement piping kit / replacement piping cover Installation Instruction

- Piping kit
 - EA-YMIXIPKH [Yume Nagomi (iXi) replacement piping kit H]
 - EA-YMIXIPKL [Yume Nagomi (iXi) replacement piping kit L]
- Piping cover
 - EA-YMIXIPC [Yume Nagomi (iXi) replacement piping cover]

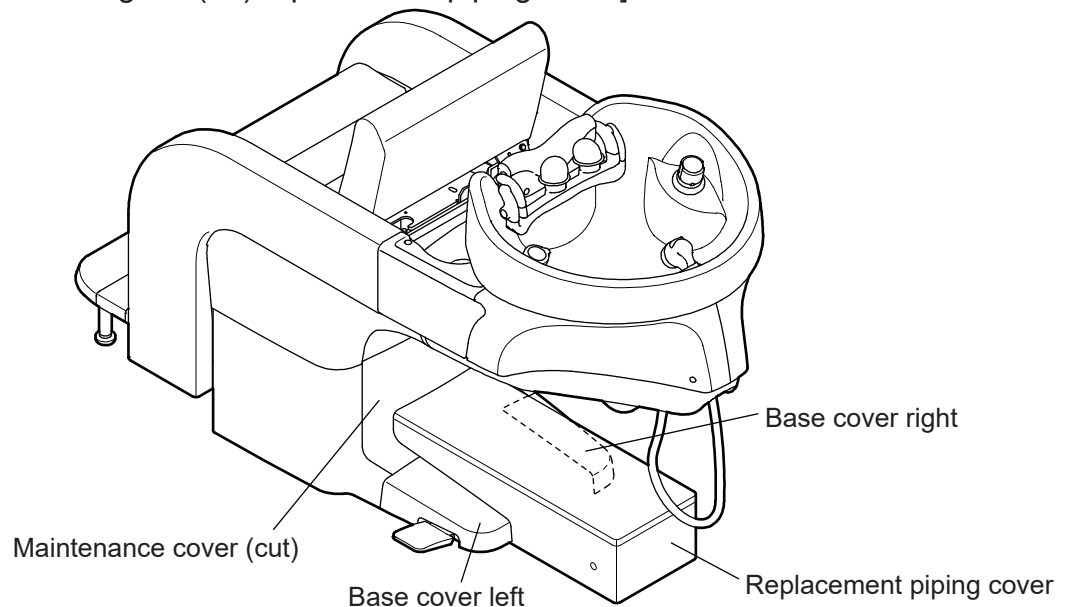


Note: This instruction is a supplementary instruction that is used only when replacing Rear Shampoo or NRS wash unit with Yume Nagomi (iXi) wash unit. Follow the “Yume Nagomi (iXi) Installation Instruction” for installation of the wash unit.

■ Content of packaging

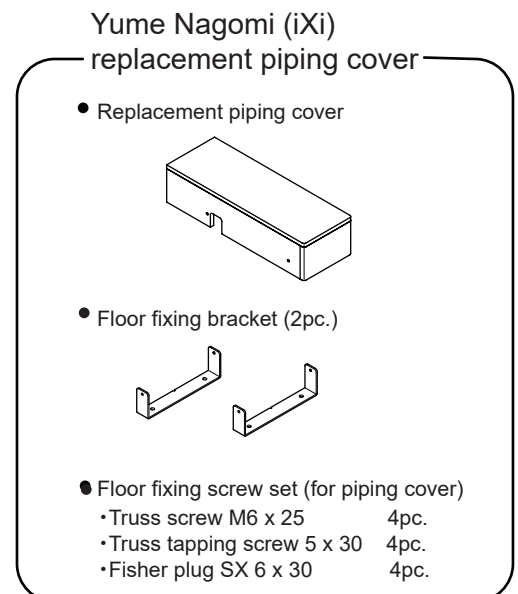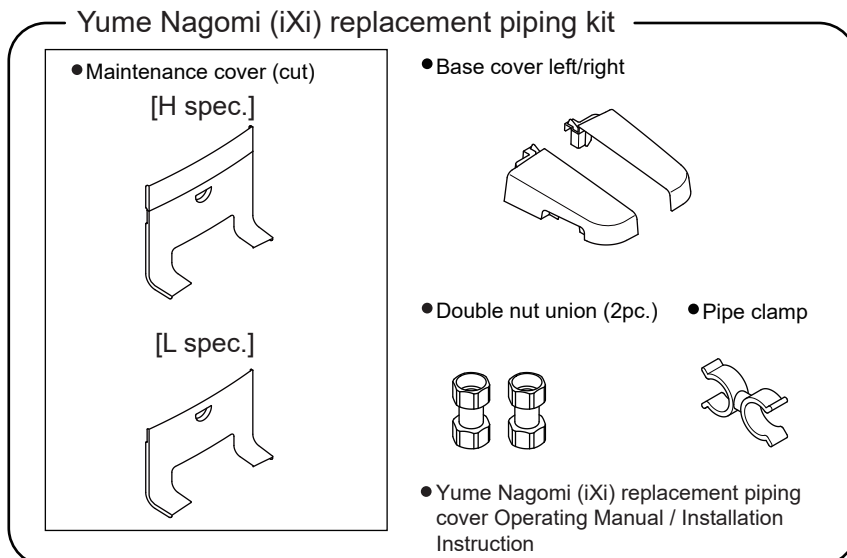

■ Overall layout diagram


The top surface of the replacement piping cover is not horizontal. The top of the Yume Nagomi (iXi) has a slope to prevent water from adhering to the top. (The right side of this figure is lowered.)

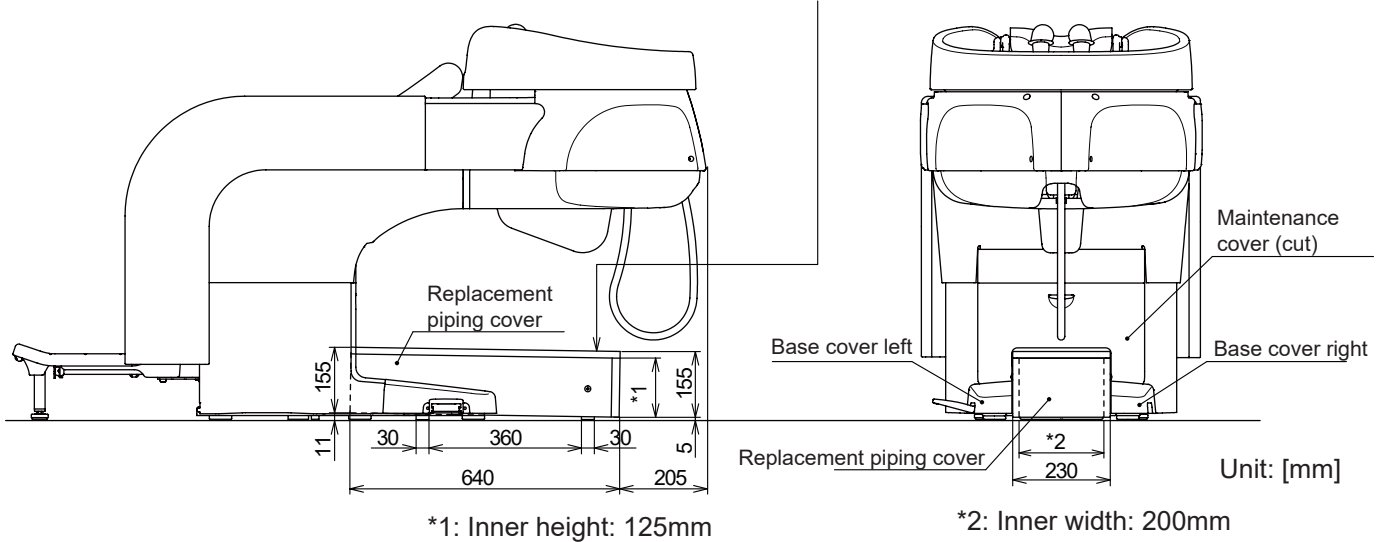

Refer to Yume Nagomi (iXi) Installation Instruction for Yume Nagomi (iXi) dimensions.


■ Installation procedure

(1) As shown in the figure, the first floor fixing bracket should be placed along the base frame bracket of Yume Nagomi (iXi), aligned with the center of the product, and temporarily placed. Next, place the second floor fixing bracket 360 mm away from the first floor fixing bracket as shown in the figure, align the center of the product, and place it temporarily.

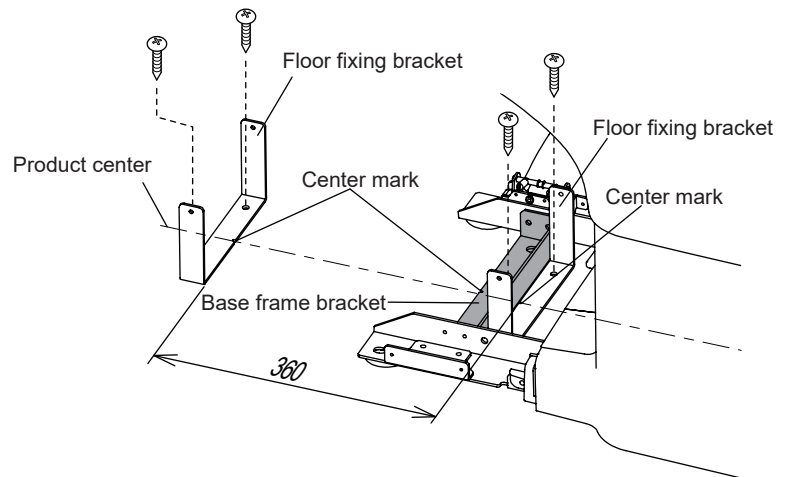


(2) Secure the floor fixing bracket to the floor using the four included screws (5 x 30 Truss tapping screws). If the floor is concrete, use the included fisher plug (SX6 x 30).


● Fisher plug installation procedure (if the floor material is not wood)

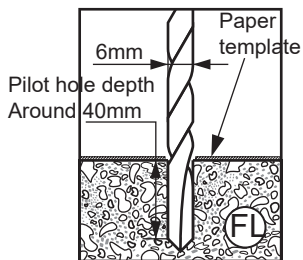


(1) Drill a pilot hole to the specified diameter and depth.

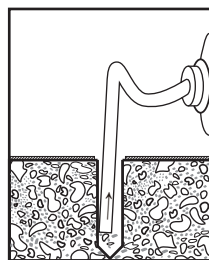

(2) Remove the chips in the hole by sucking them with a suction device etc.

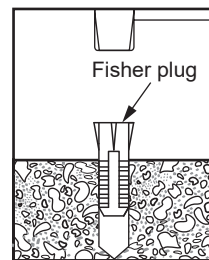

(3) Insert the fisher plug and hammer it in until it is fully inserted.

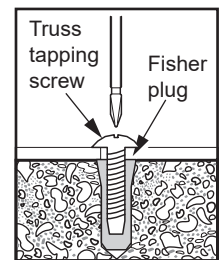


(4) Align the mounting hole positions on the caster rails and install the truss tapping screws.

(3) Put the packing in the check valve, and attach both nut unions and the water stopper.

After that, follow the instructions on pages 8 and 9 of the Yume Nagomi (iXi) Installation Instruction to install the piping.

- Please note that hot water and hot water are reversed in RS1 and NRS.
- Be careful that the flexible tubes do not come into contact with each other. It may cause poor temperature control.
(Please use the included pipe clamp.)
- Be careful not to let the flexible pipe contact other parts. It may cause noise.
(Please use the included pipe clamp.)


Note: Parts marked with * are not included in the package. Please prepare according to the construction situation at the site.

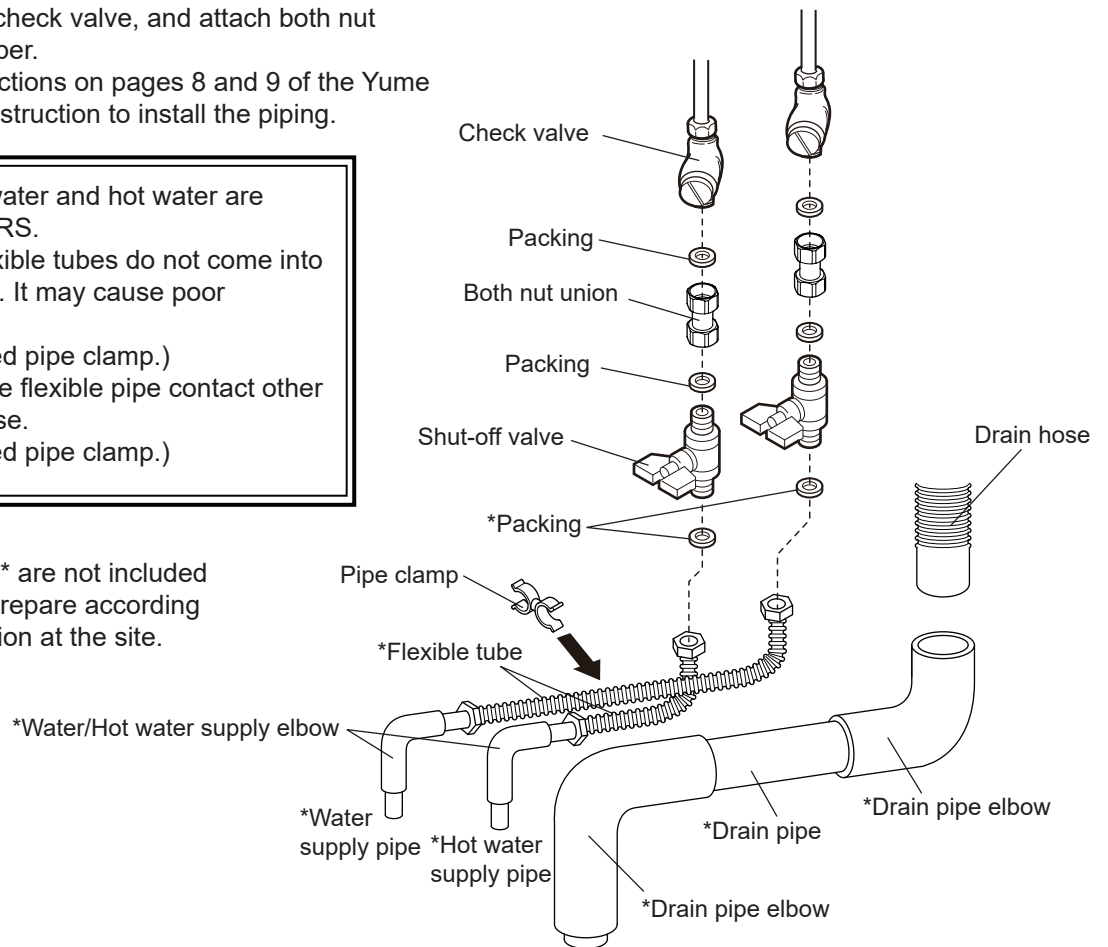


(4) Place the replacement piping cover on the floor fixing bracket slowly, and fix it with the included four screws (truss screw black M6 x 25).

(5) Fix the base cover left and the base cover right with the included six screws (truss screw black M4 x 10).

When fixed with screws, the top surface of the replacement pipe cover will not be horizontal. The top of the Yume Nagomi (iXi) has a slope to prevent water droplets adhering to the top from flowing into the body of the Yume Nagomi (iXi).
(The front of this figure is lowered.)

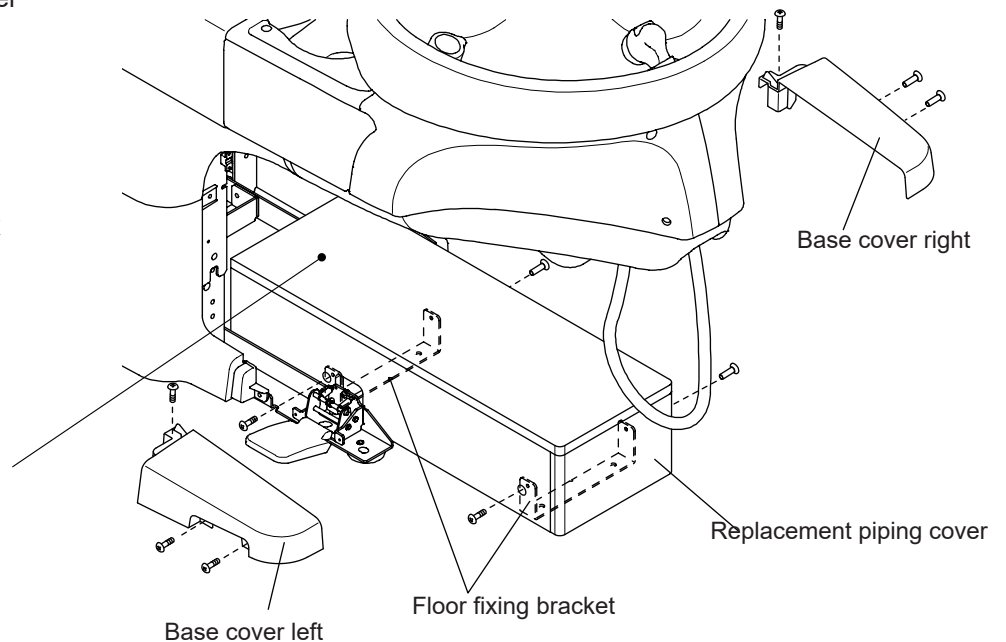

(6) Attach the maintenance cover (cut) with magnets (two places).

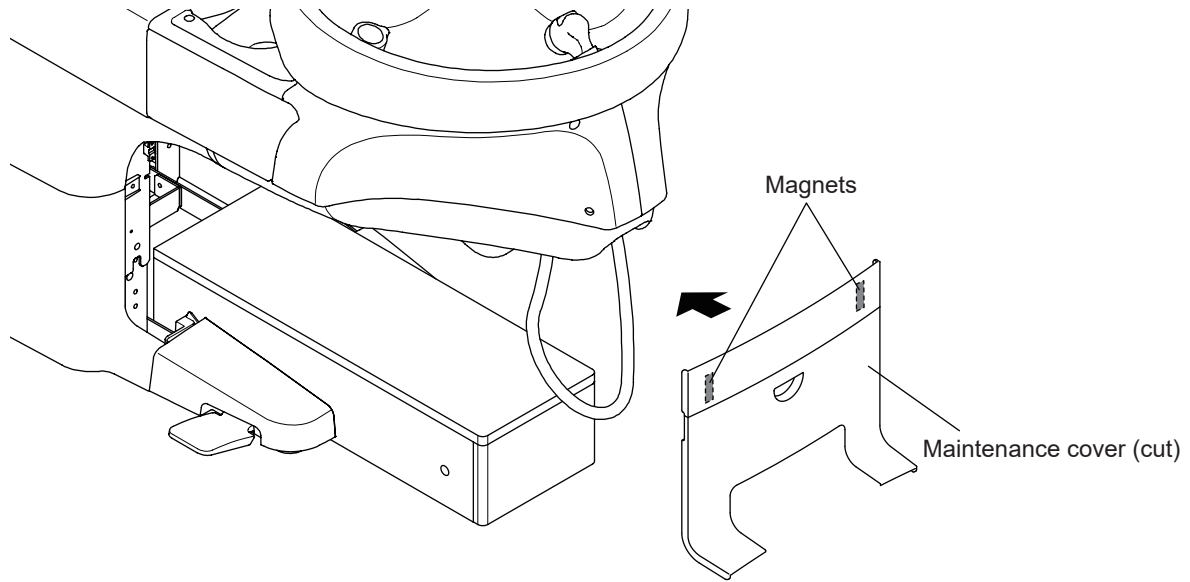

**TAKARA
BELMONT**

TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : (06) 6213-5945

FAX : (06) 6212-3680

Printed in Japan

1E03U9A0(Order No)