


Precautions for mounting YUME NOBLE

When the gap between backrest and basin is narrow

Fasten with the bottom hole

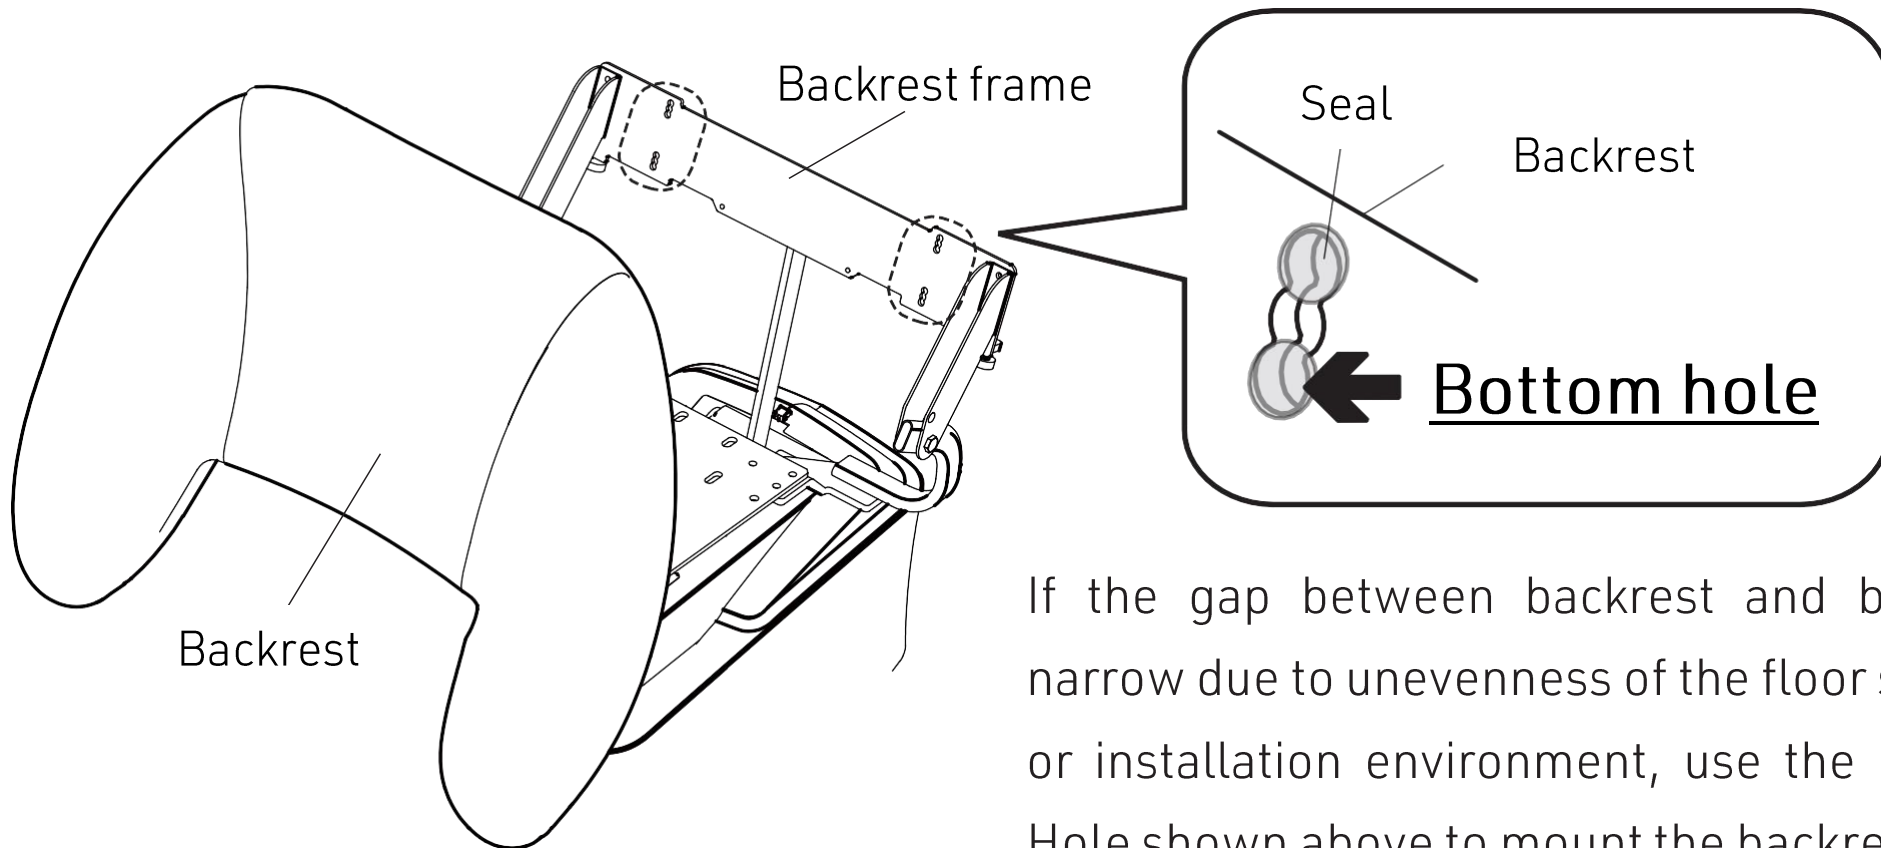

If the gap between backrest and basin is narrow due to unevenness of the floor surface or installation environment, use the Bottom Hole shown above to mount the backrest.