

# YUME ESPOIR

## QUICK OPERATION GUIDE






For details and safety information  
see the operating instructions.


<https://beauty.takarabelmont.co.jp/manual-site/>



Seat lowering switch | Seat lifting switch

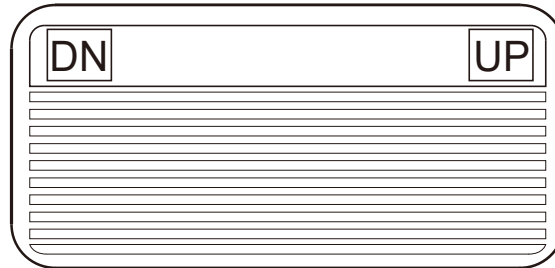

- Seat lifting switch      Press one second or longer for preset position  
                                 Press one second or less for manual mode
- Seat lowering switch    Press one second or longer for initial position  
                                 Press one second or less for manual mode

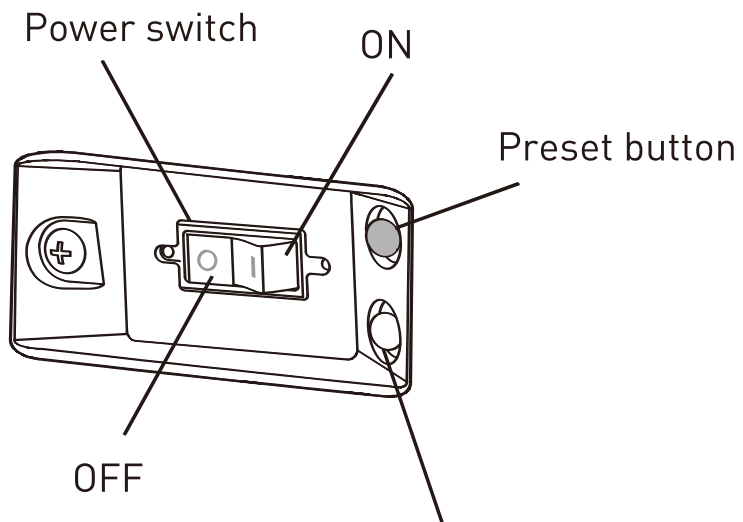


**Do not use this button**


How to set the preset position

- 1) Set the chair to the desired position
- 2) Turn off the power switch
- 3) While depressing the Preset Button, turn on the power switch
- 4) Keep depressing the Preset Button until the buzzer sounds, then release


### Shampoo Basin

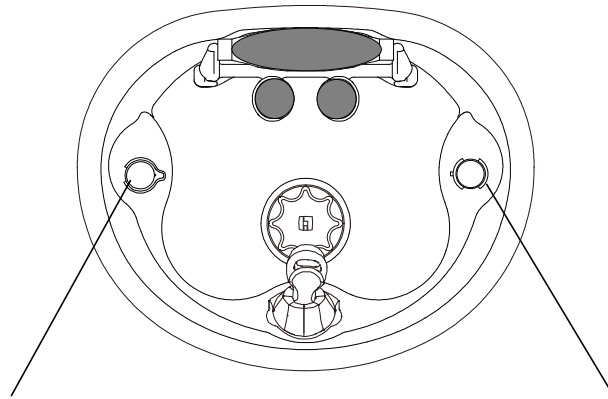

Tap

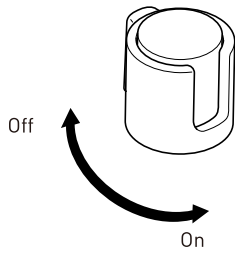


Thermostatic Control

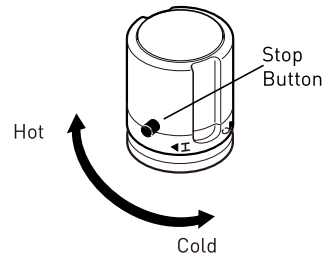


To adjust the temperature over 40 degrees, turn the knob while pressing the Stop Button

Drain Cap

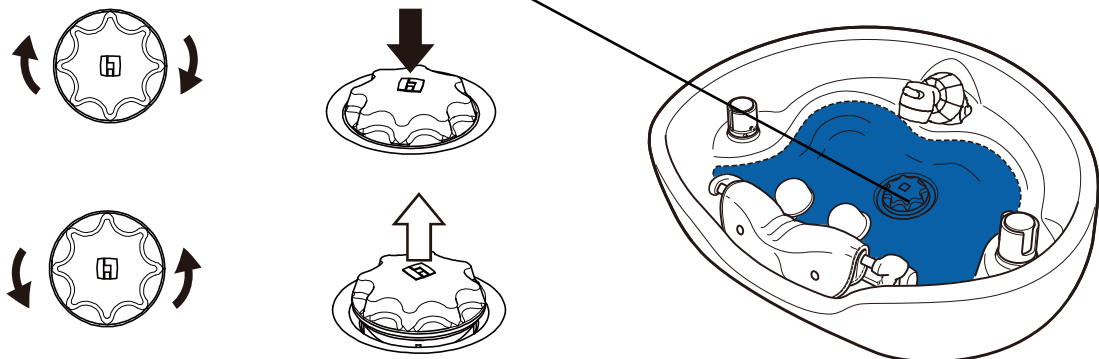

# 3 Dual Function Showerhead

## <Dual Function Showerhead>

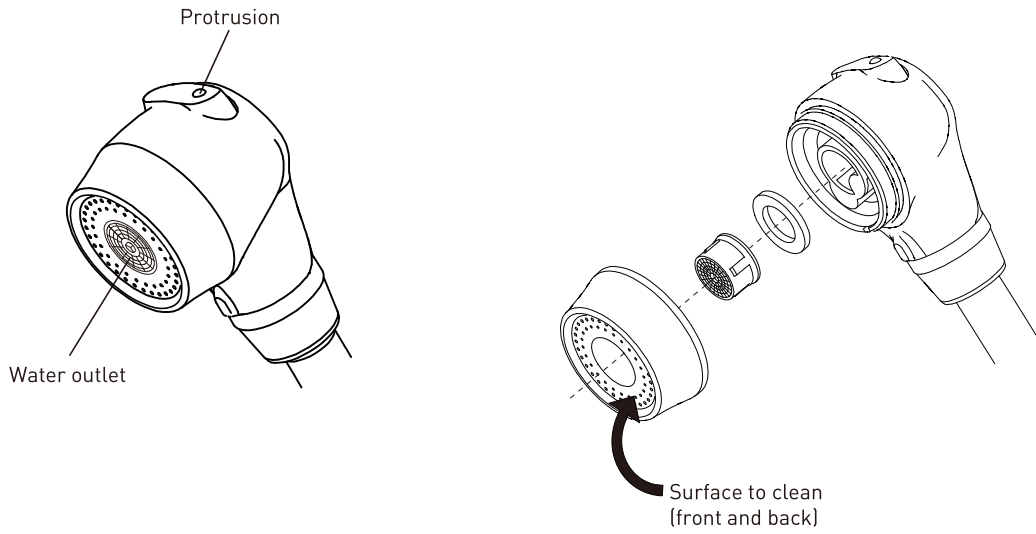


## <Shower Mode>

### <Shower Mode>




### <Low-splash Mode>

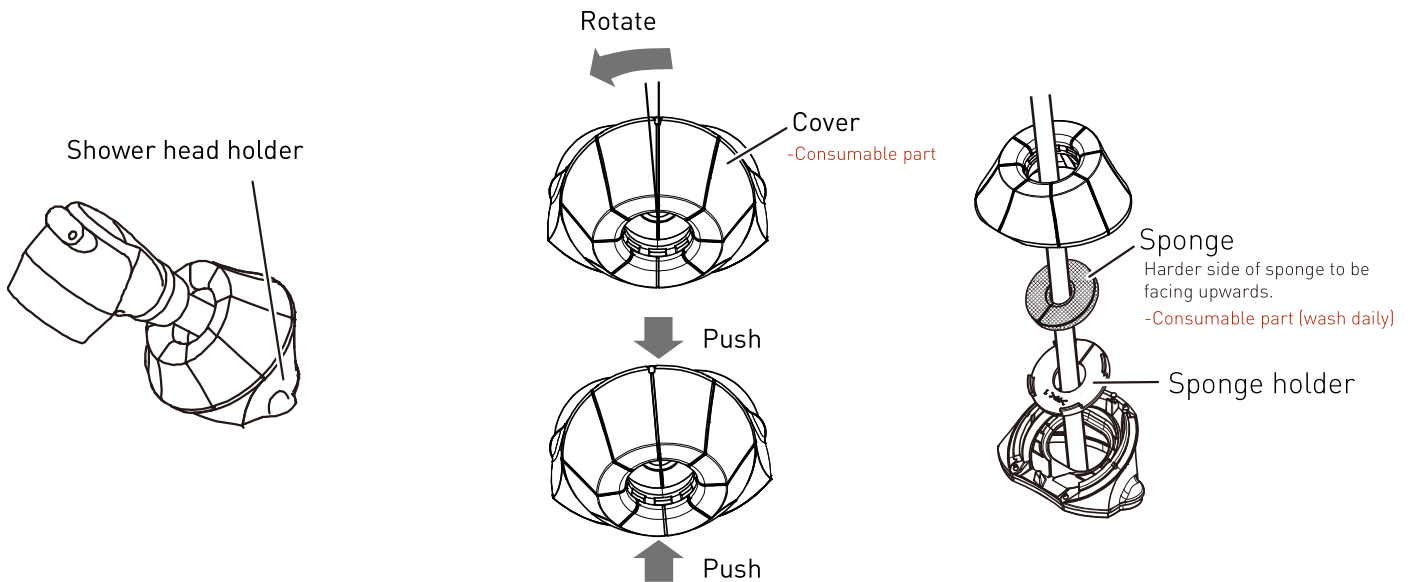


Back wash basin (YUME basin)


- 1 Attach the Neck Cushion and Head Pillow.

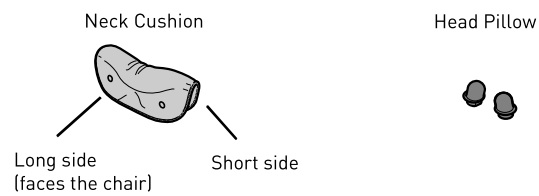


- 2 Attach both sides of the Neck Cushion with the snap button.

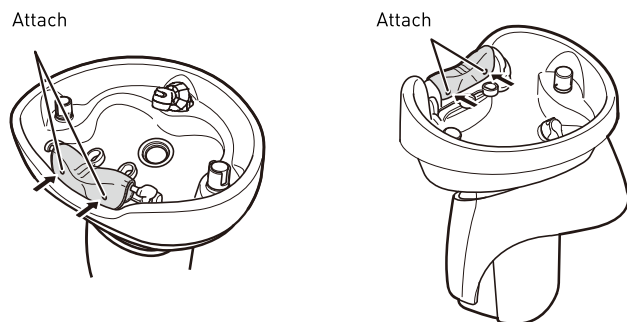



- 3 Attach the Head Pillow as shown below.

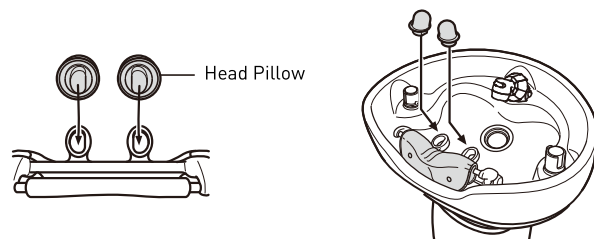

- 1 Turn on the power.

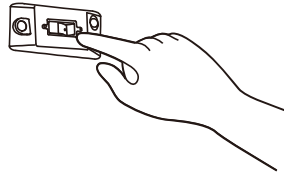



- 2 Press the seat lowering switch for 1 second or longer to bring the chair to its initial position.

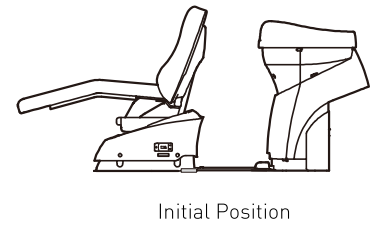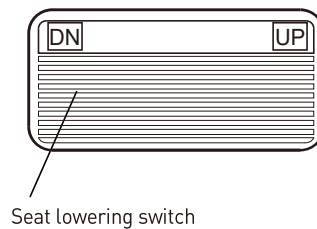

- 3 Instruct the customer to sit from the side, then face front.




- 4 Press the seat lifting switch for 1 second or longer to bring the chair to its preset position.

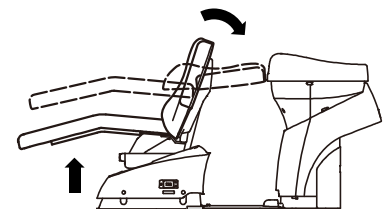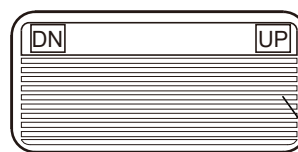

Seat lifting switch




5 Adjust the chair height.

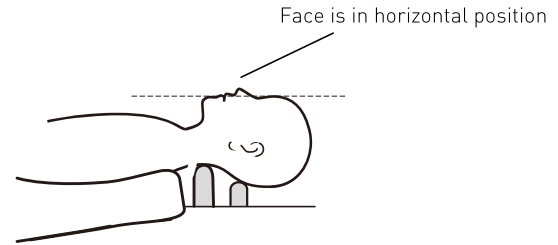

 **CAUTION**

Confirm that there are no objects/ people between the seat and the floor when operating the chair.

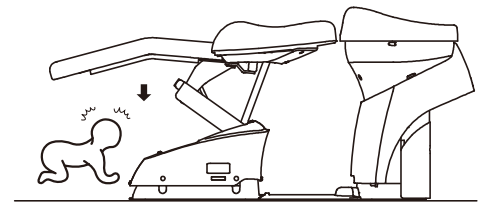


<Shampooing Style>


Back wash shampoo  
(seated)



- 6 After the shampooing, return the chair to its initial position.


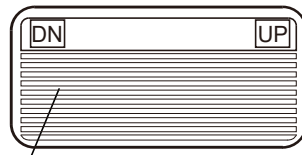


Seat lowering switch

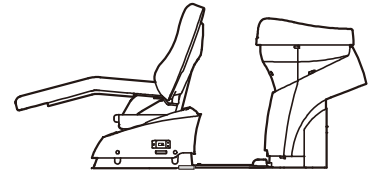


Initial Position

- 7 Wipe off the remaining water after use.

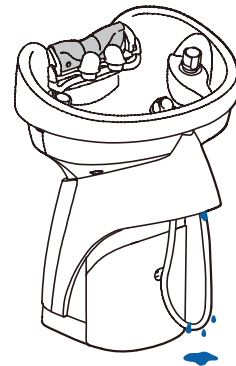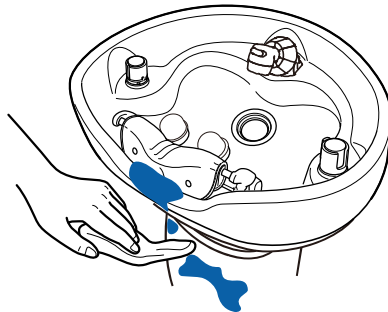

- 8 Clean the consumable parts.

Neck Cushion




Head Pillow



Drain Cap



Hair Catcher

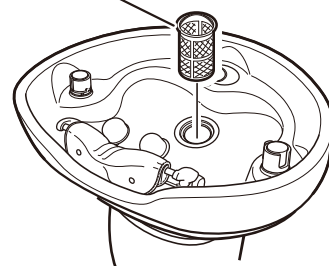





**TAKARA BELMONT CORPORATION**

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL : 81-6-6213-5945

FAX : 81-6-6212-3680

