


# YUME ESPOIR

## QUICK OPERATION GUIDE




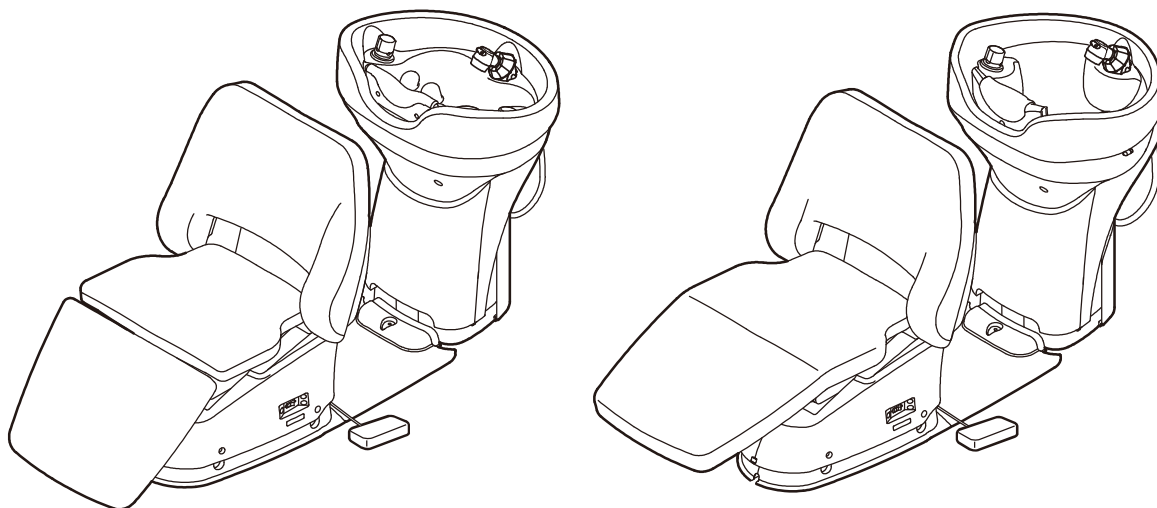


For details and safety information  
see the operating instructions.

<https://beauty.takarabelmont.co.jp/manual-site/>



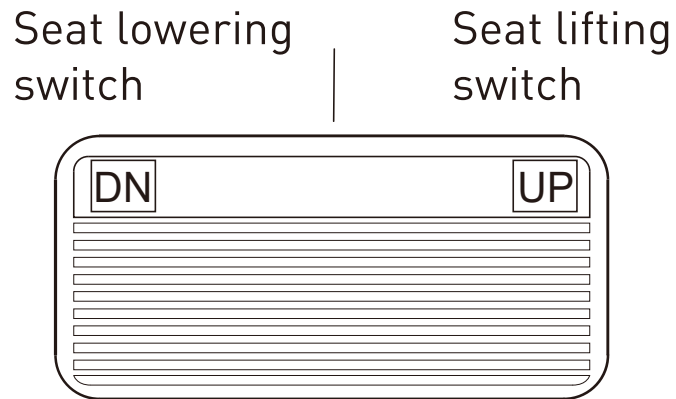

- Seat lifting switch      Press one second or longer for preset position  
                                 Press one second or less for manual mode
- Seat lowering switch    Press one second or longer for initial position  
                                 Press one second or less for manual mode

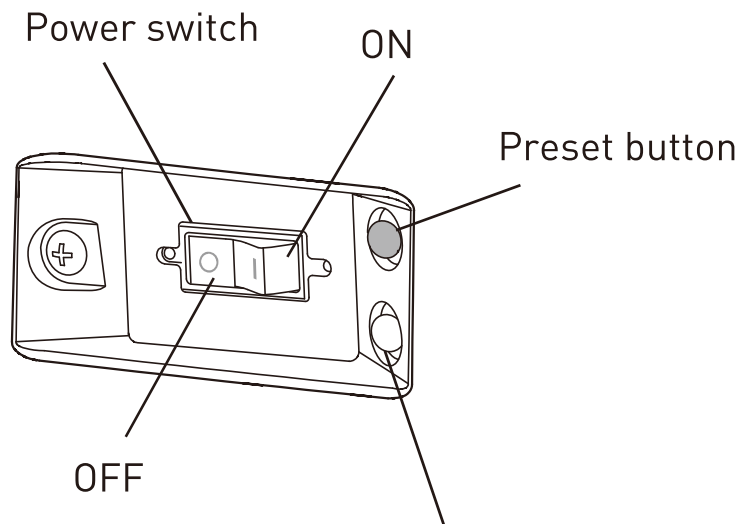


**Do not use this button**


How to set the preset position

- 1) Set the chair to the desired position
- 2) Turn off the power switch
- 3) While depressing the Preset Button, turn on the power switch
- 4) Keep depressing the Preset Button until the buzzer sounds, then release


### Shampoo Basin

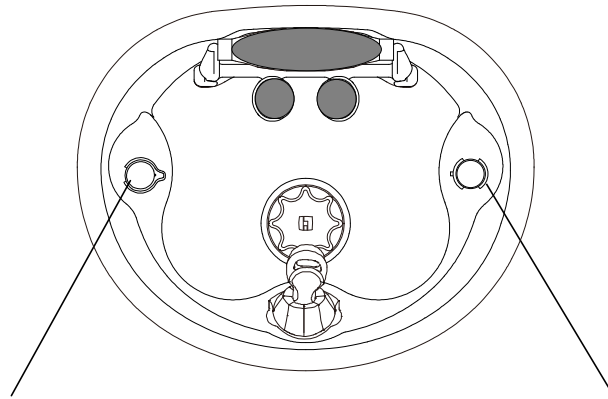

Tap

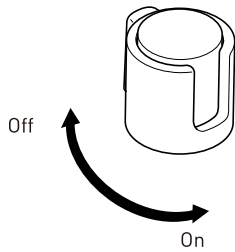


Thermostatic Control


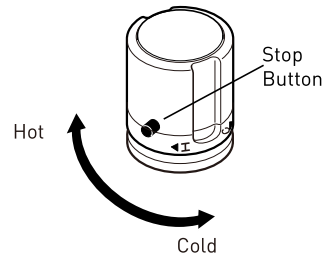


To adjust the temperature over 40 degrees, turn the knob while pressing the Stop Button.

Drain Cap



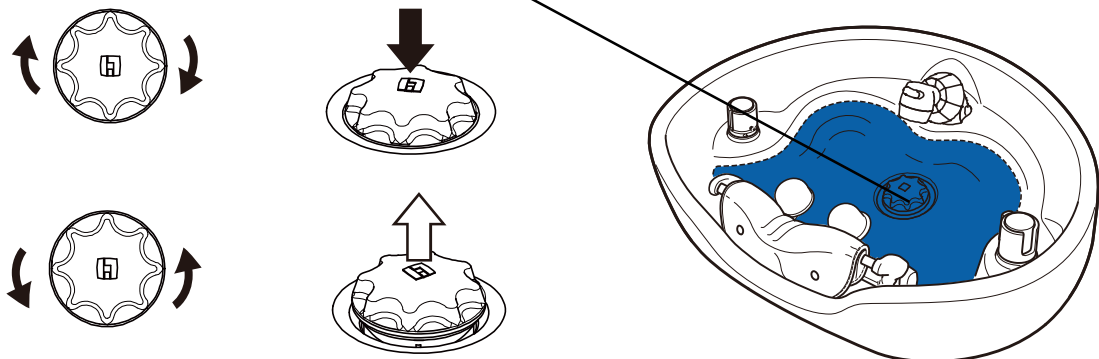


## 2 Shampoo Basin/Shower Head

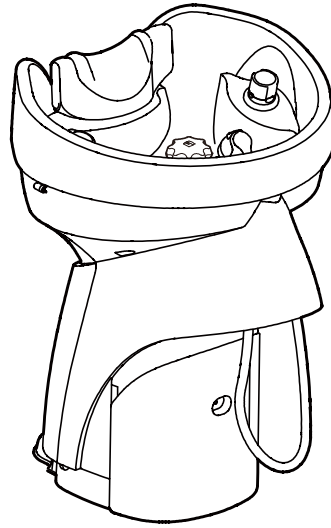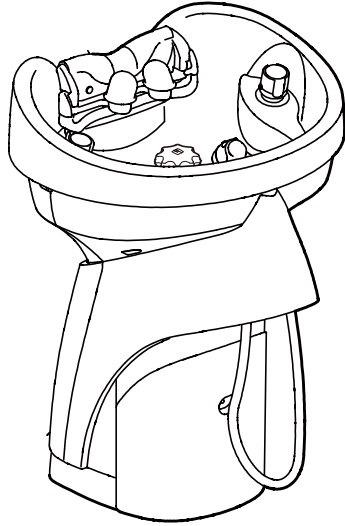


<YUME shower head>

<Side shower head>

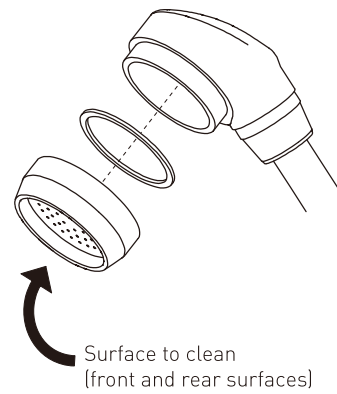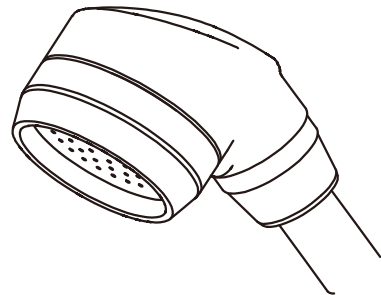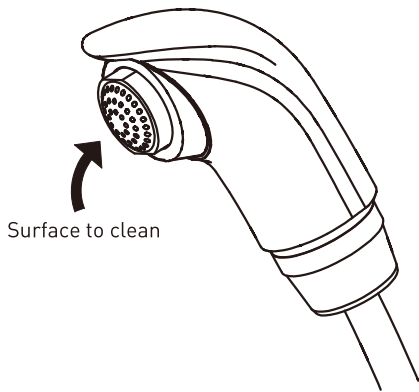

# 3 Dual Function Showerhead

<Dual Function Showerhead [OPTION]>

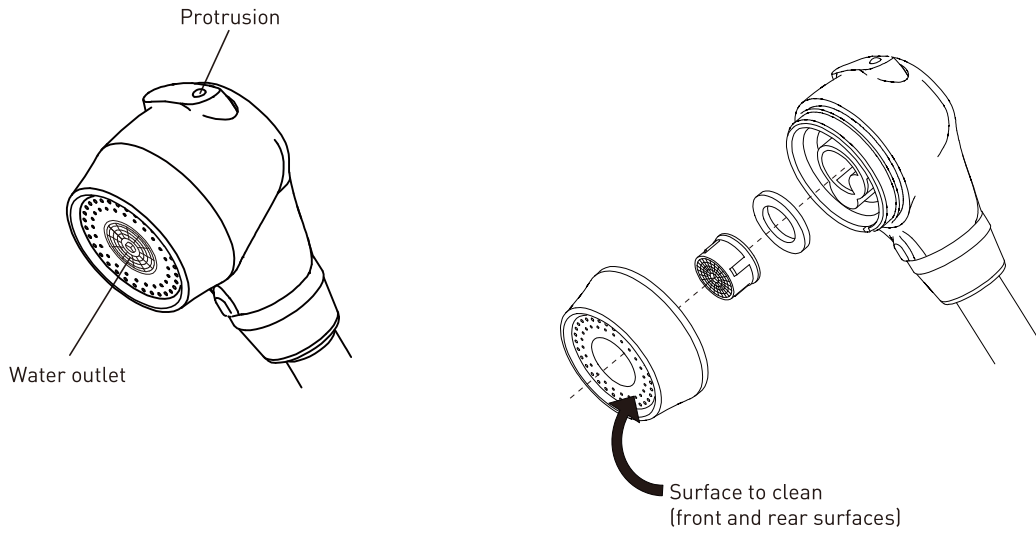


<Shower Mode>

<Shower Mode>




<Low-splash Mode>

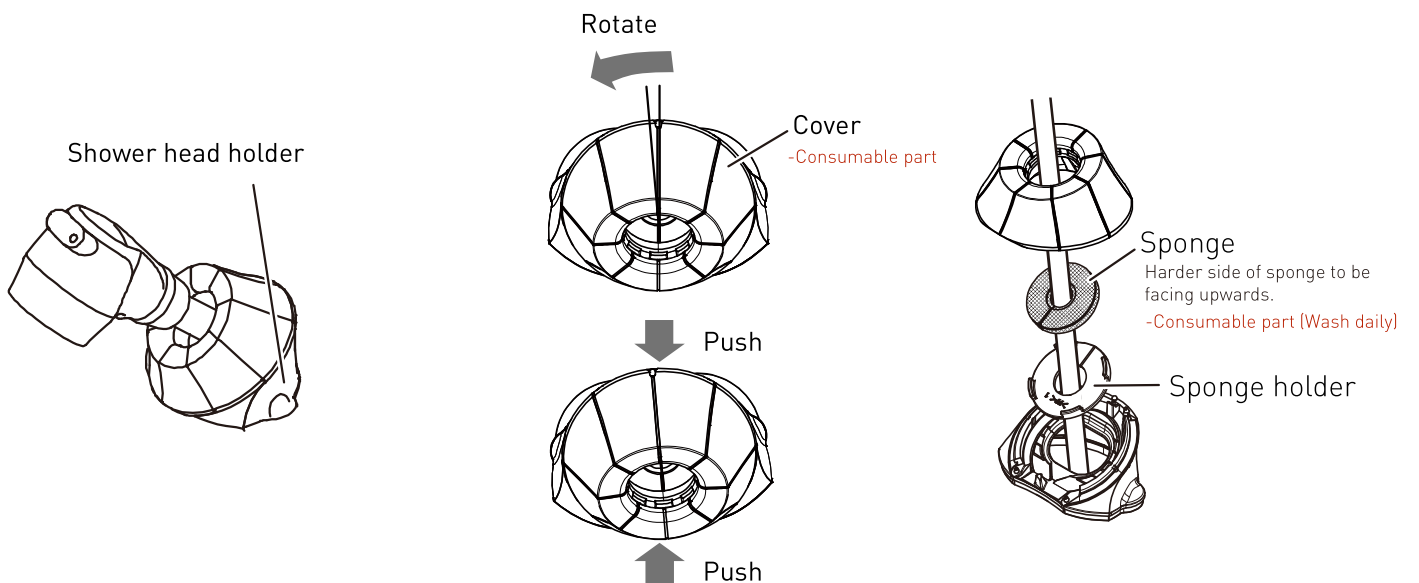


Back wash basin (YUME basin)


- 1 Attach the Neck Cushion and Head Pillow.

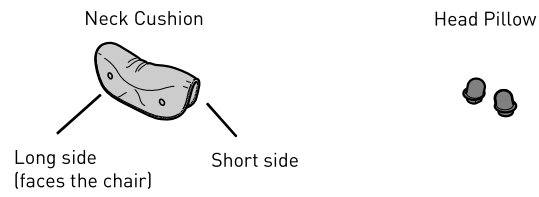

- 2 Attach both sides of the Neck Cushion with the snap button.

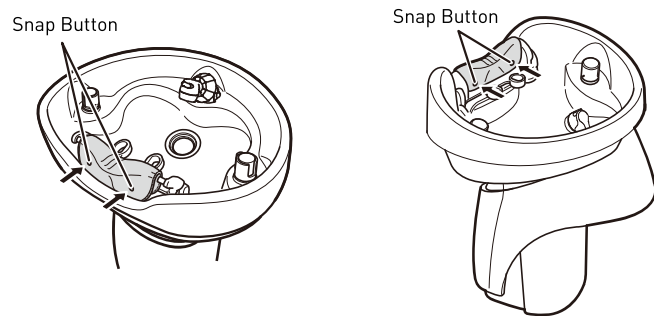


- 3 Attach the Head Pillow as shown below.

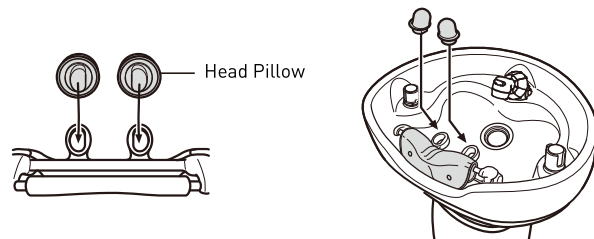


Side wash basin

- 1 Attach the Neck Cushion.


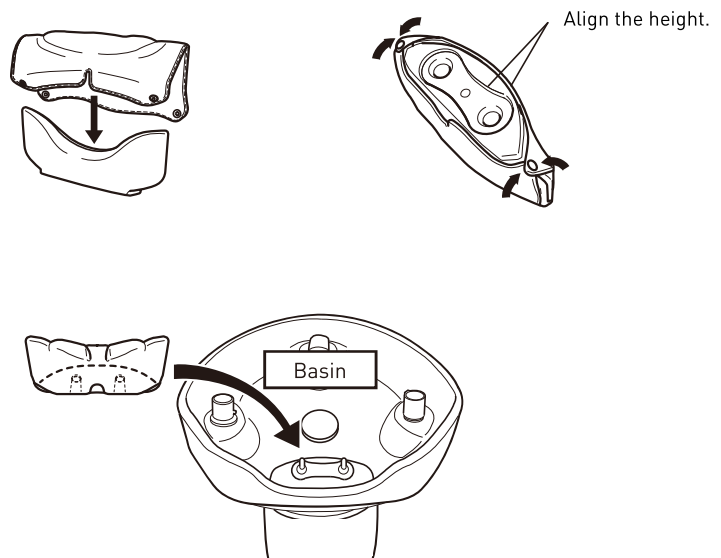





- 1 Turn on the power.

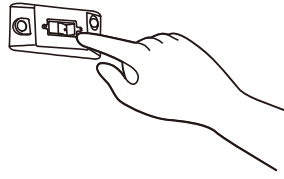



- 2 Press the seat lowering switch for 1 second or longer to bring the chair to its initial position.

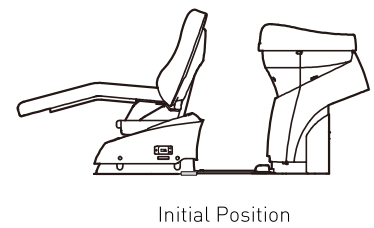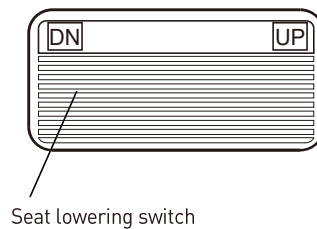

- 3 Instruct the customer to sit from the side, then face front.

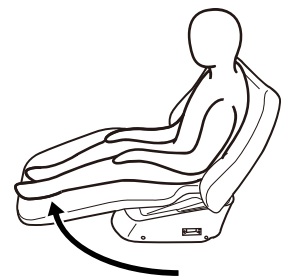

- 4 Press the seat lifting switch for 1 second or longer to bring the chair to its preset position.

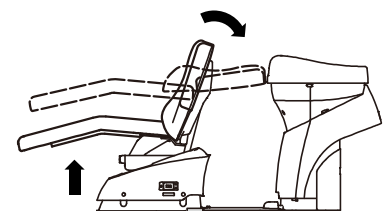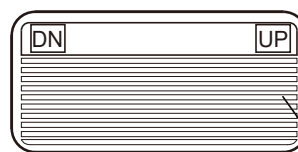


Seat lifting switch

5 Adjust the chair height.


<Back wash>

<Side wash>

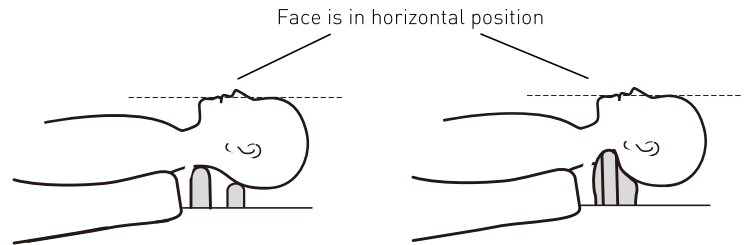

 CAUTION

Confirm that there are no objects/ people between the seat and the floor when operating the chair.

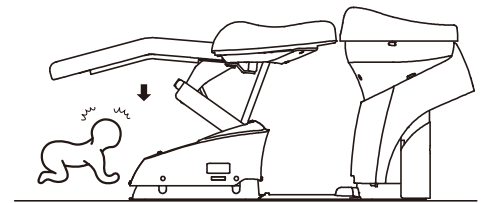

<Shampooing Style>



Back wash shampoo  
(seated)



Side wash shampoo  
(standing)





- 6 After the shampooing, return the chair to its initial position.

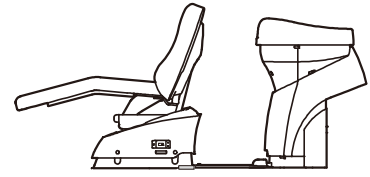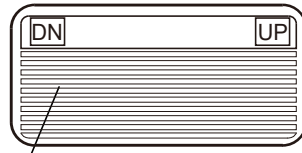


Initial Position

- 7 Wipe off the remaining water after use.

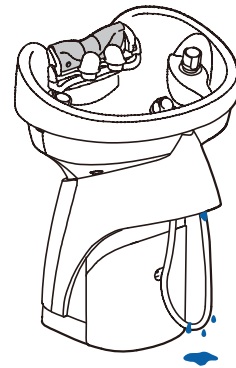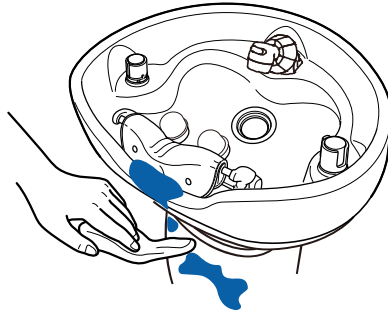

- 8 Clean the consumable parts.


Neck Cushion



Head Pillow




Neck Cushion (Side Basin)

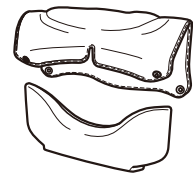

Drain Cap



Hair Catcher

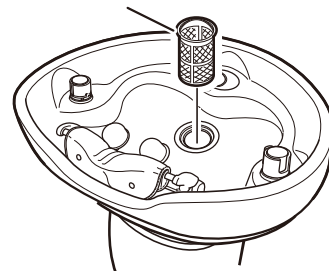



**TAKARA BELMONT CORPORATION**

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL : 81-6-6213-5945

FAX : 81-6-6212-3680

