
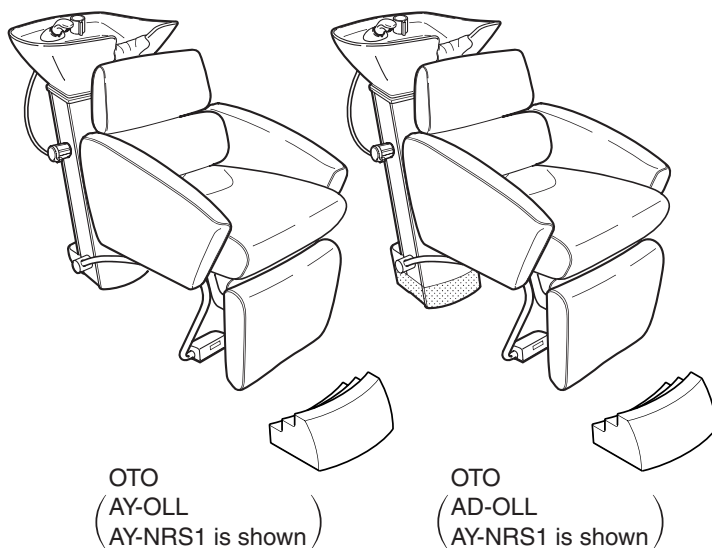


NRS

NRS Operation Manual

Standard / EU Spec.

Chair mount type

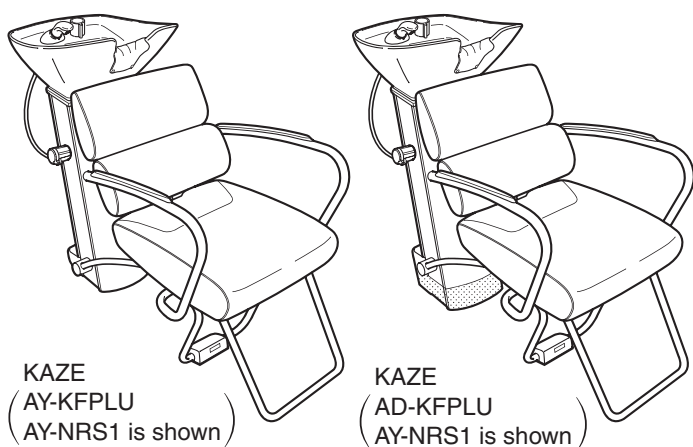

Separate type

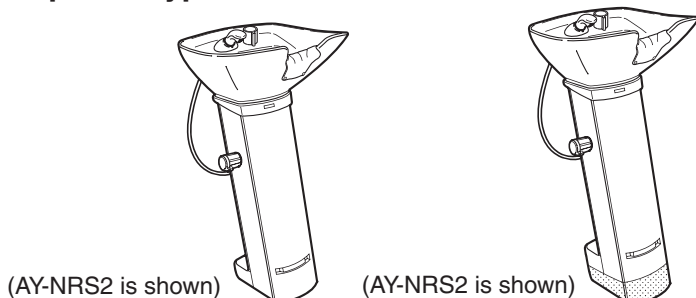


Table of Contents

General safety instructions	2
NOTES FOR USE	3
Name of each part (Standard spec.)	4
Position of Warning label (Standard spec.)	4
Name of each part (EU spec.)	5
Position of Warning label (EU spec.)	5
How to attach neck cushion	6
How to use	7
How to care	13
Before asking repair	15
SPECIFICATION (Standard spec.)	16
SPECIFICATION (EU spec.)	17
MEMO	18

Thank you for purchasing our TAKARA BELMONT product.

Please read through this manual carefully before use for using this product correctly and safely.

After reading, keep this operation manual in a safe place for your future reference.

General safety instructions (Be sure to observe)

■Before use

Please read through this "General Safety Instructions" and use this product correctly.

This operation manual contains important information to avoid personal injuries, or property damages against you or your clients by using this product correctly. All instructions are important for safety operation. Please be sure to observe them.

■Definition of markings



WARNING

This mark warns the user that "improper use may cause death or severe personal injuries".



CAUTION

This mark warns the user that "improper use may cause personal injuries or material damages".



This mark indicates that the user must be ALERT against a possible danger.



This mark indicates what the user MUST DO to prevent accidents.



This mark indicates what the user SHOULD NOT DO.




WARNING




Do NOT ride on the bowl, and the backrest, the armrest, etc. of the chair.

Do not ride, pull, nor apply excessive weight on the bowl, and the backrest, the armrest, the footrest, the leg rest, etc. of the chair. This may cause breakage or damage of the product or lead to a fall accident.

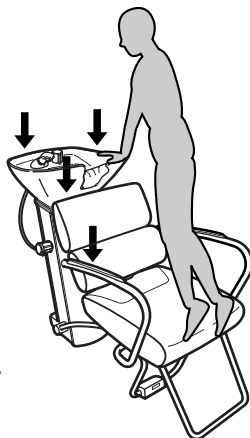

Do NOT insert your finger or hand into the moving part.

Be sure not to insert your finger or hand in the moving part of the chair. Serious injury may occur by pinching.

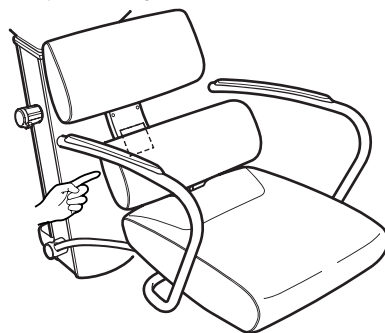

DO NOT
disassemble

Do NOT attempt to repair the unit by yourself.

Do not attempt to disassemble or repair the equipment on your own. To do so might cause malfunction or collapse accident. Contact our service person for disassembling or repairing.



CAUTION
high
temperature

Do NOT use hot water of 60°C or more.

Using hot water of 60°C or higher may deform or damage the ceramic bowl, the shower head, the faucet handle, etc.



CAUTION



Do NOT drop heavy things on the bowl.

Do not drop or place a heavy thing on the bowl. This may cause scratch or crack on the product.



Do NOT touch the mixing pipe.

Be sure not to touch the mixing pipe. The mixing pipe gets very hot when in operation. Touching the pipe may cause a burn.



Do NOT bump a thing on the product

Do not bump a hard thing on the product. This may cause deformation or breakage of the product.




Do NOT stand on the footrest.

Do not stand on the footrest. There may be a possibility of tumbling.



Do not water the pull-out port of the shower hose.

Avoid water from entering the pull-out port of the shower hose. This may cause leakage.

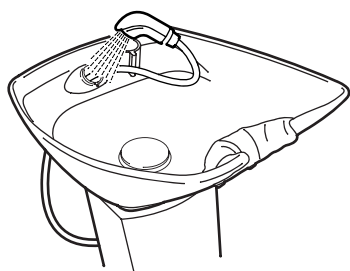

Do NOT drink the hot water.

This product is for the purpose of shampooing. Be sure not to drink hot water of the shower. This may cause diarrhea or stomachache depending on the quality of water.



Do NOT use for the purpose other than hair dressing.

This is a product for the purpose of hair dressing. Be sure not to use the other purposes than hair dressing.

NOTES FOR USE



CAUTION



Take measures for discharging water when using the equipment in a cold district

Be sure to take measures against freezing by opening the rear cover when using the equipment in a cold district. The frozen pipes may result in leakage.



Remove chemical immediately after it attached

If chemical such as hair dye attached to the equipment, wipe it out immediately. This may cause discoloration or deterioration.




Do NOT use strong chemical detergent

Do not use chemical detergent mainly including caustic soda (NaOH) caustic potash (KOH) for cleaning pipes etc. This may cause damage on the drain hose, etc.




Do NOT use with the plating peeled off

If the plating of the faucet metal fittings (faucet handle, shower head, temperature adjusting knob) is peeled off, if partially, please contact our service centers or our sales offices for replacement. Using them with the plating peeled off may cause injuries.

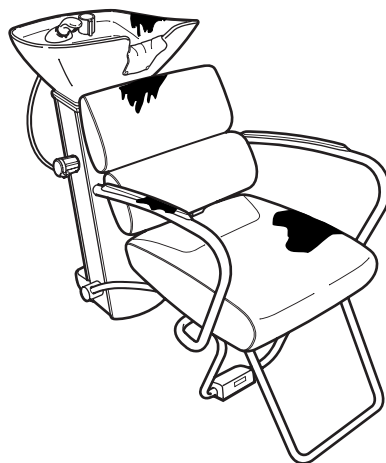


Name of each part (Standard spec.)



Chair mount type KAZE

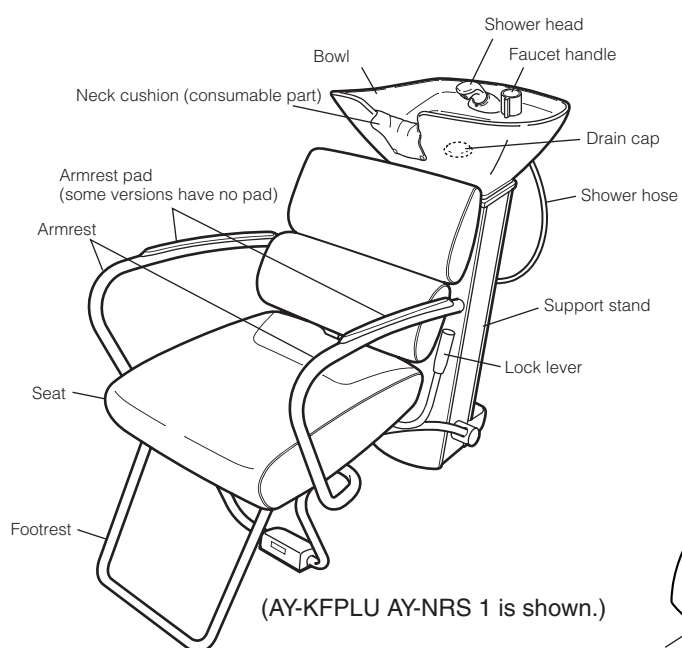

OTO

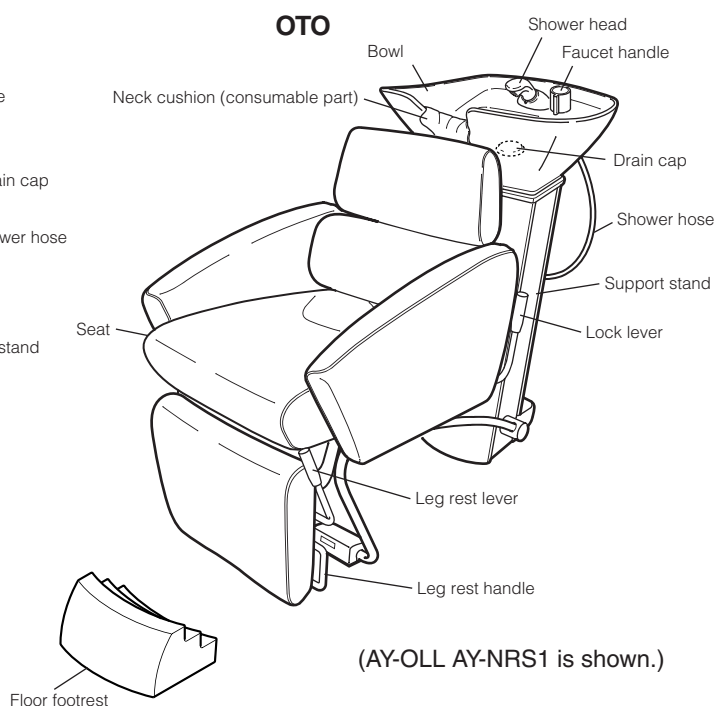




Separate type

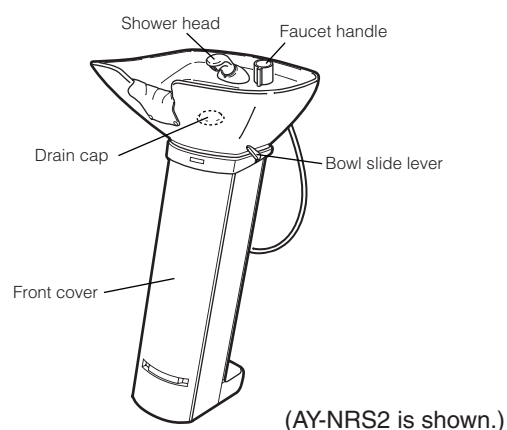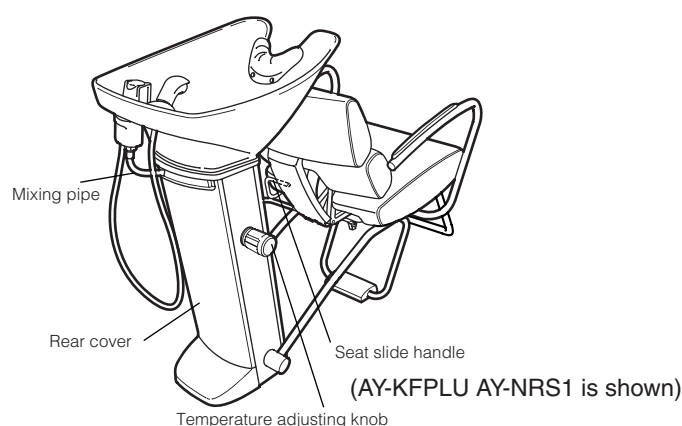

Position of Warning label (Standard spec.)


⚠ CAUTION	⚠ CAUTION	⚠ CAUTION
Do NOT use hot water of 60 C or higher. Risk of burn or breakage of the equipment.	Wash out hair dye immediately after the use. Exposure for long time may cause discoloration or deterioration.	Do NOT use detergent containing NaOH or KHO. Risk of deterioration or breakage of the equipment.

Refer to the Operation Manual for other notes.

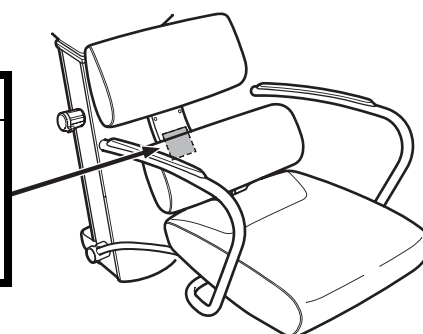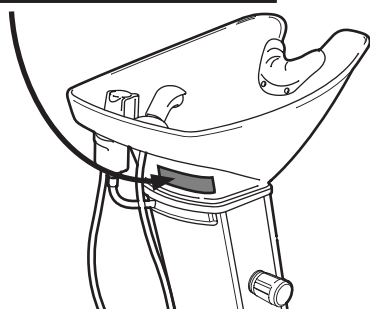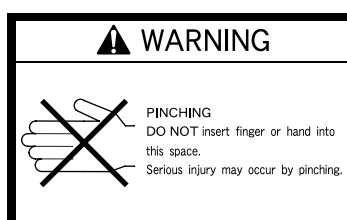


Name of each part (EU spec.)



Chair mount type KAZE

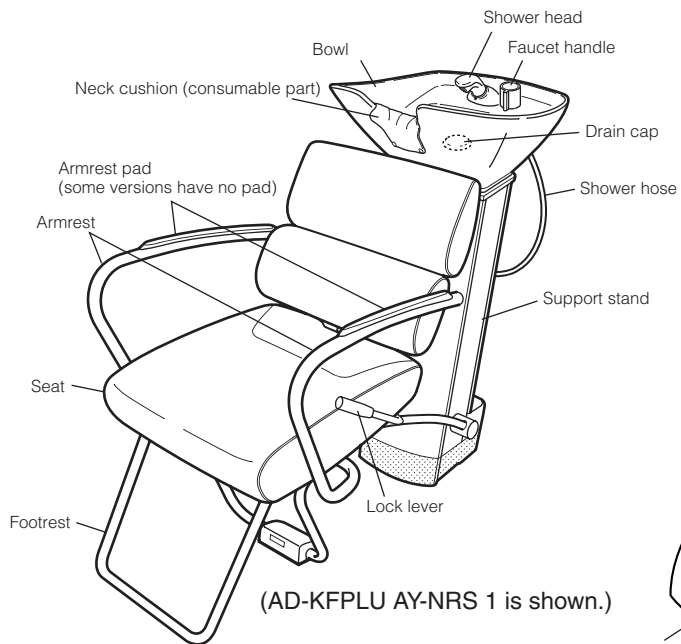

OTO



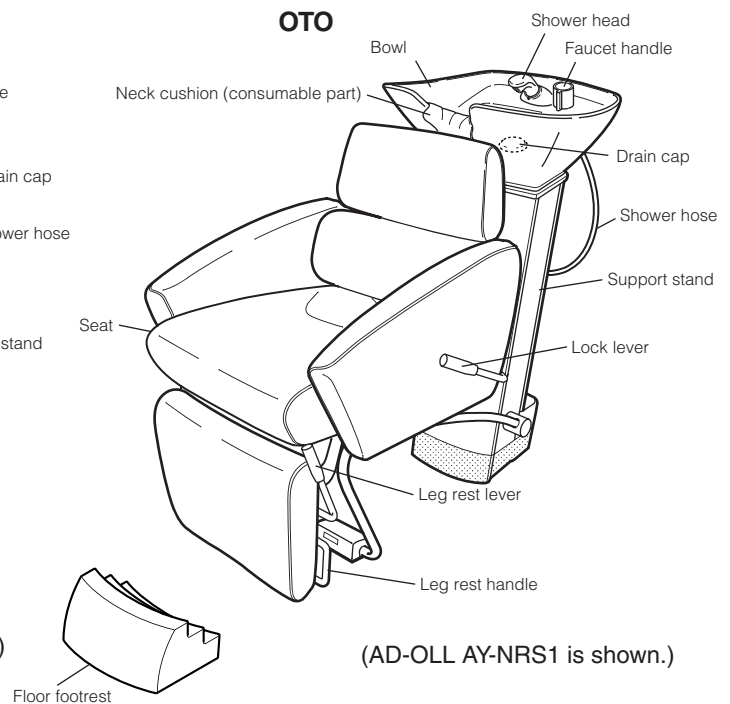


Separate type

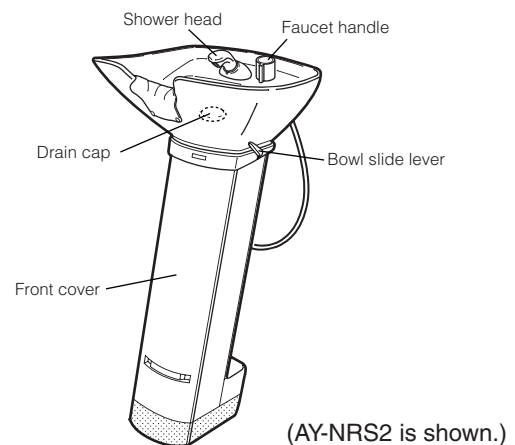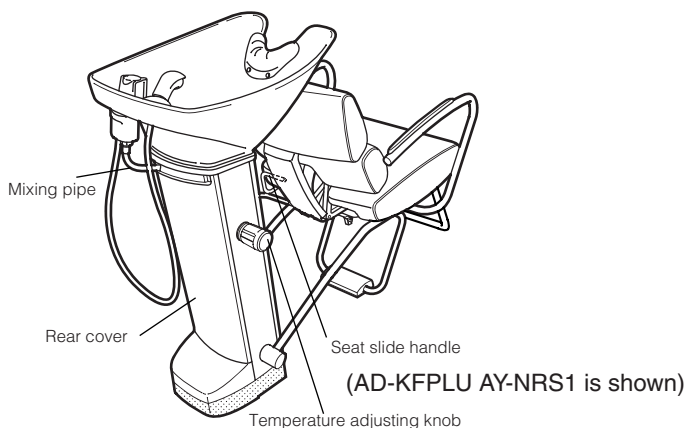

Position of Warning label (EU spec.)


⚠ CAUTION	⚠ CAUTION	⚠ CAUTION
Do NOT use hot water of 60 C or higher. Risk of burn or breakage of the equipment.	Wash out hair dye immediately after the use. Exposure for long time may cause discoloration or deterioration.	Do NOT use detergent containing NaOH or KHO. Risk of deterioration or breakage of the equipment.
Refer to the Operation Manual for other notes.		

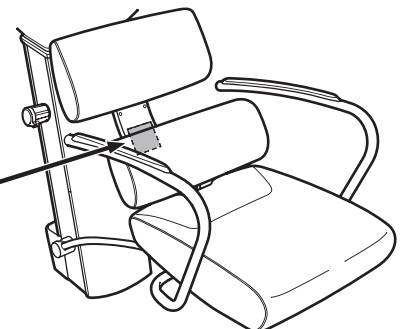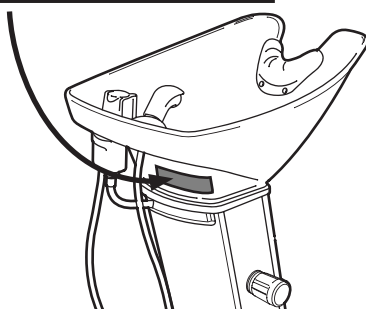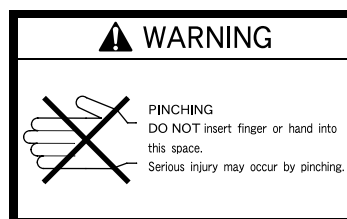

How to attach neck cushion

Attach the neck cushion by following the procedure below.

- 1 Place the neck cushion in the epression of the bowl and fit it on the edge of the bowl. (Please pay attention to the direction of back and forth.)

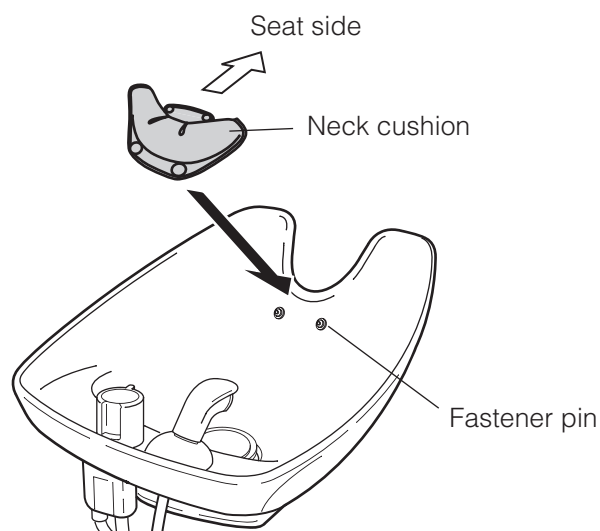


- 2 Attach the hooks of the neck cushion to the fastener pins inside the bowl.




CAUTION

Take precautions not to lose the fastener pin.

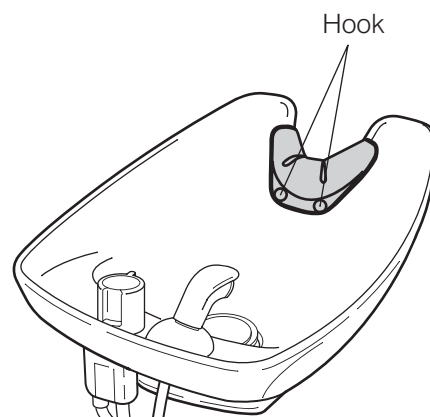

- 3 Fit the neck cushion on the edge of the bowl and attach the hooks of the neck cushion to the fastener pin outside the bowl.

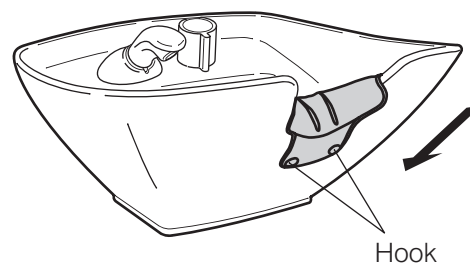

How to use

Standard spec.

- 1 Place the footrest below the seat. (only when using the separate footrest version)




CAUTION

Please alert the client to the sliding of the seat before seating in order to prevent possible accidents.

- 2 Seat the client in the shampoo chair, and cover the client with a shampoo cloth. Set the client's feet on the footrest, if necessary.

- 3 Depress the lock lever in the direction shown right by an arrow to release the lock.
(Please depress the lever to the end until it is locked.)

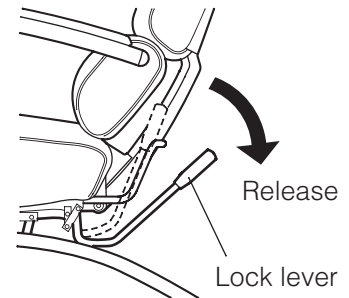

- 4 Let the client applies his/her weight on the backrest while holding the armrest of the chair, and the backrest will be reclined and the seat will slide forward. (In the case of a fixed back version, the backrest will not slide.) Stop the backrest at the position where the neck of the client contacts with the neck cushion.




CAUTION

When sliding the seat, please hold the head of the client with your hand. Otherwise, the client may hit the bowl by the head.



CAUTION

In the case of a seat with footrest, the footrest will move forward as the seat slides. Please take precautions so that the foot of the client may not hit the footrest.

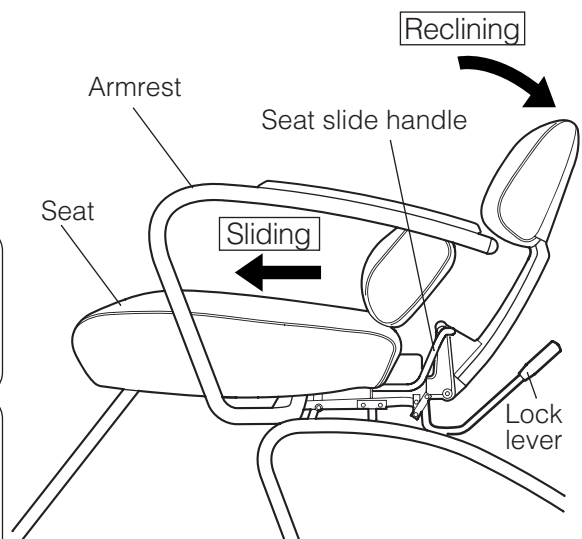

- 5 Move the seat slide handle back and forth, if necessary, to make minute adjustment of the sliding amount.



CAUTION


When sliding the seat, please hold the head of the client with your hand. Otherwise, the client may feel load on his/her neck.

- 6 Raise the lock lever upward in the direction shown right by an arrow to lock the seat and the backrest (only for a reclining version).



CAUTION

Please make sure that the seat and the backrest (only for reclining version) are firmly locked.

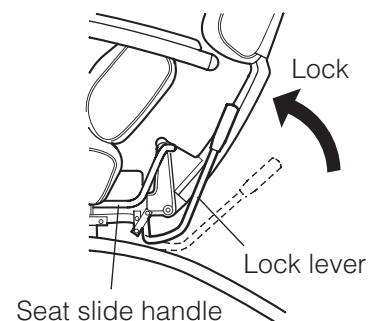

7 In the case of a seat with leg rest

Raise the leg rest handle to the uppermost position to raise the leg rest.




CAUTION

Do not use the leg rest lever to raise the leg rest.



CAUTION

Do not sit or ride on the leg rest.

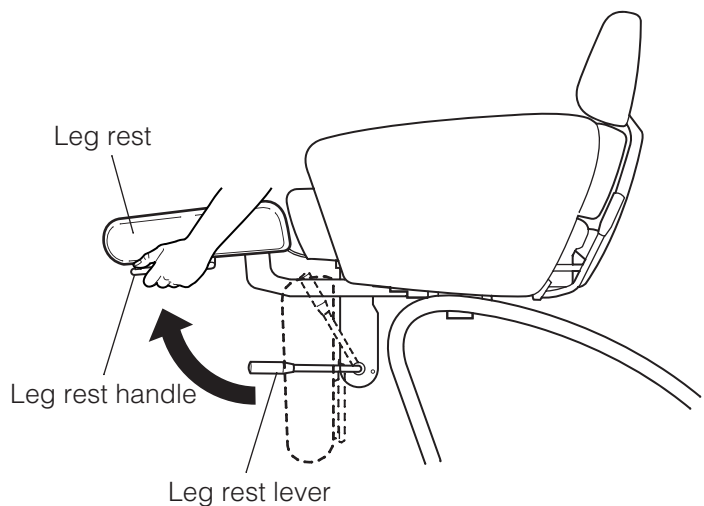

8 Perform shampooing.

9 After shampooing


<In the case of a seat with leg rest>

Raise the leg rest lever in the direction shown right by an arrow and return the leg rest to the normal position. (Raising the leg rest lever slightly will descend the leg rest automatically.)



CAUTION

Do not raise the leg rest lever forcefully.

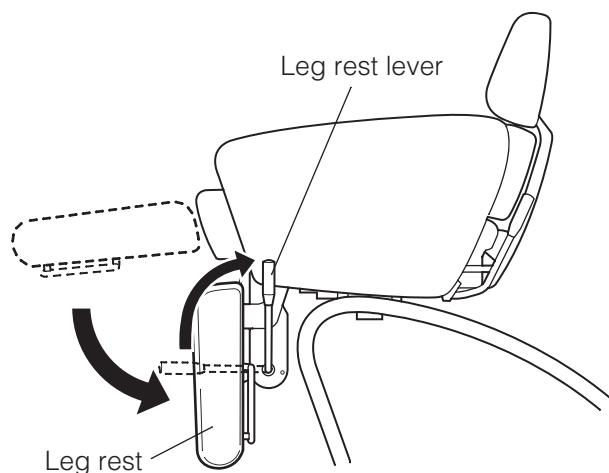

10 Depress the rock lever to release the lock and return the backrest slowly to the normal position while assisting the client in sitting up.



CAUTION


When sliding the seat, do not near your finger or hand to the moving part. Serious injury may occur by pinching.



CAUTION

In the case of a seat with footrest

If the client stands up with his/her leg placing inside the footrest, the client may be caught in the footrest by the leg, or topple. Please urge the client to watch the steps.

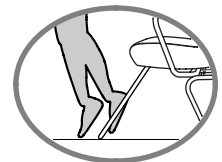

11 Raise the lock lever and lock the seat and the backrest (in the case of a reclining version).



CAUTION

Be sure to raise the lock lever to the end until it is locked.

12 Remove the shampoo cloth, and guide the client to the salon area.

EU spec.


- 1 Place the footrest below the seat. (only when using the separate footrest version)



CAUTION

Please alert the client to the sliding of the seat before seating in order to prevent possible accidents.

- 2 Seat the client in the shampoo chair, and cover the client with a shampoo cloth. Set the client's feet on the footrest, if necessary.
- 3 Depress the lock lever in the direction shown right by an arrow to release the lock.
(Please depress the lever to the end until it is locked.)

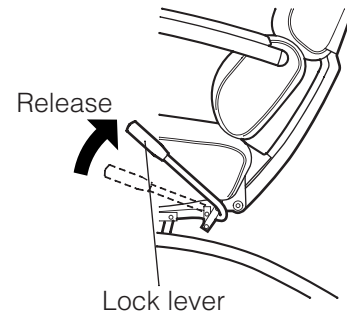

- 4 Let the client applies his/her weight on the backrest while holding the armrest of the chair, and the backrest will be reclined and the seat will slide forward. (In the case of a fixed back version, the backrest will not slide.) Stop the backrest at the position where the neck of the client contacts with the neck cushion.



CAUTION

When sliding the seat, please hold the head of the client with your hand. Otherwise, the client may hit the bowl by the head.



CAUTION

In the case of a seat with footrest, the footrest will move forward as the seat slides. Please take precautions so that the foot of the client may not hit the footrest.



CAUTION



When sliding the seat, please hold the head of the client with your hand. Otherwise, the client may feel load on his/her neck.

- 5 Raise the lock lever upward in the direction shown right by an arrow to lock the seat and the backrest (only for a reclining version).



CAUTION

Please make sure that the seat and the backrest (only for reclining version) are firmly locked.

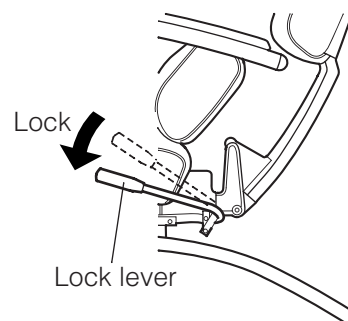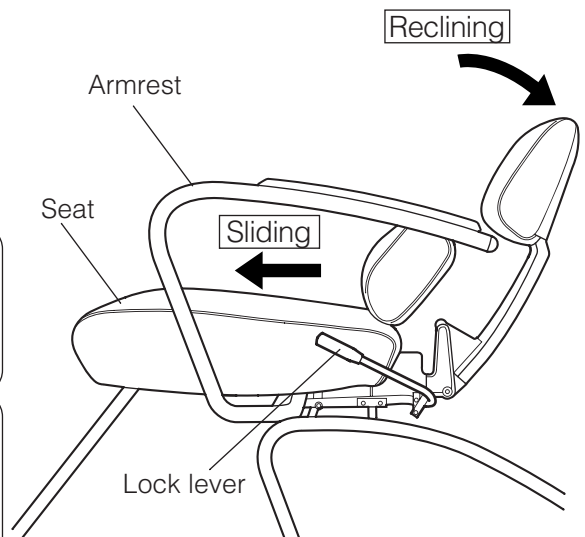

6 In the case of a seat with leg rest

Raise the leg rest handle to the uppermost position to raise the leg rest.




CAUTION

Do not use the leg rest lever to raise the leg rest.



CAUTION

Do not sit or ride on the leg rest.

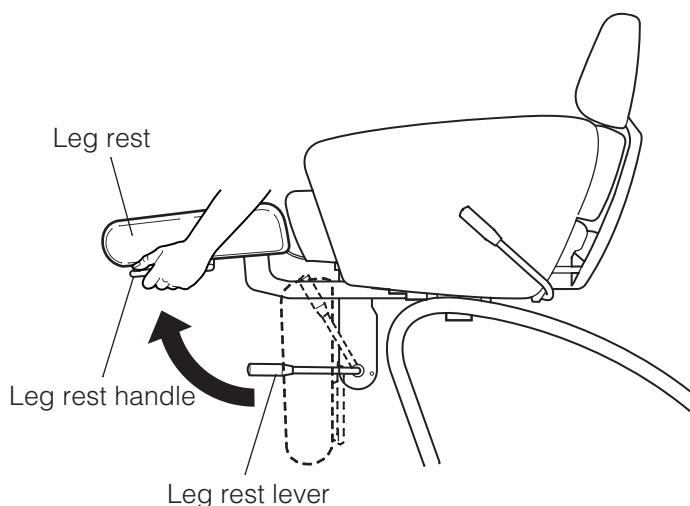

7 Perform shampooing.

8 After shampooing


<In the case of a seat with leg rest>

Raise the leg rest lever in the direction shown right by an arrow and return the leg rest to the normal position. (Raising the leg rest lever slightly will descend the leg rest automatically.)



CAUTION

Do not raise the leg rest lever forcefully.

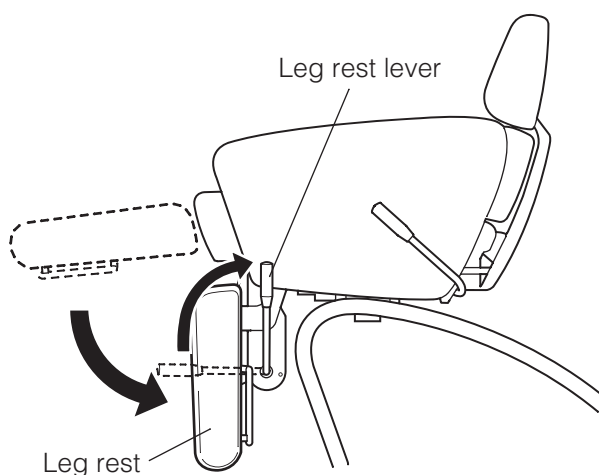

9 Depress the rock lever to release the lock and return the backrest slowly to the normal position while assisting the client in sitting up.



CAUTION


When sliding the seat, do not near your finger or hand to the moving part. Serious injury may occur by pinching.



CAUTION

In the case of a seat with footrest

If the client stands up with his/her leg placing inside the footrest, the client may be caught in the footrest by the leg, or topple. Please urge the client to watch the steps.

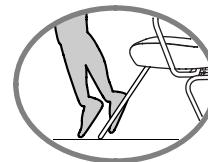

10 Raise the lock lever and lock the seat and the backrest (in the case of a reclining version).



CAUTION


Be sure to raise the lock lever to the end until it is locked.

11 Remove the shampoo cloth, and guide the client to the salon area.

Standard / EU spec.

How to adjust the amount of hot water

Turning the faucet handle left (counterclockwise) will increase the amount of hot water. Turning the faucet handle by 120° to the end will supply maximum amount. Turning the faucet handle right (clockwise) to the end will stop the water supply.

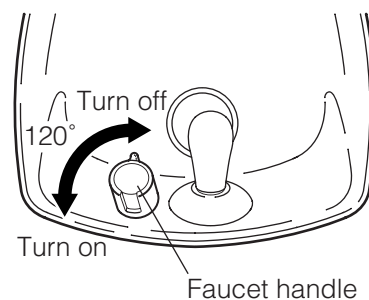


How to adjust the temperature of hot water

- 1 Turn the temperature adjusting knob to H (hot) or C (cold) direction and stop it at a desirable position.

CAUTION

Before adjusting the temperature of hot water, reduce the amount, and direct the shower head in the other direction than the head of the client. Adjust the temperature while checking the temperature with your hand. Hot water of extremely high temperature may come out. Please take ample precautions for operation.

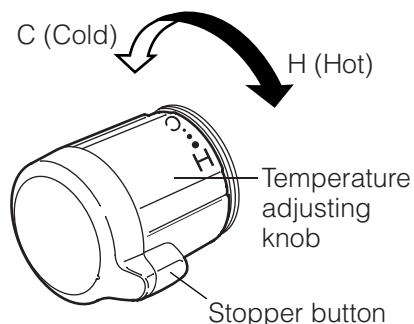

- 2 For using hot water of high temperature, turn the temperature adjusting knob while pressing the stopper button.

CAUTION

Return the knob to the position for proper temperature after using hot water of high temperature. If not returned, there may be a risk of getting a burn.

CAUTION

If the other apparatuses sharing the water supply source at the same time, the temperature may fluctuate. Avoid "abrupt use" of each apparatus.


* Note that hot water of about 53°C or more is not available with this product for safety operation.
(Conditions: Same supply pressure, water temperature 20°C, Hot water temperature 60°C)

How to keep water

When keeping water in the bowl for emulsifying purpose, etc., reverse the drain cap.

(Small amount of water will leak but this will not influence the operation.)

Keep the water line below the dotted line shown in the illustration (below the shower hose pull-out port). Water will leak from the shower hose pull-out port if kept over the dotted line.

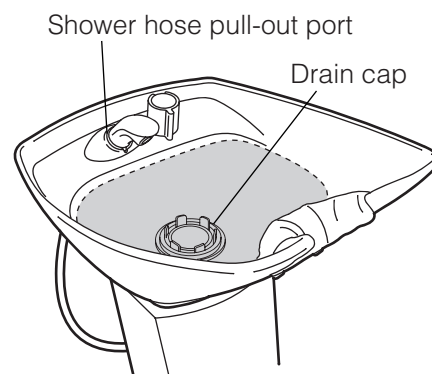


Cleaning of hair trap

Take out the hair trap under the drain cap and remove hairs from the hair trap.

CAUTION

Clean the hair trap as often as possible. If using the hair trap without cleaning, it may cause clogging of the port, overflow or poor sanitary. Cleaning the hair trap every after each shampooing is recommended.

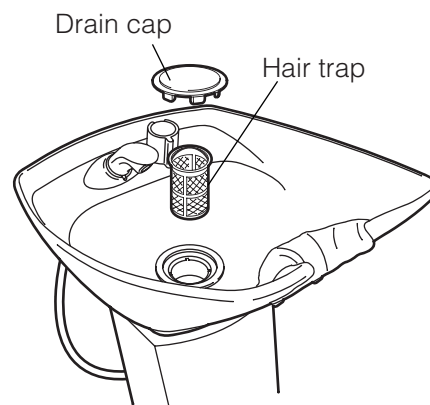

Standard / EU spec.

How to adjust the bowl position

<In the case of a separate type>


If it is difficult to fit the neck of the client to the neck cushion at the normal bowl position, slide the bowl forward to adjust the position.

- 1 Turn down the bowl slide lever below the bowl and push the bowl forward. Stop the bowl when the neck cushion fits the neck of the client. Release the slide lever to lock the bowl. Please make sure that the bowl will not move back and forth.



CAUTION

When sliding the bowl, hold the head of the client by your hand. The client may feel load on his/her neck.

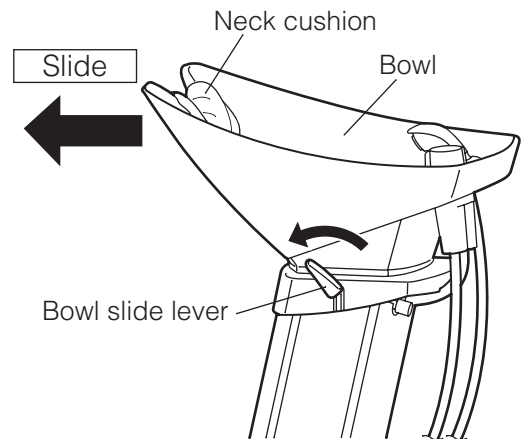


- 2 After finished shampooing, push the bowl backward to the normal position with turning down the bowl slide lever.



CAUTION

Be sure to return the bowl to the initial position after shampooing.

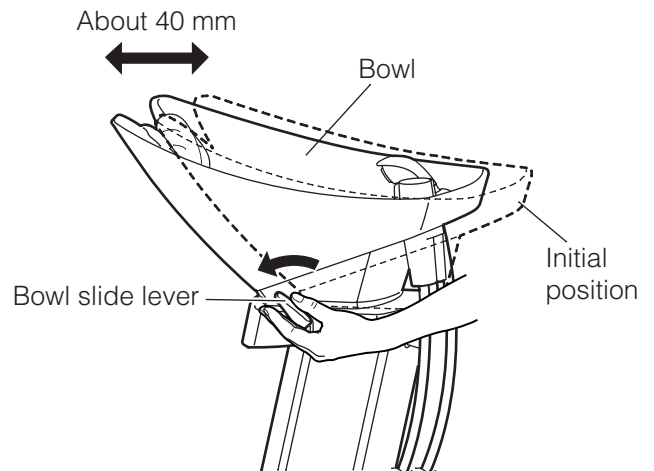

* The bowl can be locked at four positions (including the initial position). The total sliding distance is about 40 mm.

How to care

Standard / EU spec.

Neck cushion

After the operation of the day, wash the neck cushion in water and dry with dry cloth, and then dry in the shade.

If the stain is not cleaned, wash the neck cushion in diluted neutral detergent and then rinse it with water. The neck cushion is consumable.

Replace the neck cushion if it gets heavy stain or deteriorated.

Contact us or our dealers for replacement.



CAUTION

Rinse the cushion immediately after chemical is splashed on the neck cushion. Splashed chemical may cause deterioration or discoloration.

Chair/Main cover

Wipe the chair/cover with dry and soft cloth. If the stain is not cleaned, wipe the chair/cover with diluted neutral detergent and then wipe it with dry cloth.



CAUTION

Do NOT use volatile chemical such as thinner, alcohol, gasoline, and coal oil, wax with abrasive, sponges with abrasive, detergent including organic solvent, acid/alkaline/chlorine solvent, and scrub brushes. Using these may be a cause of scars, discoloration, etc.

Bowl

Wipe the bowl with diluted neutral detergent.



CAUTION

Do NOT use metal scrub brushes, paper files. Using them may be a cause of scars.

Discharging water and cleaning

For a longer service life of the equipment, clean the strainer (provided in the check valve) periodically. If there is a possibility of freezing of the pipes due to coldness, discharge water from the deodorant trap and the check valve.



Be sure to take measures for discharging water when using the equipment in a cold district. Leakage may occur due to breakage of the frozen pipes.


1 Prepare a water receiver.

2 PreaDetach the rear cover.

Remove the machine screws (2 screws) in the upper part of the rear cover. Hold the rear cover by the side with your hands, and lift it to detach it from the main body. prepare a water receiver.



Make sure that there is no leakage in the equipment after detached the rear cover.

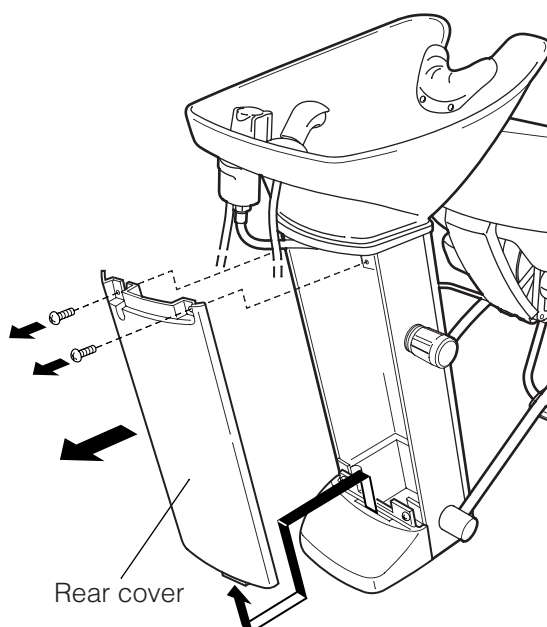

- 3** Place the water receiver below the drain nut of the deodorant trap. Unscrew the drain nut to discharge water. After discharging water and cleaning, apply and fasten the drain nut tightly.

- 4** Close the stop valves for hot water/water.



CAUTION

Before discharging water from the strainer and cleaning, make sure that the stop valve is completely closed.

- 5** Place the water receiver below the check valve. Unscrew the strainers of the check valves of hot water/water. After discharging water and cleaning the strainer, apply and fasten the strainer tightly.





CAUTION

- Fasten the drain nut and the strainer tightly. If they are not tightly fastened, leakage may occur.
- If the discharged water drops on the floor, wipe it out immediately.

- 6** After making sure that the strainer is tightly fastened, open the stop valve.

- 7** Attach the rear cover to the main body with the machine screws (2 screws).

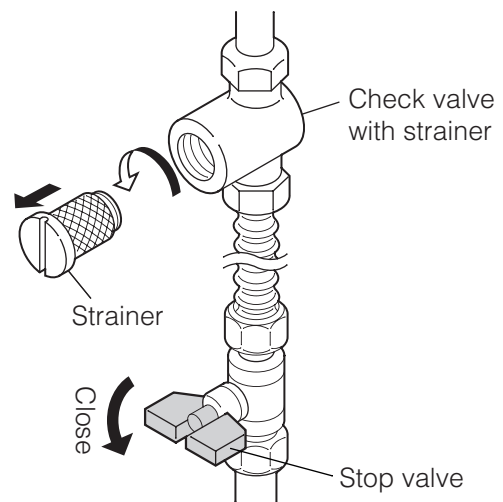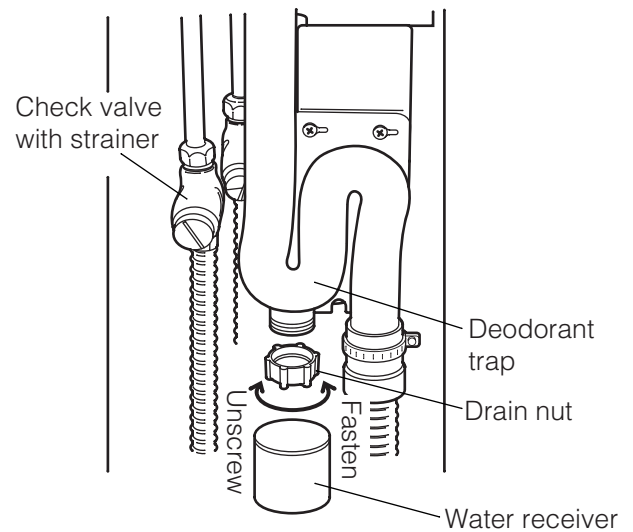

Before asking repair

If the troubles occurs, please check the following chart before asking for repair.

Trouble	Please check that:
● Hot water will not come out.	→ The stop valve of the piping is open.
● Temperature of hot water is low.	→ The temperature of the water heater is properly set.
● The chair will not slide.	→ The lock lever is in the release position.
● The chair cannot be locked.	→ The lock lever is in the lock position.
● Drainage condition is bad.	→ The hair trap, the drain piping or the deodorant trap is not clogged.

In case of the other troubles or malfunction, please stop the operation and contact us or our dealers.


SPECIFICATION (Standard spec.)

Faucet Thermo mixing system

Mass	Chair mount type	Main body: 27.0 kg	Separate type	Main body: 28.5 kg
	Chair			
	KAZE (Fixed back version):	23.5 kg		
	KAZE (Reclining version):	24.5 kg		
	OTO:	27.5 kg		
	Footrest			
	Floor footrest:	3.0 kg		
	U-footrest:	2.0 kg		
	W-footrest:	2.5 kg		
	Leg rest:	6.0 kg		


Chair mount type

KAZE

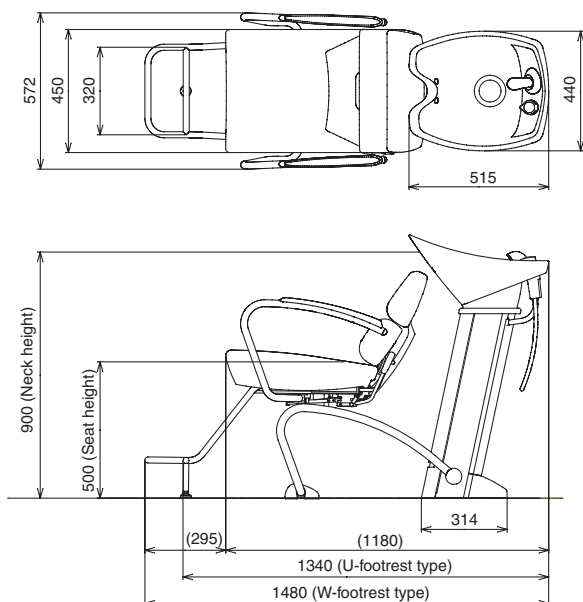


* The dimension in parentheses is a reference value. (AY-KFPLW AY-NRS1 is shown.)

OTO

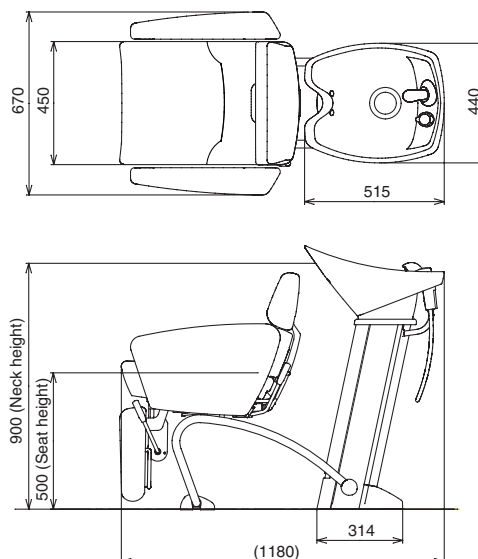

* The dimension in parentheses is a reference value. (AY-OLL AY-NRS2 is shown.)

Separate type

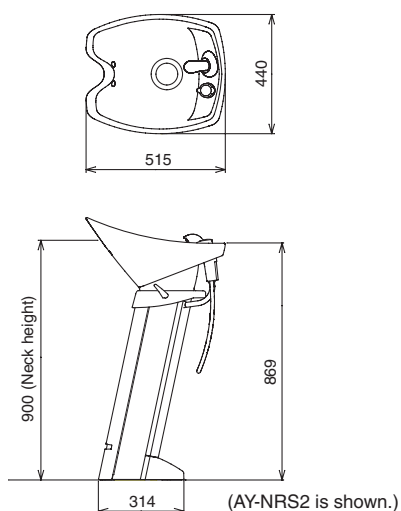


SPECIFICATION (EU spec.)

Faucet Thermo mixing system


Mass	Chair mount type	Main body: 31 kg	Separate type Main body: 32.5 kg
	Chair		
	KAZE (Fixed back version):	23.5 kg	
	KAZE (Reclining version):	24.5 kg	
	OTO:	27.5 kg	
	Footrest		
	Floor footrest:	3.0 kg	
	U-footrest:	2.0 kg	
	W-footrest:	2.5 kg	
	Leg rest:	6.0 kg	

Chair mount type KAZE

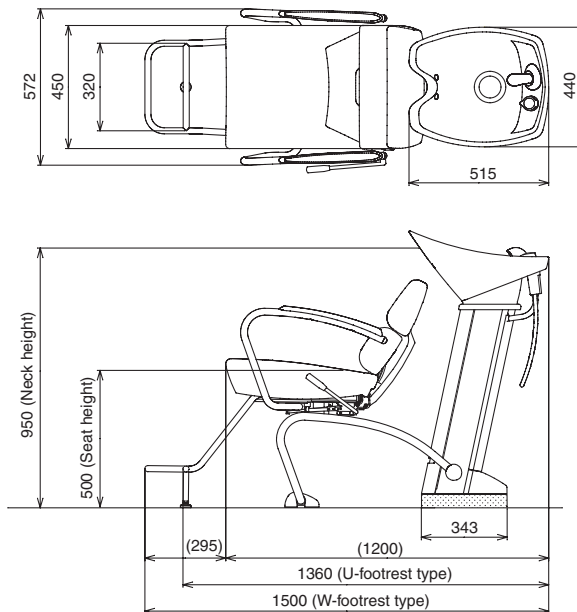


* The dimension in parentheses is a reference value. (AD-KFPLU AY-NRS1 is shown.)

OTO

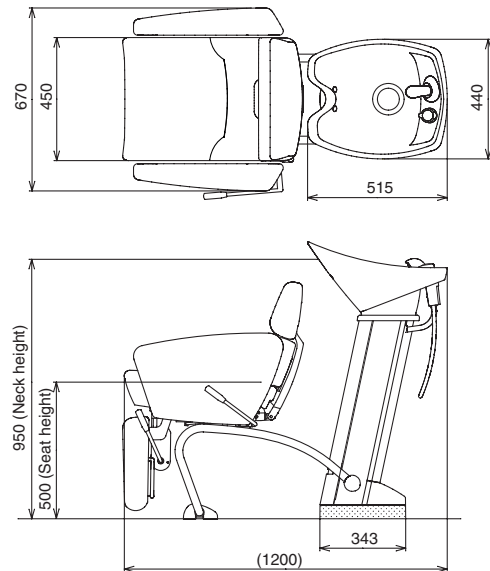

* The dimension in parentheses is a reference value. (AD-OLL AY-NRS2 is shown.)

Separate type

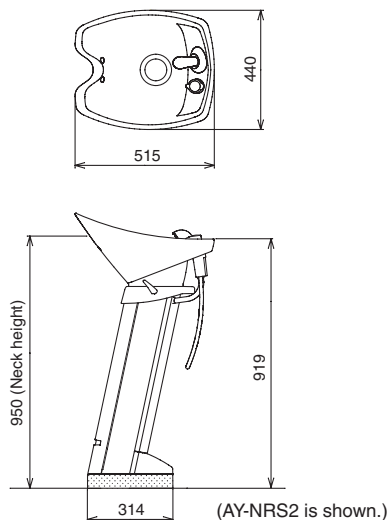

MEMO

MEMO

Memo



TAKARA BELMONT CORPORATION
1-1, Higashi-shinsaibashi 2-Chome, Chuo-ku, Osaka, Japan
TEL. : (06) 6213-5945
TELEFAX : (06) 6212-3680

Printed in Japan 0508.

BAEA43A0

05. 10