

3. Checking Efficacy of Cartridge

A cartridge can purify about 300 liters (79 gal) of water. To check whether the cartridge is working properly or not, use purifier checker.

- (1) Take 1 glass of purified water.
- (2) Put 1 spoonful of checker into the glass and stir it. (Use the supplied spoon.)
- (3) If water turns blue, the cartridge is still working properly.
- (4) If water turns purple, the cartridge must be replaced.

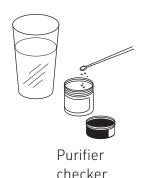

4. Replacing Cartridge

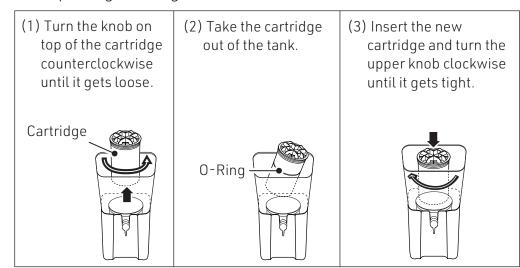


[3] MAINTENANCE

Empty the water tank after daily use.



WATER PURIFIER

TJ-6

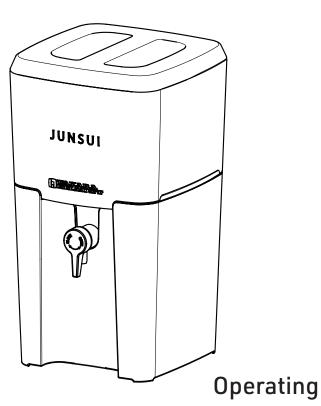




2nd Version 2023.07 1A0Z52A0

Instructions

[1] MAJOR PARTS & SPECIFICATIONS

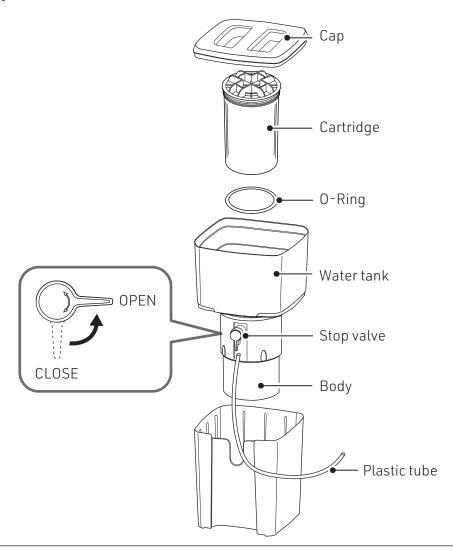


| Water Tank Capacity Life of Cartridge Length of Plastic Tube Body Dimensions | about 300 liters (79 gal) 600 mm (23.6 Inch) |
|---|---|
| | |
| | Depth: 180 mm (7.1 Inch) |
| Weight | 1.6 kg (3.5 lbs) |

[2] USING THE PRODUCT


1. Air Removal

Air in the cartridge prevents the smooth water flow. When the TJ-6 WATER PURIFIER is used for the first time, or after cartridge is replaced, the air in cartridge must be removed.

(1) Pour 5 cups (about 600 cc / 20 fl oz) of clean water into the water tank.



(2) Open the valve by turning the knob counterclockwise, water comes out through the plastic tube.




(3) After 1 minute, turn the knob clockwise to close.



2. Making Purified Water

(1) Pour tapped water into the water tank.

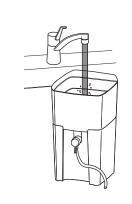

(2) Water receptacle must be placed lower than TJ-6. Open the valve, and purified water comes through plastic tube into the receptacle. Keep the water tank covered except when pouring tapped water into the tank.

