


SPA MIST II

QUICK OPERATION GUIDE

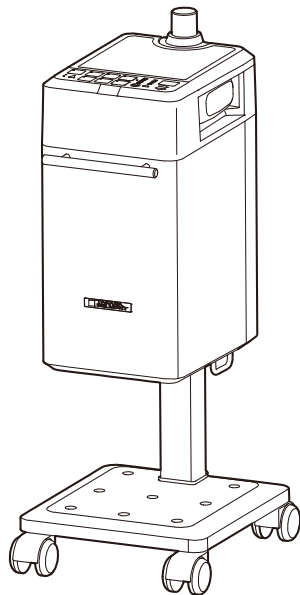


For details and safety information
see the operating instructions.

<https://beauty.takarabelmont.co.jp/manual-site/>



1 Control Panel

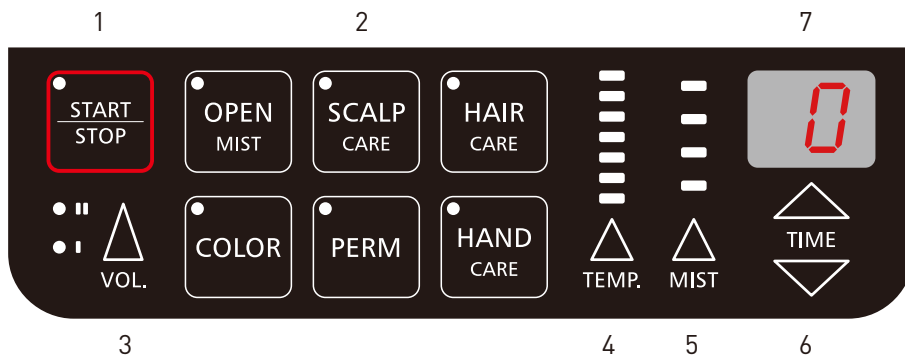

1 Start / Stop key



2 Mode selection key



Shampoo / massage with chemical agent



Heating-type permanent wave agent / curling agent



Acid hair dye
*Cooling time:5 min



Treatment / Heating-type permanent wave agent/ curling agent



Scalp cleansing agent scalp treatment



Cosmetic for hand care

3 Volume Key



Mute




Level 1



Level 2

4 Temperature Level Key

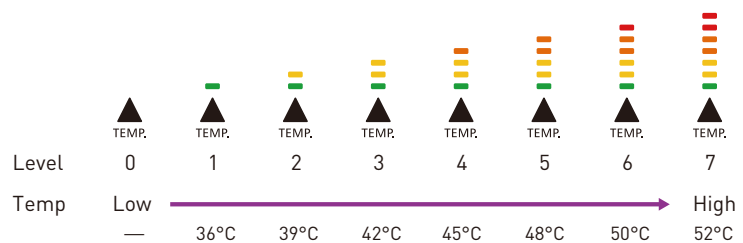

5 Mist Level Key



6 Time Set Key



7 Display panel

State indication



Time indication



Cooling and the remaining time



Shortage of water in the water-supply bottle. Re-filling distilled water



Too much water in the machine



Preheating

Error indication



Temperature detection unit error
Heater error





Temperature detection unit error




Water level detection unit error
float switch error

2 Preparation

1 Attach the cap joint N to the mist cap (option).

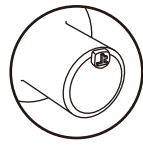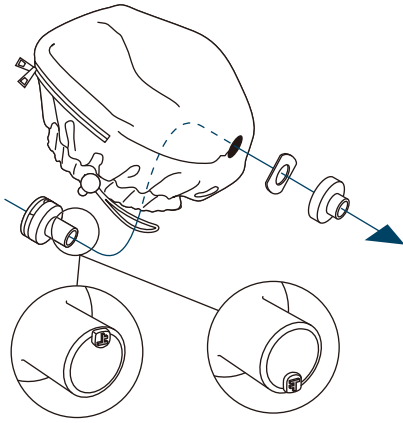

-YUME and open mist ball nozzle
-Backwash unit and YUME
-Styling chair

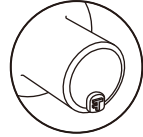


-CALME and men's chair


2 Pour distilled water into the water-supply bottle.

1.Remove the water-supply bottle cap and pour distilled water.


 **CAUTION**

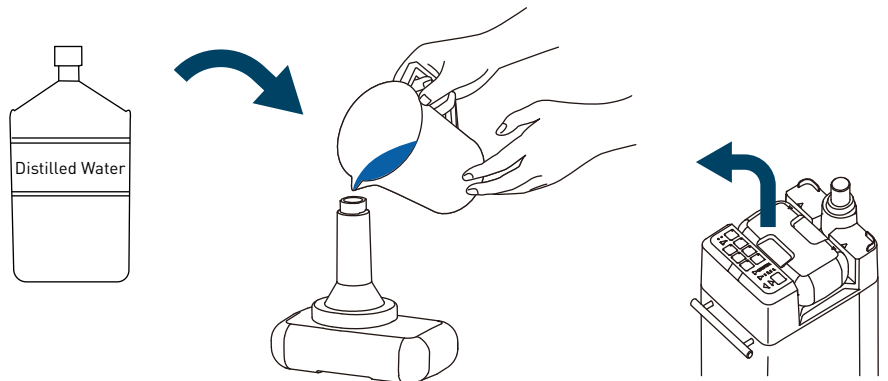


2.Close the water-supply bottle cap.

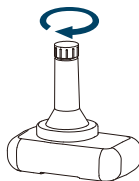

3.Empty the drain tank and ensure that the drain cock has been closed.


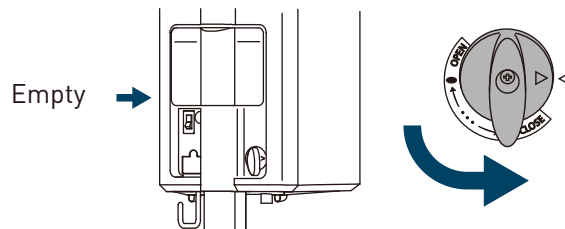


4.Insert the water-supply bottle into the top of the unit.

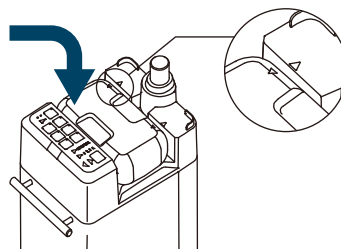

3 Operation procedures


- 1 Insert the flexible hose into the exhaust nozzle.

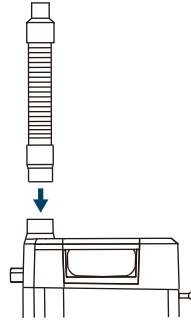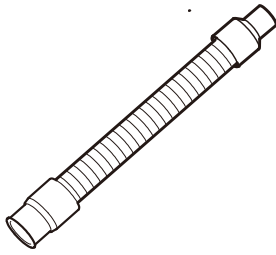

- 2 Set the main unit behind the customer.



- 3 Plug in and switch on the power.

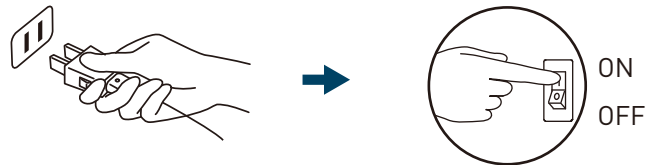

- 4 Press the key for the desired mode.




OPEN MIST	Shampoo/massage with chemical agent *Do NOT use mist cap.	PERM	Heating-type permanent wave agent/curling agent *An optional mist cap can be used.
COLOR	Hair dye *Cooling time: 5 min *An optional mist cap can be used.	HAIR CARE	Treatment *Cooling time: 2 min *An optional mist cap can be used.
SCALP CARE	Scalp cleansing agent scalp treatment *An optional mist cap can be used.	HAND CARE	Cosmetic for hand care *An optional cover can be used.

- 5 Press the start / stop key to implement pre-heating.




3 Operation procedures


Put the mist cap on and Insert the flexible hose into the cap joint N.

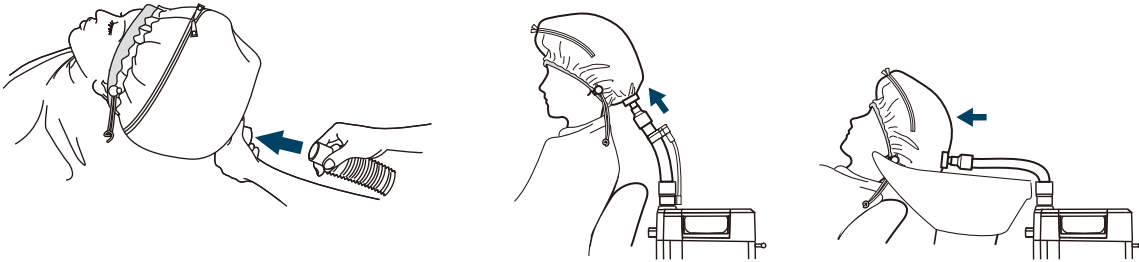

6 Press the start / stop key to start the operation.

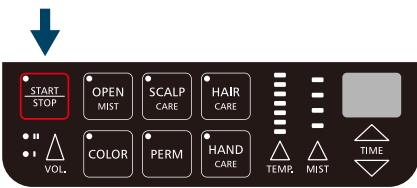


7 During operation.

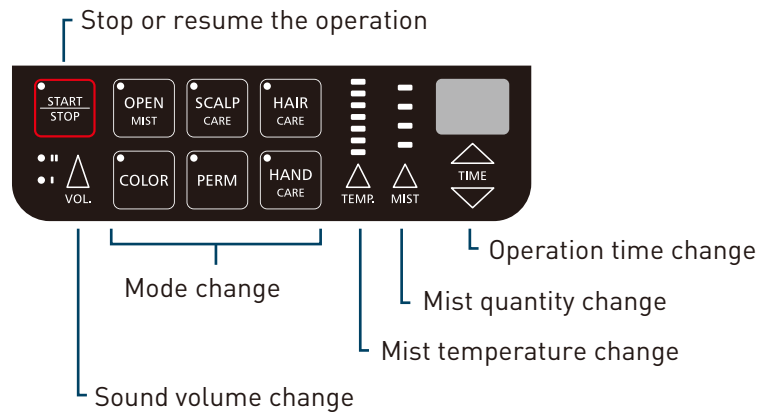


8 Cooling.




9 Time-up.

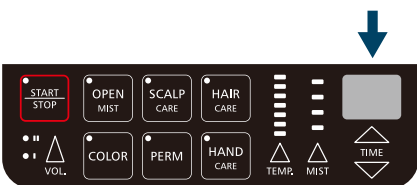


- 10 Switch off the power after finishing the work.

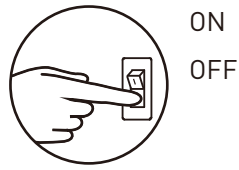


- 11 Clear out the water accumulated in the drain tank.

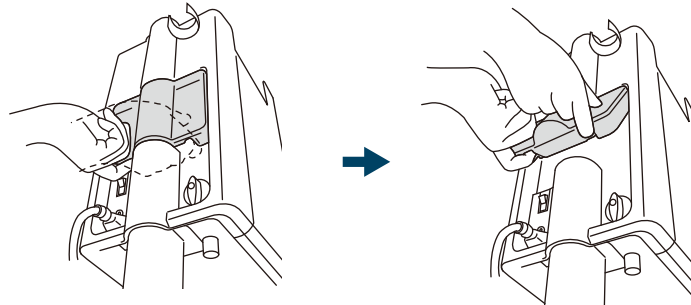

- 12 Drain the water tank after use.

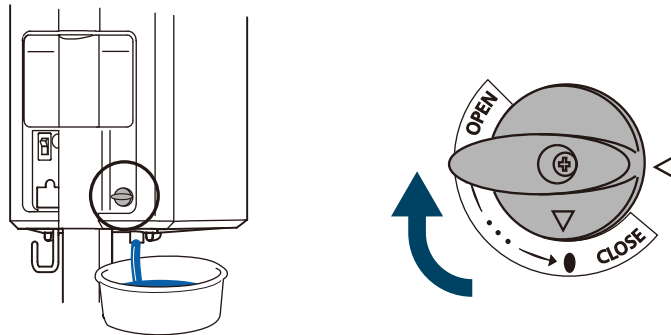

- 13 Accommodating the flexible hose.

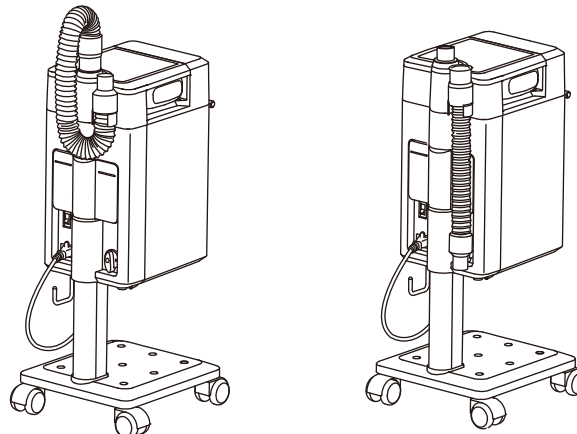


4 Putting on / removing the mist cap


1 When using a backwash setting.

Putting on the mist cap


1

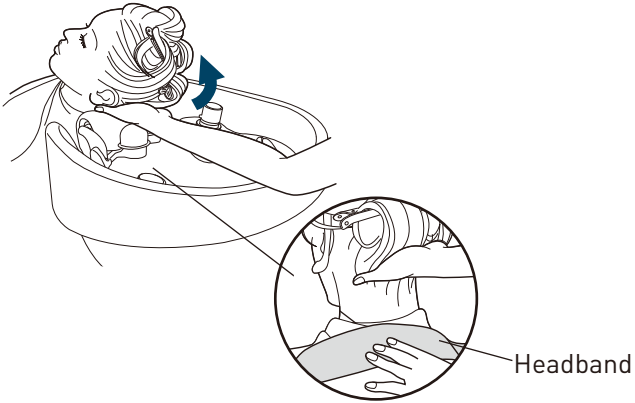


2

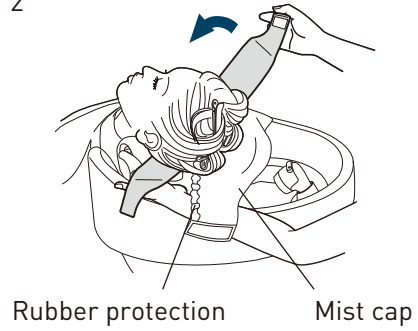


3

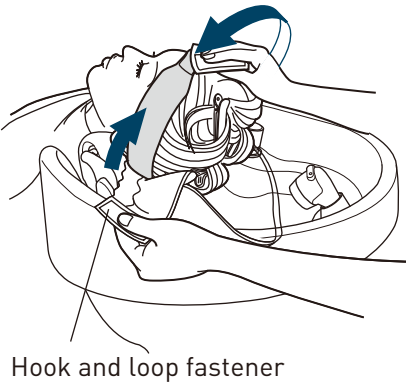


4

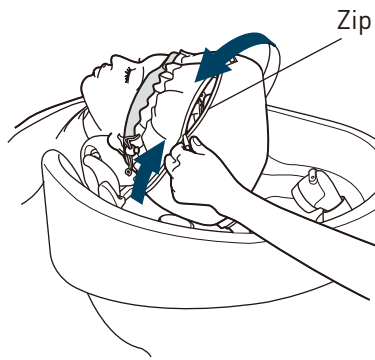


5

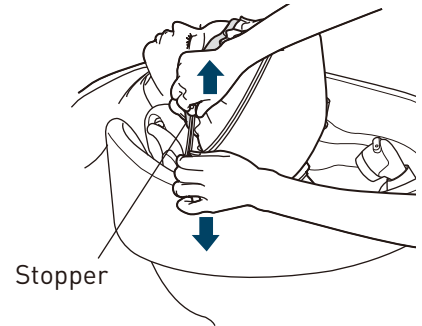

6

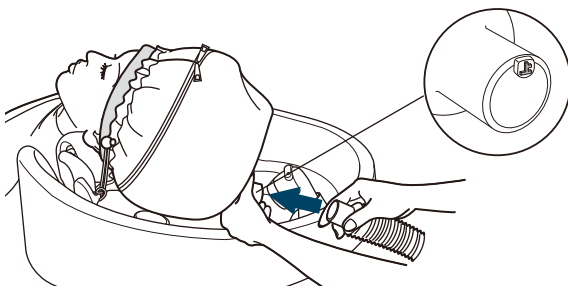


7

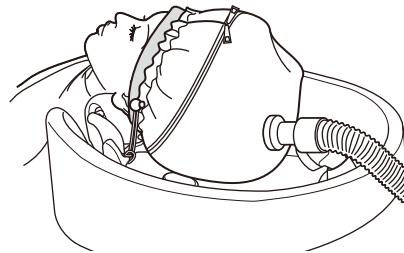

Removing the mist cap


1

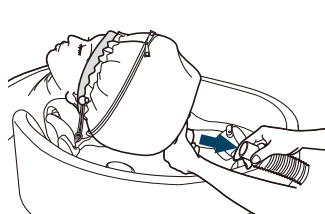

2



3

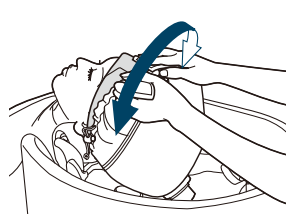

4




Video


4 Putting on / removing the mist cap

2 When using in at the Styling station.

Putting on the mist cap

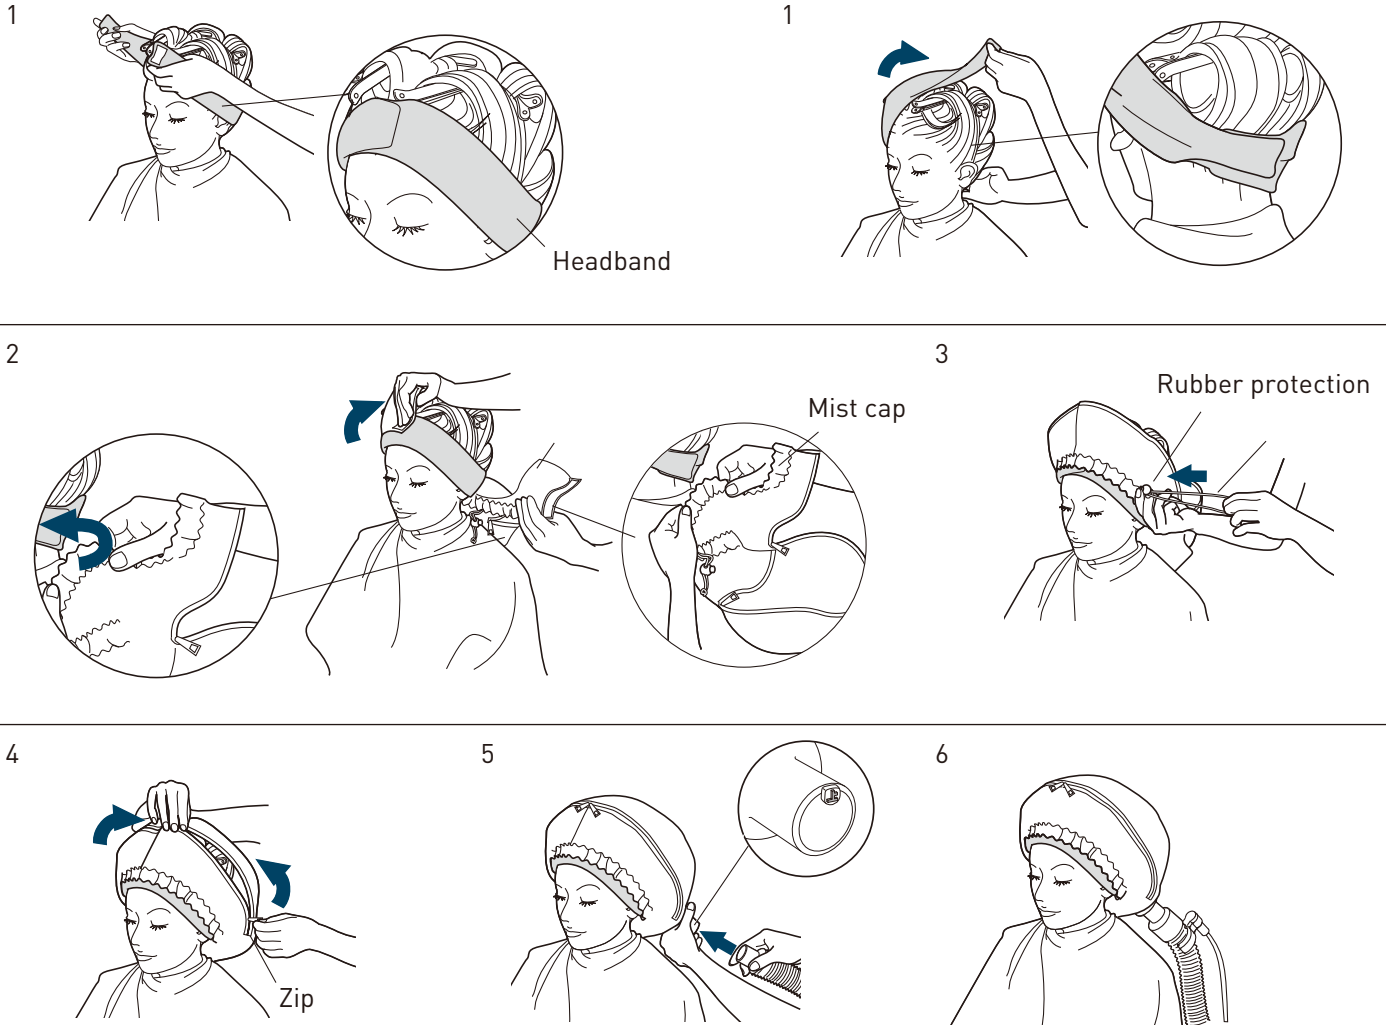

Removing the mist cap

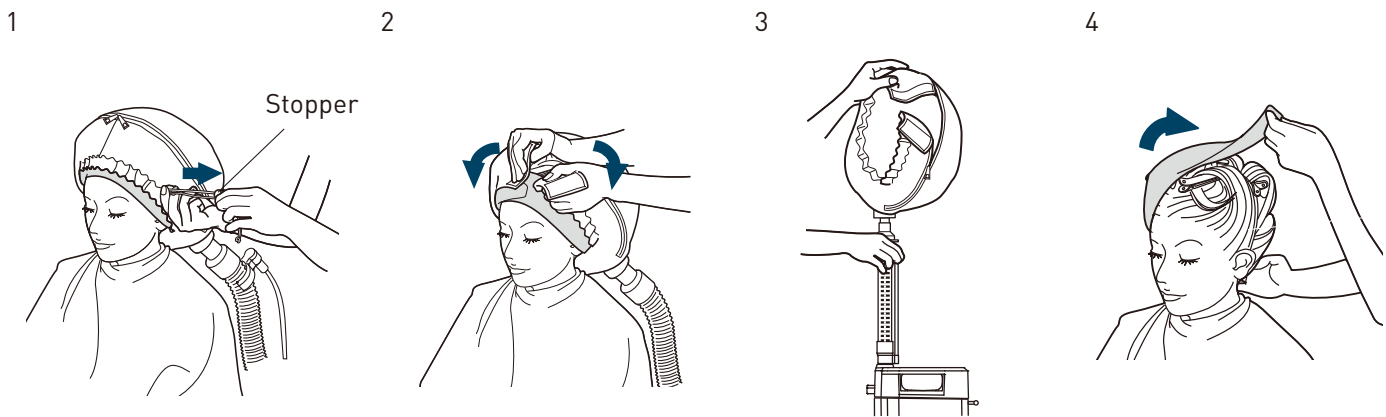

Video



TAKARA BELMONT CORPORATION

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL : 81-6-6213-5945

FAX : 81-6-6212-3680

