TAKARA BELMONT Barber Chair

Legacy 91 Barber Chair Legacy 92 Barber Chair

Model No. AB-0091 AB-0092

Operating Manual



Thank you for purchasing TAKARA BELMONT product. Please read through this manual carefully before installing or using the product to ensure correct use.

Failure to read the operating manual may lead to accidents.

This product is designed for commercial use at barbers or beauty salons and should be used in combination with an upper seat unit. Do not use this product for the purposes other than the practices and services in these places.

Keep this operation manual in a safe place for your future reference.

Please contact us in case your operation manual is unreadable such as being soiled or ripped, or is lost.



Table of Contents

| Safety Precautions (Be sure to observe the instructions) | 1 - 2 |
|---|-------|
| Notes for Use | 2 - 3 |
| Notes for Use with Upholstery | 4 |
| Name of Components | 4 - 5 |

How to Use

| Adjusting the Headrest6 | , |
|---------------------------------|---|
| For back shampoo and haircut7 | |
| Using the Heelrest (AB-0091)7 | |
| Reclining/Raising the Backrest8 | , |
| Using the Cape Holder9 | l |
| Using the Dryer Holder10 | |
| Using the Manicure Holder10 | i |

| Care and Maintenance | 11 |
|--------------------------------|----|
| Daily Inspection | 12 |
| Daily Inspection Procedure | 12 |
| Specifications 13 - | 14 |
| Standard Period of Use | 15 |
| When Disposing of This Product | 15 |

Before use

Please read the safety precautions and notes carefully to ensure the proper use of this product.

About the precautions listed here

These precautions are provided for the safe use of this product and to prevent personal injury and harm to users and third parties. Please follow all of the precautions shown here, as they contain important information related to safety. TAKARA BELMONT bears no responsibility for harm and damage caused to the user or third parties in the event that the "Safety Precautions", "Notes for Use" or the "Notes for Use with Synthetic Leather" have not been observed and an accident has occurred. In this event, the user who did not follow these precautions bears responsibility for said harm and damage. Detailed information on cautionary marks is as explained below. Be sure to read and understand their descriptions carefully before reading the main text.

| Classification of precautions | Size and degree of imminent harm or damage | |
|--|--|--|
| Warning | This mark warns the user that "ignorance of this display and improper use may cause death or serious personal injury." | |
| Caution This mark warns the user that "ignorance of this display and improper use may c slight to moderate personal injury or property damage." | | |
| Notice | Explains "instructions that you are expected to follow for your safety." | |



Do not perform disassembly and repair

Disassembly and repair should only be performed by our service persons. Failure to do so may cause an accident, fault, electric shock, or fire.

The customer or user's hands, fingers, or body parts must be kept away from the movable parts of the equipment or the area surrounding its movable parts

If not, this may result in the body part being pinched, causing bodily injury.

Be sure to perform maintenance and inspection

Before use, be sure to perform maintenance and inspection to check that this equipment works normally and safely. Use of this equipment without maintenance and inspection may result in bodily injury or property damage.



Before operation, confirm that every part is working normally and safely

Check that there is no loosening, backlash, inclination, vibration, sound, and bad smell when making an inspection. If you find any abnormality, stop using the equipment immediately and contact your local dealer or TAKARA BELMONT.

Do NOT let persons weighing 1350N (135 kgf/298 lbf) or more sit in the chair

Doing so may result in a falling accident or cause malfunction.

When wiping, strong disinfectants that corrode metal, povidone-iodine (isodine solution) or sodium hypochlorite, etc., must never be used

Doing so may lead to malfunction.

If water or chemical solutions have been splashed on the chair, wipe it off immediately

If a chemical solution makes a stain or is splashed on the operating components, it may result in malfunction or electrical leakage. If dirt has adhered to the chair, wipe it off immediately with a dry, soft towel.

Safety Precautions (Be sure to observe the instructions)

⚠ Caution

Care must be taken with customers and children

Be sure to ensure that customers, especially children, do not touch the operating parts. Failure to do so may cause an accident.

Be careful during headrest operation

• Please be careful, as the headrest will come off when pulled up too high. Also, when operating the headrest, take care to not have your fingers pinched around the headrest area or between the backrest.

 \cdot When you pull out the headrest, be sure to ensure that the headrest do not hit the customer's head.

Do NOT pound, scrape or swing the equipment

Doing so may lead to the destruction or malfunction of the cover or other such parts.

Care must be taken when rotating the chair

When rotating the chair, make sure to confirm that nobody is around the chair. If the chair hits someone (especially around the steps), it may result in injury.

Notes for Use

\Lambda Warning

When operating the chair, mind the surrounding area

Before or during operation of the chair, sufficient care must be taken to ensure that bodies, hands and feet, or obstructions are not around the operating range (raise/lower direction of the chair, recline/raise direction of the backrest, in/out direction of the legrest, and the rotation direction of the chair). If care is not taken to do so, it may result in being pinched by the chair, and may cause bodily harm or property damage.

Sit only on or around the center of the seat

Never sit on the headrest, backrest, step, armrest, or on the front edge of the seat when the backrest has been reclined. Also, do not apply more weight to the chair than necessary. Doing so may cause the chair to fall over or break.

Do NOT apply excessive weight to any part of the chair

Do not sit on the legrest or backrest. Also, do not apply more than the necessary weight to the chair. Doing so may cause the chair to fall over or break. The legrest and backrest can withstand a load of 600N (60 kgf/132 lbf). Do not apply more than the necessary weight to the headrest or armrest. The headrest can withstand a load of 100N (10 kgf/22 lbf).

Be careful during installation

- Have installation or mounting of the equipment performed by a professional (from TAKARA BELMONT or a TAKARA BELMONT specified representative).
- The chair must be installed on flat and solid flooring. If the chair is used on an area where the flooring surface is inclined at 5° or more, it may cause the chair to fall over.

When moving the chair, make sure to hold the following locations

To transport the chair, hold the base plate and the up/down foot pedals. Do not lift up the chair by holding the upper seat unit only. Otherwise, the base unit may fall off and cause serious injury.

Be careful when reclining or raising the backrest

When reclining or raising the backrest, take sufficient care to ensure that customers' fingers or other objects are not between the backrest and the seat. Not doing so may result in bodily injury from pinching or other such accidents.

Notes for Use

1 Caution

Do NOT put things other than people on the seat

Putting things other than people may cause deformation, tearing, or corrosion of the upholstery.

Do NOT clean using chemicals or apply heat

If any chemicals are splashed on the upholstery parts, wipe off the chemical immediately. Splashed chemicals may cause discoloration or deterioration.

Caution on the adjustment of the headrest

- Be sure to adjust the headrest to any of the 11-level adjustment positions. Do not adjust the headrest to other positions. If the headrest moves during shaving, the customer may be severely injured.
- For back shampoo, if you recline the backrest with the headrest inserted, the chair or shampoo equipment may be damaged, injuring the customer.

Caution on the movement of the heelrest

Be sure to grasp the handle of the heelrest when moving the heelrest. Take care not to pinch foot of the customer or your finger in between the heelrest and step.

Caution on the handling of the reclining lever

When the reclining lever is tilted back, be sure to support and operate the backrest so that the backrest does not move suddenly.

Caution on the use of the cape holder

- · The withstand load of the cape holder is 10N (1 kgf/2.2 lbf). Do not apply unnecessary force to the cape holder.
- \cdot When not using the cape holder, be sure to return it to the storage position.
- When returning the cape holder to the storage position, keep your hands on it until it is stored completely to prevent a finger of the customer or user from being pinched between the cape holder and the armrest.

Caution on the use of the dryer holder

- The withstand load of the dryer holder is 50N (5 kgf/11 lbf). Do not apply unnecessary force to the dryer holder.
- \cdot When not using the dryer holder, be sure to return it to the storage position.
- \cdot When returning the dryer holder to the storage position, be sure to ensure that a finger of the customer or user is not pinched between the dryer holder and the body.

Caution on the use of the manicure ring

- \cdot Do not apply unnecessary force to the manicure ring.
- · Take care not to pinch a finger of the customer or user when inserting the manicure ring into the manicure holder.


Notes for Use with Upholstery

•Adherence of fabric dyes


The upholstery may be stained by coming into contact with fabric, belts or other such attire. In order to avoid infiltration by plasticizer when color has been adhered, apply a solution of neutral detergent diluted by about 10% to a soft towel and wipe off the color as soon as possible. After wiping off the color, wipe the area dry.

- •Caution for deterioration and color staining caused by contact
- Contact with things such as other plastic parts, paints, solvents, and adhesive tape may cause changes to the surface shine, cracking, deformation, or peeling.
- · Contact with newspaper or printed materials may cause color staining.
- · Contact with T-shirt prints, jeans and other such items may cause color staining from dyes in the upholstery.
- Contact with things like benzene, polish remover, or alcohol may cause the surface to discolor, dissolve, harden, soften, peel, extract plasticizer, or experience changes to its shine.
- · Using bleach or sheets that use bleach may cause discoloration or changes to shine.
- When placed next to a source of excessive heat such as an iron or heater, deformation or discoloration may occur. Shield the upholstery with a curtain or other such item so that it does not come into contact with direct sunlight. Otherwise, surface changes, shrinkage, discoloration, or fading may occur.
- Heavy objects placed on the upholstery for long periods of time may leave an impression and wrinkles may become unable to be removed.

Name of Components (Including Options)

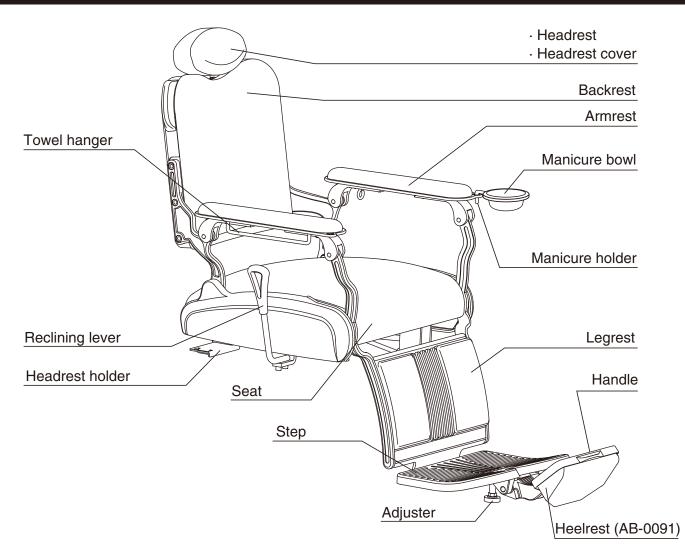

Name of Components (Including Options)

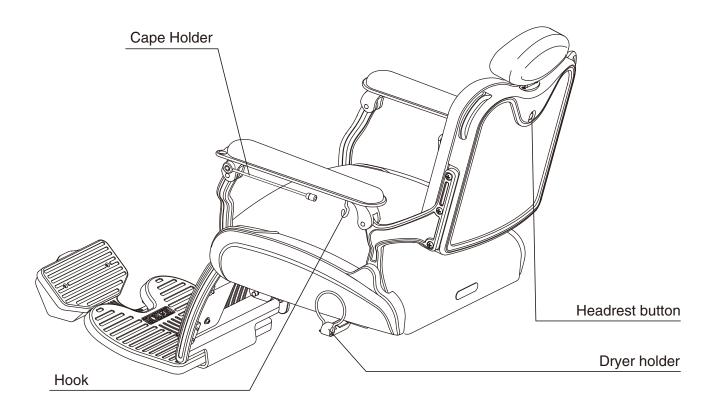

Component Materials

★ The casting components of this chair are a handmade one-off product. Different from mass-produced products, the casting components used for appearance of this product are made by hand piece by piece. Some convexoconcave and a hole may remain in the casting surface. Please understand that we have finished this product without putty because we think that the natural aspect of material is important.

Adjusting the Headrest

Inserting the Headrest

Note: The headrest is unnecessary for back shampoo and haircut.

Insert the headrest while pressing the headrest button.

You cannot insert the headrest unless you depress the headrest button.

2. Adjust the headrest to the height of the customer's head.

You can adjust the headrest to 11 height levels. You can pull up the headrest even if you do not press the headrest button. If you pull up the headrest too much, press the headrest button to temporarily lower the headrest and then adjust it again.

3. Fix the headrest at the height tailored to the customer.

You can fix the headrest at 11-level adjustment positions. The position where you can hear tick when pulling up the headrest is the position where the headrest can be fixed. Note: After adjustment, check that the headrest does not move in the inserting direction.


Be sure to adjust the headrest to any of the 11-level adjustment positions. Do not adjust the headrest to other positions. If the headrest moves during shaving, the customer may be severely injured.

Headrest button

Headrest button

•For back shampoo, if you recline the backrest with the headrest inserted, the chair or shampoo equipment may be damaged, injuring the customer


For back shampoo and haircut

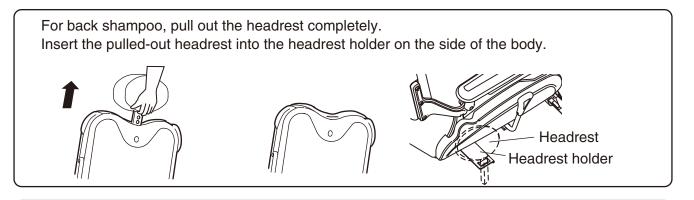

CAUTION When pulling out the headrest, be sure to ensure that metal fittings of the headrest do not hit the customer's head.

Using the Heelrest (AB-0091)

Use the heelrest so that it fits the customer's height and body shape.

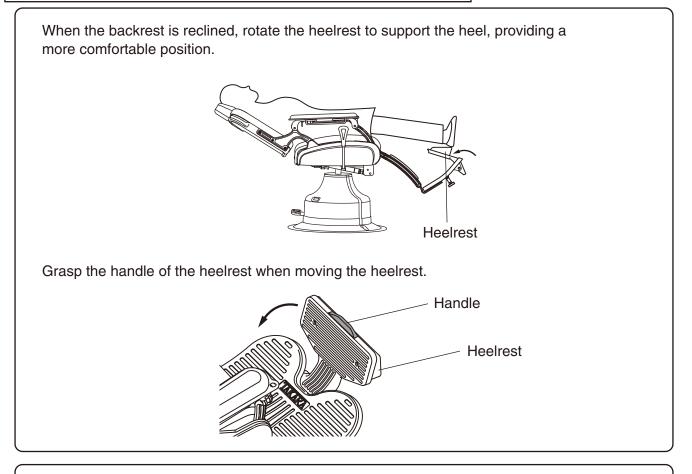


CAUTION Be sure to grasp the handle of the heelrest when moving the heelrest. Take care not to pinch foot of the customer or your finger in between the heelrest and step.

Reclining/Raising the Backrest

The backrest can be unlocked by the reclining lever. The backrest moves only when the reclining lever is tilted back.

- When reclining the backrest Tilt the reclining lever back.
 The reclining lever is retained by the gas pressure of the gas cylinder so let the customer lean back while supporting the backrest.
- When raising the backrest Tilt the reclining lever back.
 The raising force is supported by the gas pressure of the gas cylinder so support the backrest and then raise it.

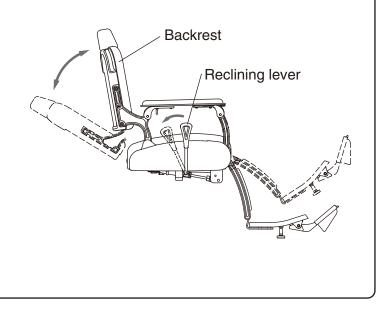


CAUTION When the reclining lever is tilted back, be sure to support and operate the backrest so that the backrest does not move suddenly.

Using the Cape Holder

Using the cape holder provides the following:


- · Good ventilation (making space between the customer and cutting cape)
- \cdot Easy handling of cut hair

1 Rotate the cape holder at the tip of the armrest forward.

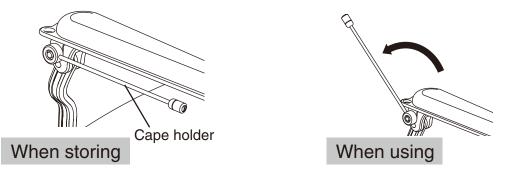

2 Pull the tip of the cape holder to pinch the cutting cape.

 Pull the tip of the cape holder from over the cutting cape.
 Pinch the cutting cape and release it.

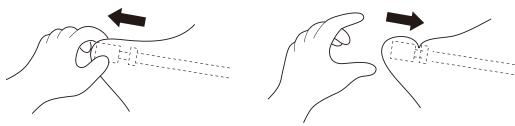


The withstand load of the cape holder is 10N (1 kgf/2.2 lbf). Do not apply unnecessary force to the cape holder.
 When not using the cape holder, be sure to return it to the storage position.
 When returning the cape holder to the storage position, keep your hands on it until it is stored completely to prevent a finger of the customer or user from being pinched between the cape holder and the armrest.

Using the Dryer Holder

The dryer holder is equipped in the rear of the left body.

Use the dryer holder as the temporary holder of a hand dryer during operation. Lay the ring of the dryer holder when you use the holder.

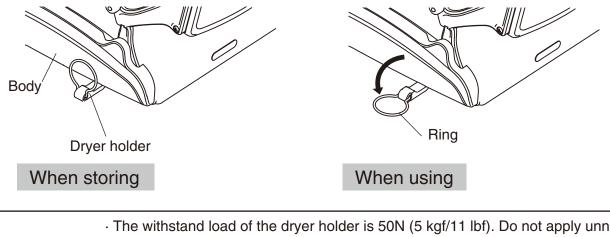


| | The withstand load of the dryer holder is 50N (5 kgf/11 lbf). Do not apply unnecessary force to the dryer holder. When not using the dryer holder, be sure to return it to the storage position. When returning the dryer holder to the storage position, be sure to ensure that a finger of the customer or user is not pinched between the dryer holder and the body. |
|--|---|
|--|---|

Using the Manicure Holder

The manicure holder is equipped at the tip of the armrest.

When using the manicure bowl, insert the manicure ring into the manicure holder and place the manicure bowl on the ring.

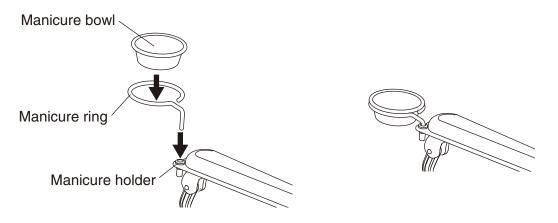

- \cdot Do not apply unnecessary force to the manicure ring.
- CAUTION Take care not to pinch a finger of the customer or user when inserting the manicure ring into the manicure holder.

Take care of the product after use and keep it always clean. If dirt is allowed to remain, mold may be generated.

■Maintenance of each section

Upholstery

Wipe the upholstery with soft and dry cloth.

If the dirt is heavy

By using a soft cloth dampened with neutral detergent diluted to about 10% with water, wipe out dirt. After that, wipe with a dry cloth.

Resin

Wipe the resin with soft and dry cloth.

If the dirt is heavy

By using a soft cloth dampened with neutral detergent diluted to about 10% with water, wipe out dirt. After that, wipe with a dry cloth.

Wipe the metal with soft and dry cloth.

Metal Do not wipe the metal with wet cloth because the metal hates humidity and water. If the metal is watered, wipe out moisture immediately. Moisture may cause rusting or malfunction.

| Do not use anything other than neutral detergent for cleaning. Particularly, never use the following: Volatile chemicals such as thinner, alcohol, nail polish remover, gasoline, or kerosene; acidic, alkaline and chlorinated detergent; strong disinfectant that corrodes metal; povidone-iodine (isodine solution); sodium hypochlorite; abrasive wax; abrasive sponges, etc. Do not use a brush or scrubbing brush for cleaning. It may scratch the surface, making it impossible to remove dirt. The metal and mechanical parts of the equipment have sharp portions. Be careful not to hurt your hands or fingers at the time of cleaning. Do not clean the upholstery with detergent including organic solvent or abrasives or bleach. Doing so may cause deterioration of the surface and change of texture and gloss. |
|---|
| sives or bleach. Doing so may cause deterioration of the surface and change |

To use the equipment that has not been used for a long time, clean before using and be sure to check that the equipment operates safely without any error.

Spray-type (especially hard type) hair-setting agent

When spray-type (especially hard-type) hair-setting agent is used, check the entire surface (including the upholstery) of the equipment for adhesion of hair setting agent. If adhesion is found, wipe it off promptly. If it is left unremoved, the adhered hair setting agent gets hard, making the surface rough. In particular, the rough texture becomes more conspicuous and noticeable on a flat portion such as a resin cover.

Note: Action to be taken when the hair setting agent has become hard

If hair setting agent is stuck and become hard, remove it with ethanol. However, if a substance that is stuck to the resin cover or upholstery is removed with ethanol many times, the surface is degraded, resulting in loss of gross or generation of cracks. The best method to prevent it is to wipe it out promptly when adhesion of hair setting agent is found.

Daily Inspection

To ensure safe use, inspect the equipment according to "Daily Inspection Procedure" described below.



Be sure to inspect the product every day by following the description of "Daily Inspection Procedure." Using the product without conducting daily inspection may cause breakdown or accident.

Daily Inspection Procedure

Follow the inspection procedure below to ensure safe and long use of the product.

Items to be checked every day


| Item to be inspected | How to inspect | In case of × as a result of inspection |
|-----------------------------------|---|---|
| Proper operation of the equipment | Inspect that you can raise and recline the backrest with the reclining lever. Inspect that the equipment does not wobble and abnormal sound does not occur during operation. | The customer may be unable to get on and off the chair safely. If the operation is abnormal, contact your local dealer or TAKARA BELMONT. If the equipment wobbles or abnormal sound occurs during operation, contact your local dealer or TAKARA BELMONT. |
| | Inspect that the backrest stops at any position and does not move. | If the backrest does not stop, contact your local dealer or TAKARA BELMONT. |


Specifications

| Model No. | AB-0091 | | |
|---------------------------------------|--|--|--|
| Maximum load | 1350N (135 kgf/298 lbf) Backrest withstand load, legrest withstand load: 600N (60 kgf/132 lbf | | |
| loau | Headrest withstand load: 100N (10 kgf/22 lbf) | | |
| Mass | 68.5 kg | | |
| Heelrest | Provided | | |
| Usage environment | Temperature 0 ~ 40°C Humidity 10 ~ 95% Air pressure 700 ~ 1060 hPa | | |
| Transportation / Stora environment | age Temperature $-20 \sim 70^{\circ}$ C Humidity $10 \sim 95\%$ Air pressure $700 \sim 1060$ hPa | | |


Dimensions (the figures represent standard values. Unit: mm/inch)


<AB-0091 with AN-008H>

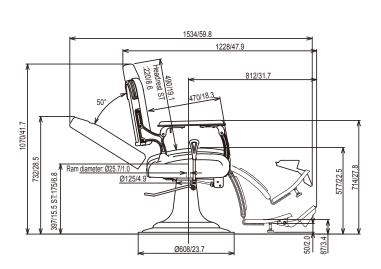

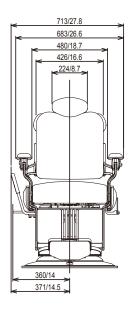

<AB-0091 with AN-0090>

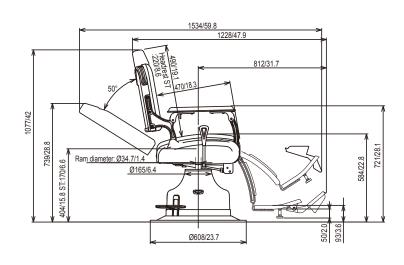

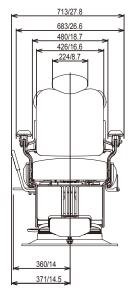



Specifications

| Model No. | AB-0092 | | |
|---------------------------------------|--|--|--|
| Maximum load | 1350N (135 kgf/298 lbf) Backrest withstand load, legrest withstand load: 600N (60 kgf/132 lbf) Headrest withstand load: 100N (10 kgf/22 lbf) | | |
| Mass | 66.5 kg | | |
| Healrest | Not provided | | |
| Usage environment | Temperature 0 ~ 40°C Humidity 10 ~ 95% Air pressure 700 ~ 1060 hPa | | |
| Transportation / Stora environment | age Temperature $-20 \sim 70^{\circ}$ C Humidity $10 \sim 95\%$ Air pressure $700 \sim 1060$ hPa | | |


Dimensions (the figures represent standard values. Unit: mm/inch)


<AB-0092 with AN-008H>

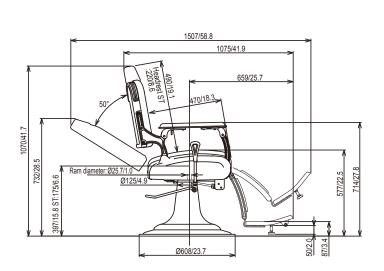

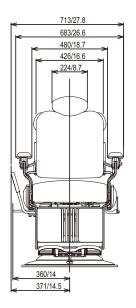

<AB-0092 with AN-0090>

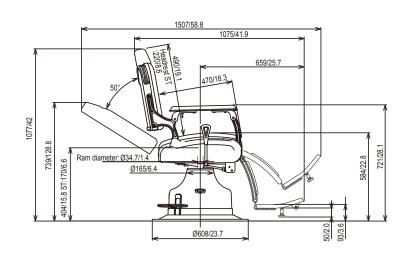

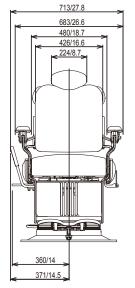

Standard Period of Use


- \cdot The standard period of use for this product is 10 years.
- The standard period of use acts as "a guide to the standard period of time that each product can be used safely and without trouble when under standard usage conditions, appropriate maintenance and inspection (including parts replacement) has been performed and the product has been used." This is not a warranty period. The "standard period of use" will differ depending on the environment that the customer uses the product in and its frequency of use. For maintenance after the standard period of use has passed, consult your local dealer or TAKARA BELMONT.

When Disposing of This Product

Properly dispose of this product or its replacement parts in accordance with the rules and regulations at the time of disposal.

ΜΕΜΟ

ΜΕΜΟ

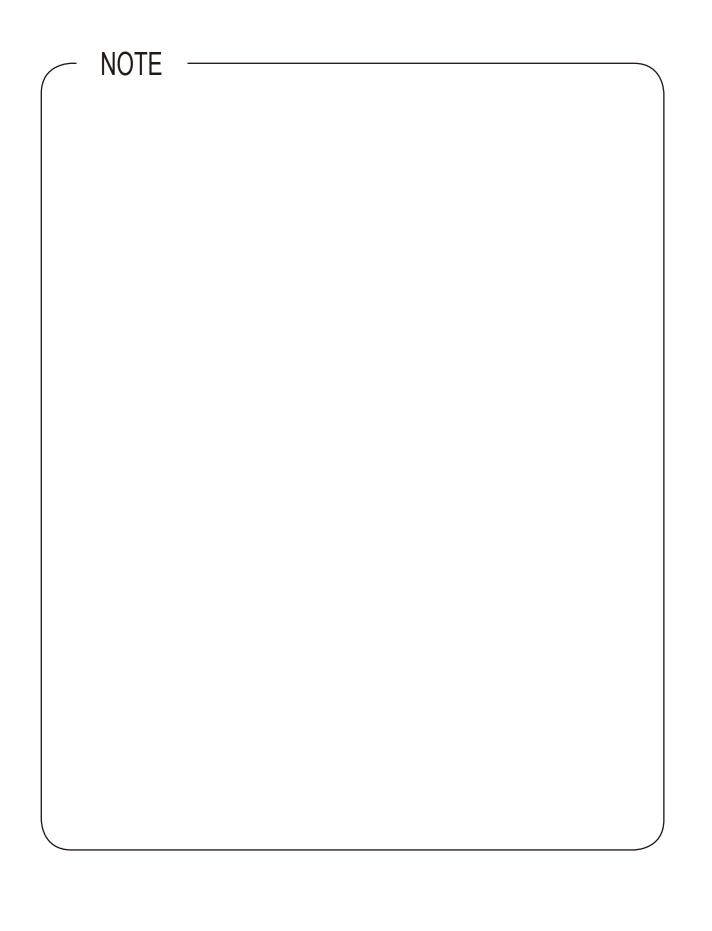



TAKARA BELMONT CORPORATION2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, JapanTEL:81-6-6213-3523FAX:81-6-6211-5745Printed in Japan 1710

Printed in Japan 1710 BOOK.No : 1E04TUCE Original instruction