


"YUME-iXi" Installation Instruction

■ YUME-iXi

AY-YMIXILGL1US	YUME-iXi / Ltype / GL1 (WHITE)
GL2	YUME-iXi / Ltype / GL2 (BLACK)
GL3	YUME-iXi / Ltype/GL3 (DARK BROWN)
GL4	YUME-iXi / Ltype/GL4 (MAROON)
AY-YMIXIHGL1US	YUME-iXi / Htype / GL1 (WHITE)
GL2	YUME-iXi / Htype / GL2 (BLACK)
GL3	YUME-iXi / Htype / GL3 (DARK BROWN)
GL4	YUME-iXi / Htype/GL4 (MAROON)

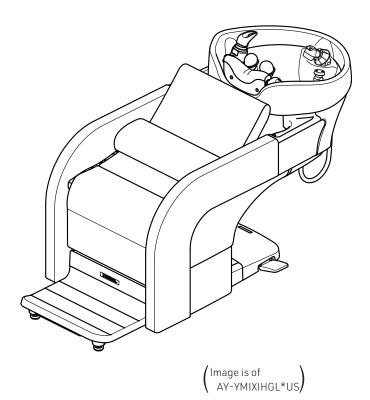

Contents Before installation 2 Usage conditions 3 Content of packaging 4 Carrying the main body 5 1.Installation of Basin Unit 2.Piping 8 3.Installing the Step 10 4. Attaching the Seat Part 12 5. Procedure for swapping the reclining 13 pedal from left to right. 6.Attaching the External Covers 14 After installation 15 **Dimensions** 16 Unit fixing position and plumbing layout 17 MFMO 18

To the installer

- The instructions should be thoroughly read and understood before installation to ensure that YUME-iXi is installed correctly.
- After installation, give these instructions to the customer.

To the customers

- Customers must ask professional to install YUME-iXi.
- Customers must not install YUME-iXi by themselves.
- Customers must store these instructions in a safe place so as not to lose them.
- * The actual shape of YUME-iXi and the images and dimensions listed in these instructions may be modified and are subject to change without notice.

• The precautions listed here are to ensure that YUME-iXi can be installed safely, and to prevent any danger or risk to the person installing YUME-iXi or those around them. All of these precautions are important for safety. Takara Belmont is not responsible for any damage or risk to the person installing YUME-iXi or those around them due to accidents if YUME-iXi is installed without adhering to the precautions.



Caution

If YUME-iXi is installed after ignoring this symbol,

"there is the risk of light or moderate injury or physical damage".

Note: Plumbing should be performed by a qualified technician and should meet all national and local plumbing codes and ordinances. It is the responsibility of purchaser and/or plumber to conform to national and local codes and ordinances.

Takara Belmont does not take any responsibility or liability for plumbing and installation.

Before installation

■Installation of pipes

The following are important points to adhere during the installation of pipes. Read through the details carefully and ensure that the pipes are installed correctly.

OWhen installing this product, ensure that installation of pipes adheres to the instructions. Installing pipes without reading through the precautions will mean water may not mix properly, and a set temperature will not be achieved.

OThis product is designed for indoor installation. Always install this product indoors.

■Precautions during installation of pipes

OWater supply pipe

- The installation should be performed in conformity with the laws and regulations of the area where the product is to be installed.
- ODo not use pipes made of materials that may introduce rust for the water supply pipe.

In general, VP pipes or other materials specified by regulations in that particular region, are recommended for installation.

- OEnsure to install 3/8"pipes for water and hot water supply pipes and 1-1/2"pipes for drain pipes.
- OAlways use a reamer to deburr the ends of cut pipes.
- OAvoid using inverted U-shaped pipes (siphon) as these can cause air to become trapped.
- OAlways connect hot water pipes and water supply pipes after removing all contaminants such as dirt, sand and oil as these can cause problems.
- OAfter connecting the pipes and testing water flow, clean the filter and shower head.
- OThe slope of the water service pipe should be determined in conformity with the laws and regulations of the area where the product is to be installed.
- OEnsure that the drain pipe is installed at a gradient of 1/4" for a diameter of ϕ 3.0" or less, or 1/8" for a diameter of ϕ 3.0" or more.
- ODo not connect the hot water pipes and water supply pipes in reverse.
 - Connecting pipes in reverse will mean the temperature of water cannot be controlled properly by the water taps, which can cause problems including burns.
- OEnsure that the hot water pipes from water boilers are only run over a short distance so as to minimize resistance. Longer pipes can cause fluctuations in temperature and poor hot water delivery.
- OAlways wrap pipes with lagging material after installation is complete.

OWater boiler pipes

- In general, the same diameter and same pressure is recommended for main hot water pipes and main water supply pipes.
- Ask professional to install water boiler.
- OAvoid the anchor positions when installing the pipe risers.
- OEquipment comes with hair catchers installed.

■ Request measures to prevent water leakage under the floor and downstairs

Be sure to take the necessary precautions to prepare for and prevent possible water leaks.

OUse waterproof flooring materials.

Olf the floor has an opening, cover the opening when completing the interior finishing (waterproofing).

OInstall all pipe packings.

■Floor surface

OEnsure that the material or finishing of the floor surface is waterproof or has a waterproof coating applied.

OAlways ensure that the floor surface is horizontally level.

OEnsure that the floor surface is smooth and free from bumps around the attachment areas.

OPipe risers

[L type/H type]

Hot water / water supply	Rc 1/2" ; pipe risers from floor; rise dimensions : hot water 3"; water 3"
Drainage	1-1/2" ; pipe risers from floor; rise dimensions : 3"

Olf the floor surface is tiled, cracks may occur when fastening the bolts during installation of the YUME-iXi main body.

If this looks likely to happen, use the main body attachment diagram and template as a reference and change the material of the attachment area that is in contact with the floor to another such as plywood or mortar.

OThe following levels of strength are required for the floor surface.

Wooden floor	Plywood thickness of 1-1/2" or more (two sheets joined together)
Mortar floor	Mortar thickness of 2" or more
Special floor (stone finish)	A foundation with levels of strength listed above around the installation areas is required.

O If the floor surface is ceramic tile, marble, cultured marble, mirror-finish stainless steel, or another smooth, flat material, then when the customer sits down, the step may not grip the floor and malfunction, and could lead to falls or other problems. If such floor surfaces are used, do not use the step as is. Ensure that the "Floor sheet" (material: EVA resin) (sold separately) is used.


Usage conditions

■ Hot water supply and water supply conditions

Water used	Public water supply (do not use non-drinkable well water or water that contains rust or sand.) If the water hardness is 80 ppm or highe r, install a water softener to prevent the buildup of scale within the basin body. Aeration may be minimal when using shampoo even if drinkable well water is used, so a water softener should be installed.
Hot water supply, water supply pressure	 Use a pressure between 14.5 and 58.0 psi. If multiple YUME-iXi are used, ensure that the pressure does not drop delow 14.5 psi. Set the water supply pressure ≥ hot water supply pressure. Set the difference between the hot water supply pressure and water supply pressure to within 29.0 psi.
Hot water temperature into the product	 Set the hot water temperature to 176°F or less. Set the temperature 50°F or higher than the shower temperature used.
Water boiler	• Do not use steam with the hot water supply .

Content of packaging

Basin Unit

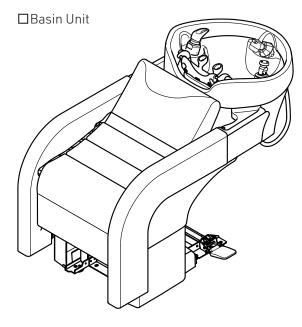

□ Neck cushion

□Head pillow...2





□ Drain cap

☐ Hair catcher














M4×10: Truss-head screw (black) ...6 ...2 M5 : Urea cosmetic nuts M6×15: Truss-head screw ...2 M6×35: Truss-head screw






□Basin side carriage jig



□Chair side carriage jig



[Htype]

☐ Maintenance Cover



□Step



[Ltype]

☐ Maintenance Cover (small)




□Step (low)



□Sponge



☐Pipe packing



- □Installation instructions...1
 □Operating Manual...1
 □Paper template...1
 □YUME SPA Technical Manual...1
- □ Operation Instruction Manual for Mohair tape ...1

Cover part


☐Trap cover



☐ Base cover




Seat part



☐Screen sheet

☐ Back support cushion




Carrying the main body

■ Carrying the Basin Unit

- 1 Detach the basin unit from the skid.
 - OWhile supporting the basin with hands, remove the hexagonal head bolts (phillips head) (M8 x 50mm) from the unit base (four locations).


/!\ Caution

- •Install it in the skid until the basin unit is built. There is a fear that the product is turned over.
- •Always have at least two people to carry the main body and hold the basin when remove the bolt. Otherwise the basin is likely to fall.

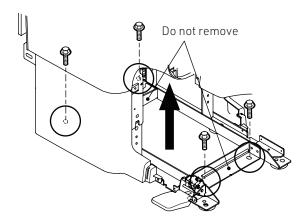


- 2 Attach the carriage jig [Option].
 - < Chair side carriage jig>
 - 1) Turn over the legrest of the seat.

2 Remove the front of the bottom protection mat from the seat frame to see the screw holes.

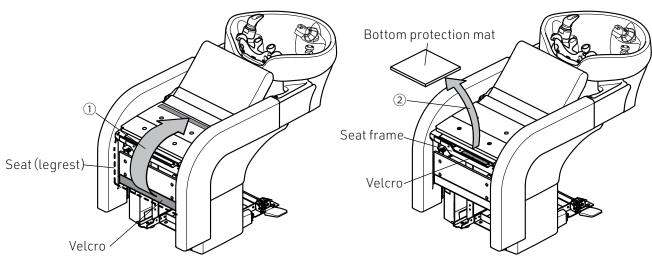



3 Attach the carriage jig to the seat frame with bolts (2 locations)

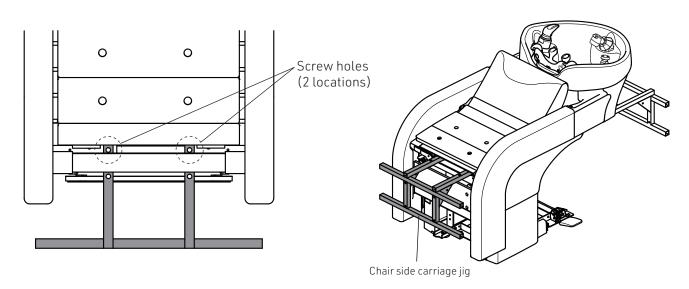

<Basin side carriage jig>

- 1 Temporarily remove the bolt on the right side of the carriage jig.
- Insert the bolt for the left side of the carriage jig into the position alignment hole.
- 3 Attach the right side of the carriage jig to the frame using the removed bolt.

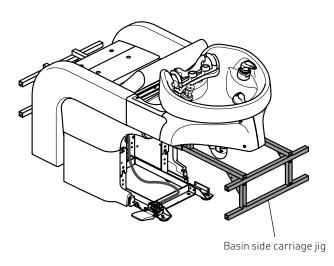


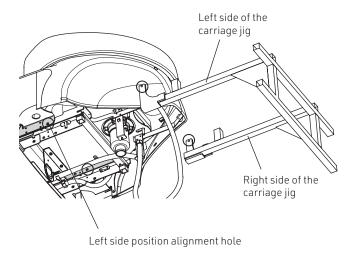

Precaution for carrying the basin unit

OWhen carrying the basin unit, be sure to hold it by the carriage jig. Do not hold it by the mixer pipe located at the side of the basin.

*When carrying on stairs, please hold it at the lower handle.

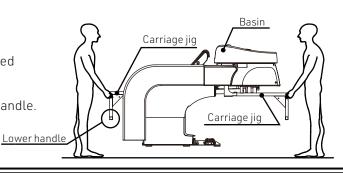



Caution

- Since the basin unit tends to tumble, be sure to carry the basin while maintaining balance.
- Do not carry the basin unit with the seat parts on it.
- Never hold the unit at the basin (ceramic). Failure to follow this instructions may result in breakage of
- Do not hold the main body cover. Doing so may cause damage to the main body cover.
- Take care when handling the basin as it is heavy and fragile.
- Do not drag the unit. The foot part of the basin is made of steel, so dragging it may damage the floor surface or crack the basin itself.
- The basin may become damaged if scratched by metallic objects such as watches or belts. Remove all metallic objects such as watches when carrying the basin.
- Take extra care to ensure not to damage the covers.
- Do not touch the basin body pipes. Doing so may cause water leaks.
- The basin is unstable when it is not fixed to the floor.

1

Installation of Basin Unit

1 Marking the bolt anchor points

- (1) Set the dedicated paper template on the floor, and align it with the water, hot water, and drainage pipe risers.
- (2) Mark the bolt anchor position of the basin unit.
- (3) Drill holes at the bolt anchor position of the basin unit.
- (4) Remove the paper template.
- Request measures to prevent water leakage under the floor and downstairs Be sure to take the necessary precautions to prepare for and prevent possible water leaks.
 - Use waterproof flooring materials.
 - If the floor has an opening, cover the opening when completing the interior finishing (waterproofing).
 - Install all pipe packings.


2 Attach pipe packing


- (1) Cut a slit in the pipe packing to suit the position of the pipes to be installed.
- (2) Peel away the sheet from the adhesive surface of the pipe packing and stick to the floor surface.
- (3) Cut out a circle around the slit cut in the pipe packing to suit the pipe surface, and fill in any gaps with caulking materials.



Caution


- Always attach pipe packing and apply caulking materials to the areas around the pipes so that there are no gaps, in order to prevent condensation within YUME-iXi or water seeping on the floor in the event of water leaks.
- If pipe packing is not used, condensation may cause water to pool on the floor, structural parts may start degrading and malfunctions may occur.

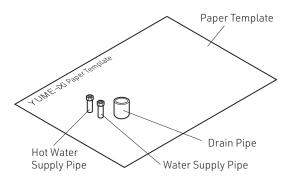

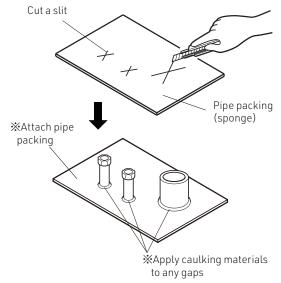

3 Fixing the Basin Unit on the Floor

Align the basin unit with the marked positions on the floor and anchor the unit with the bolts (6 locations).

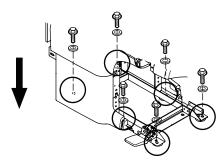

Bolts to be used (supplied with the shampoo unit):


- Plywood Floor
 Hexagonal head tapping bolt + flat washer
 (8 mm x 65)
- Concrete Floor
 Anchor bolt + plain washer
 (M8 x 70, Pilot drill hole 8.5 mm (0.33"))
 (Use the wrench with the opposite side distance of 1/2".)




Caution

Be sure to use a plain washer when securing the bolt.

Installation process for anchor bolts



 Drill open a hole of the specified diameter and depth.




(2) Remove the dust from each anchor hole by cleaning with a vacuum cleane r.


M

Caution

The strength of the anchor bolts will be reduced if they are hammered into the hole while touching the bottom. Open up a gap.



(3) Insert the anchor bolt and tap it with a hammer until the center pin makes contact with the bolt head.

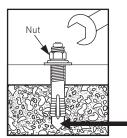

(4) Adjust the fastening strength of the nut using a wrench.


2 Piping

[Before piping installation]


"Hair trap", "Drain hose", "Turn valve" and "Flexible pipe" is not included. Prepare those parts that suited the local statute.

1. Attach drain hose to a hair trap and installed drain pipe.

Drain hose pass through in the hole of sheet metal parts.

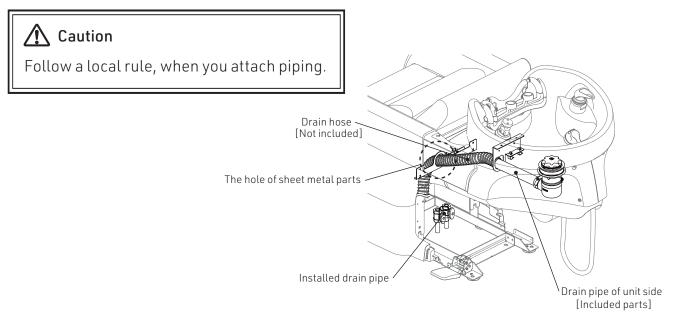

2 、Installing the Flexible Pipe

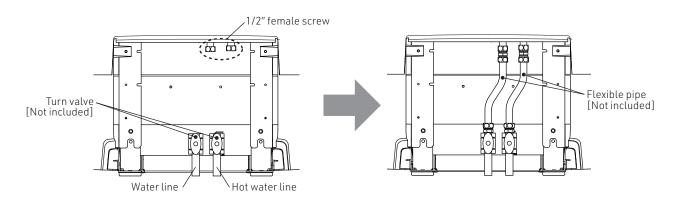

3 Test water flow



Caution

Always test the water flow to prevent accidents during use.


- * Test the water flow and inspect the following items. The hot water may be slightly tainted at the start of the water flow test,however this does not indicate any problem.
- (1) Is there no water leaking from the pipe joints?

 The pipe joints may come loose during transportation, so check the joints within the bowl thoroughly.
- (2) Are the hot water supply and water supply pressures at the same, stable pressure?
- (3) Can temperature be controlled properly?
- (4) Check that the shower outlet flow is sufficient.

Cleaning


After the hot water becomes clear during the water flow test, always clean the sprinkling filter unit. Failure to do so can result in insufficient flow rate.

Remove and clean any dirt trapped within the sprinkling filter unit.

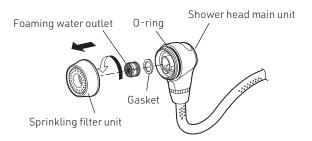

Installing the Step


- 1 Install the step to the basin unit.
 - ① Check that the step shim is attached with tape to the bottom of the slide rail.

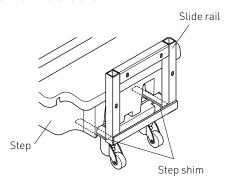

3 Attach the two locations on the top of the step slide rail to the basin unit using truss-head screws. (M6 x 15, 2 screws)

**Assemble while the step is retracted. (packing state) Tighten the screws while pushing down on the upper surface of the slide rail.


2 Remove the screws fixing the legrest. (M6 x 15, 2 screws)

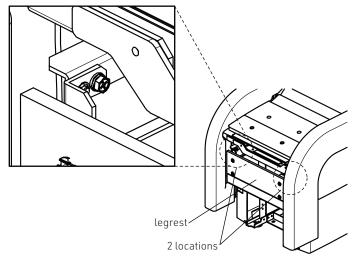




Caution

If the step is installed while it is slided out, this could lead to the step rattling, poor sliding operation, and noise. Ensure the step is installed while fully retracted.

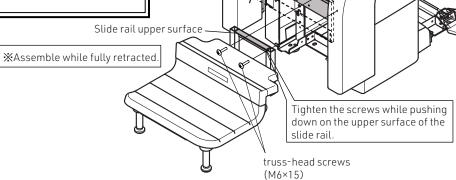

- 4 Slide out step.
- ⑤ Attach the two locations on the bottom of the step slide rail to the basin unit using truss-head screws. (M6 x 35, 2 screws)

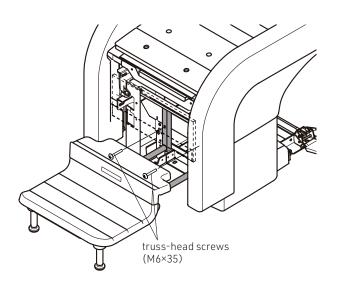

- © Leave the slide rail temporarily attached by loosening the truss-head screws on the top of the step slide rail. (M6 x 15mm, 2 screws)
- Temporarily attach the bottom of the step slide rail to the basin unit with the truss-head screws. (M6 x 35mm, 2 screws).
- 8 Fully retract the step. Fully retract the step by tilting up the step while lifting the slide rail. Lift up the slide rail Step Slide rail Lift up step



Caution

- When retracting the step, the step shim may catch, and may not go fully in. Check that the step is fully against the stopper.
- When sliding the step, dragging the adjuster without lifting up the step may result in damage to the floor surface. When sliding the step, ensure it is lifted up and that the casters are used.
- If the step is installed while it is slided out, this could lead to the step rattling, poor sliding operation, and noise. Ensure the step is installed while fully retracted.
- 9 Fully tighten the truss-head screws temporarily attached in 6. When tightening the screws, do so while pushing down on the upper surface of the slide rail.
- 10 Slide out the step.
- 1 Fully tighten the truss-head screws temporarily attached in 2. (M6 x 35mm 2 screws)
- 12 Remove the step shim.




Caution


The step shim is a fixture used when installing the step. After use, ensure that the step shim is removed and stored with this manual. If the step shim is lost, then re-installing the step after it has been removed for repairs or the like may not be possible.


4 Attaching the Seat Part

1 Attach the screen sheet to the base side cover.

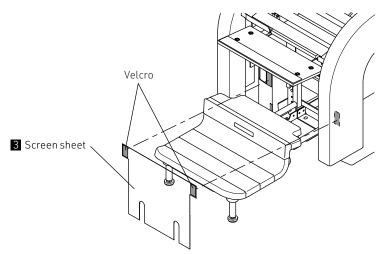

2 Attach the legrest.

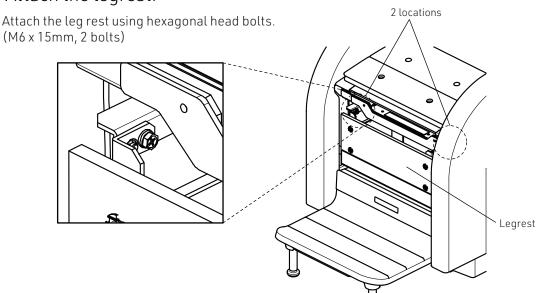


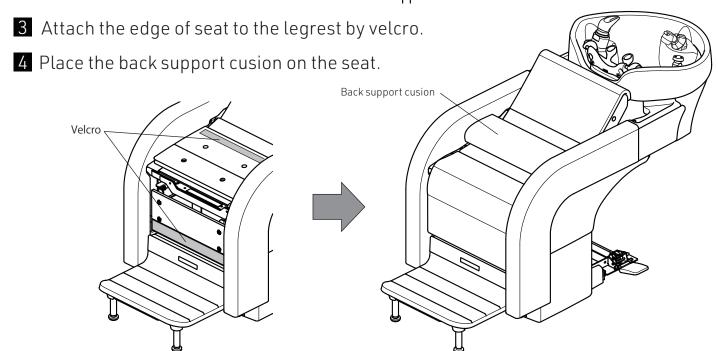

5 Procedure for swapping the reclining pedal from left to right.

This product has a reclining pedal on its left side.


Depending on the salon layout, if it is necessary to install the reclining pedal on the right side, then swap the position of the reclining pedal from left to right in accordance with this manual.

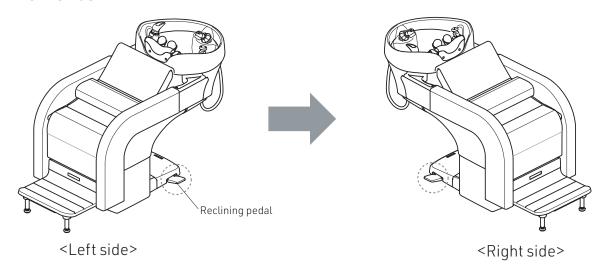


- Remove the maintenance cover and the base cover.

 [Base cover: Truss-head screws M4 x 10mm (Black), 6screws]
- 2 Remove the reclining pedal and the base cover attachment.


[Reclining pedal : Truss-head screws M5 x 12mm (Black), 3screws]
[Base cover attachment : Hexagonal head bolt M5 x 14mm, 3screws]




3 Swap the reclining pedal and the base cover attachment fitting from left to right.

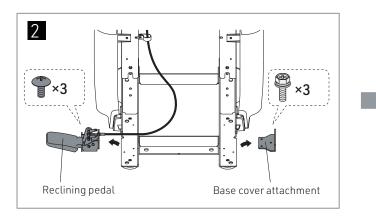

- 4 Check that pressing the reclining pedal with your foot reclines the backrest, and lifting your foot off the reclining pedal fixes the backrest in place.
- 5 Attach the base cover and maintenance cover.

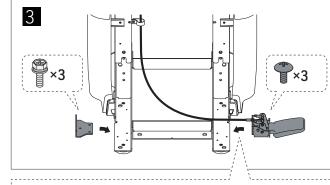

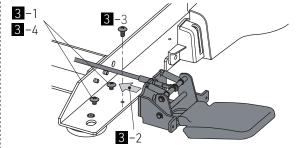


- 3 –1: Temporarily attach the 2 truss-head screws.
- 3 −2 : Slide the reclining pedal in.
- 3 -3: Fix using the third truss-head screw.
- 3 –4: Firmly tighten the temporarily attached screws.

6 Attaching the External Covers

1 Attach the trap cover to the basin unit.

The trap cover is fitted into the screw section at the bottom of the cover bracket under the basin, and can be attached using urea cosmetic nuts in 2 locations.


- ① Place the trap cover edge tabs on the edge of the frame cover.
- ② Insert the trap cover as if rotating it into place with the tabs in ① as a fulcrum while pushing both edges inwards.
- ③ Position the screw sections so they pass through the trap cover attachment holes, and when the screws emerge from below, fix with urea cosmetic nuts.
- 2 Attach the base cover to the base using truss-head screws.
 (M4 x 10, black, 6screws)

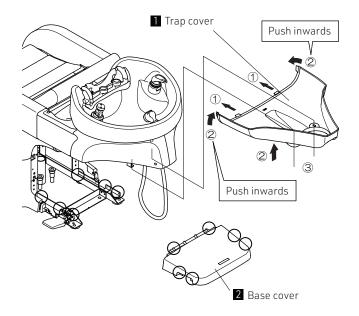

3 Attach the maintenance cover.

The maintenance cover can be attached using magnets in 2 locations.

- ① Insert the tab at the bottom of the maintenance cover into the base cover.
- ② Attach the maintenance cover as if rotating it into place.

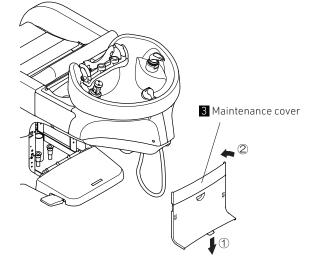

After installation

Inspection

Inspect the following items.



Caution

Be sure to execute the inspection without fail to prevent accidents during operation.

- (1) Check that there are no missing screws or other parts.
- (2) Check that there are no loose parts on the shampoo unit or the chair. If any part of the shampoo unit or the chair is loose, check the bolts at the joints again.
- (3) Check that there are no cracks or contamination on the basin.
- (4) Check that there are no problems, such as flaws on the external appearance.
- (5) Check that there are no water leaks on the floor.


Attach neck cushion

(1) Set the neck cushion to the metal fittings in the direction as shown in the image.

(2) Attach the seat side snap buttons of the neck cushion to the fastening pins on the metal fittings.




The fastening pins can be removed. Take care not to lose the fastening pins.

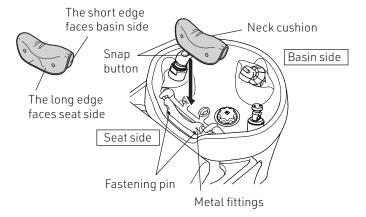


Snap button

(3) Adjust the shape of the neck cushion to suit the metal fittings, and attach the basin side snap buttons of the neck cushion to the fastening pins.

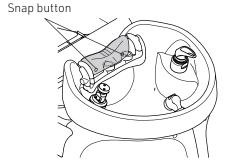

Attach head pillow

Insert the head pillow in the direction as shown in the image.

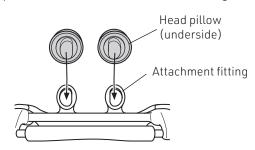




Dimensions

Outline drawing (Unit:inch)

H:When operated from standing position


L:When operated from seated position

■ Top View

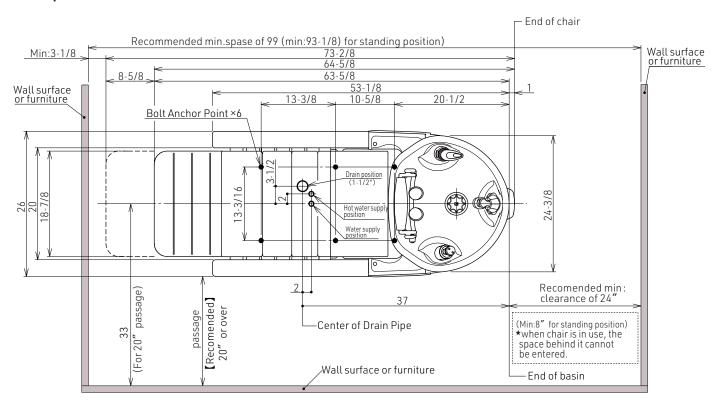


^{*}Figures shown above are for seating a customer about 170cm in height. When attending a taller customer, please allow sufficient leeway. Basin and seat dimensions may vary from product to product.

■ Side View

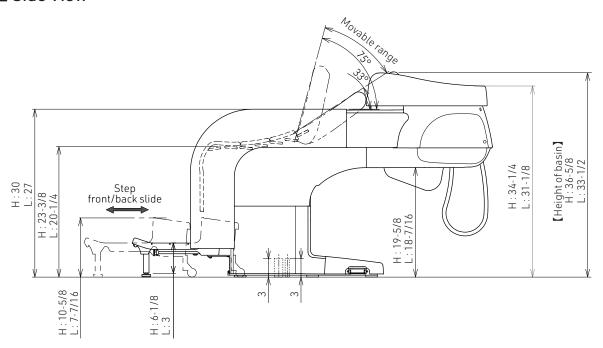


Unit fixing position and plumbing layout

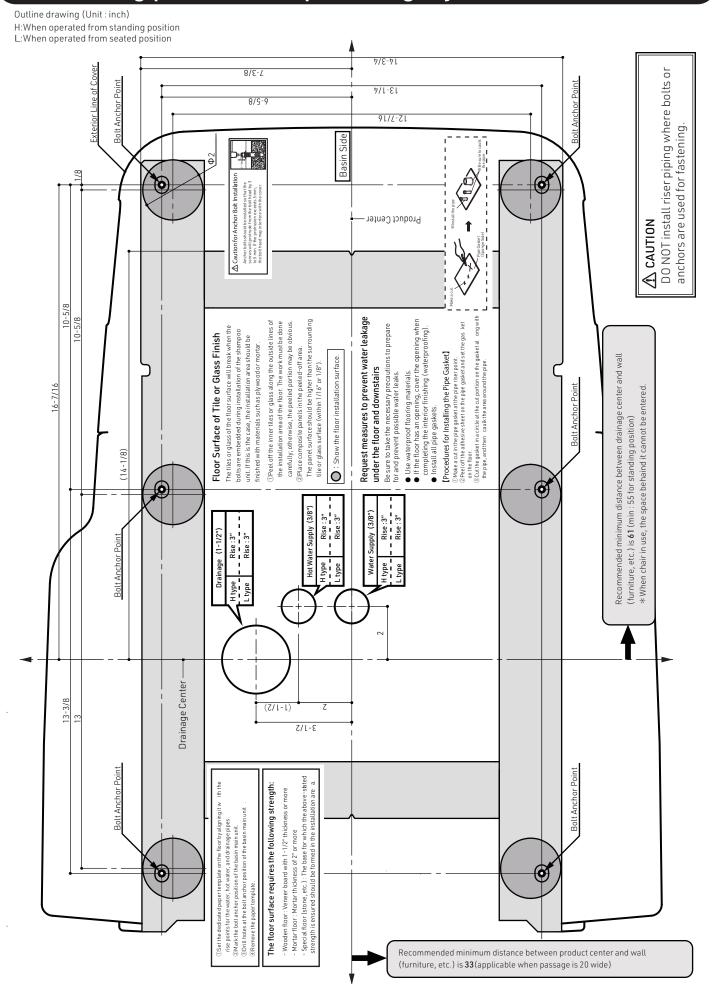

MEMO

MEMO

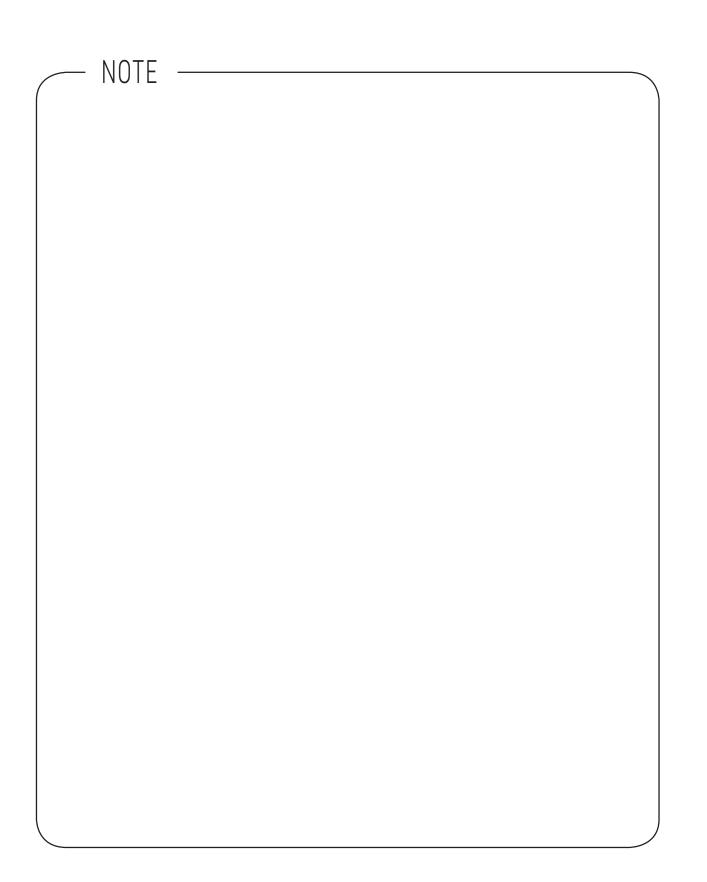



TAKARA BELMONT CORPORATION

U.S.A

101 Belmont Drive. Somerset,NJ 08873 800-526-3847

JAPAN

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

Book Number

1E043YA0