
YUME QUICK OPERATION GUIDE






For details and safety information see the operating instructions.


https://beauty.takarabelmont.co.jp/manual-site/

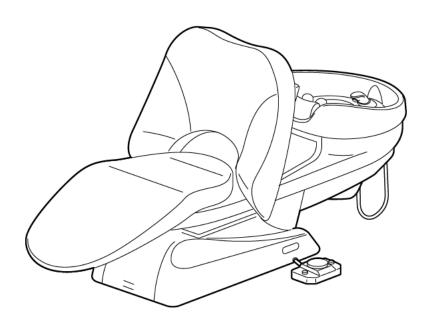

EX-YML : left side foot control

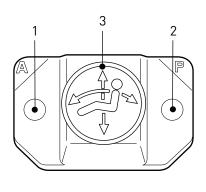

EX-YMR: right side foot control

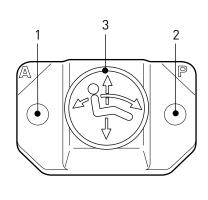

1 Auto Return Switch




Seat fully lowered / Backrest upright position

2 Preset Switch



Chair will move to the preset position automatically



- 1) Set the chair to the desired position
- 2) Turn off the main switch
- 3) While depressing the Preset Switch, turn on the main switch
- 4) Keep depressing the Preset Switch until the buzzer sounds, then release

3 Manual Mode Control

Seat lifting


Backrest reclining




Backrest raising

Seat lowering

Shampoo Basin

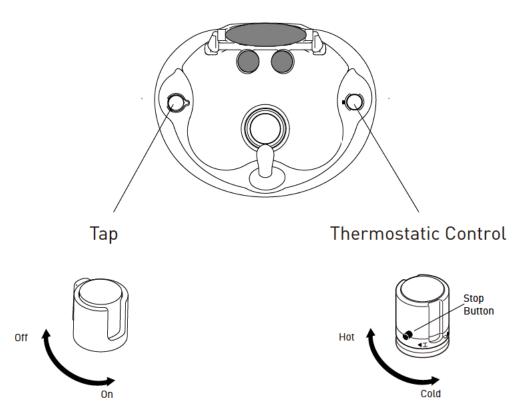


To adjust the temperature over 40 degrees, turn the knob while pressing the Stop Button

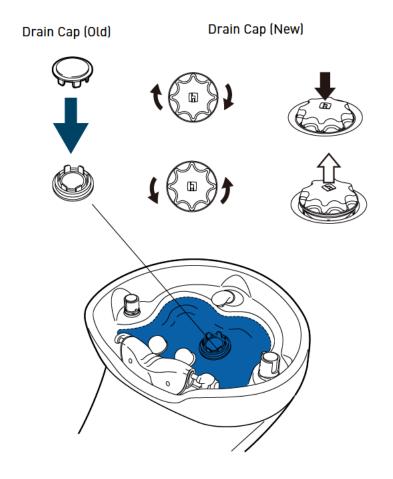


<YUME shower head>




Shower head holder

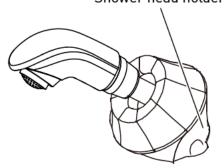


Shower Head Holder

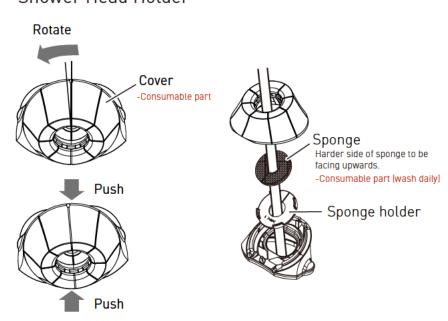


1 Attach the Neck Cushion and Head Pillow.

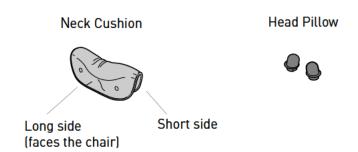


2 Attach both sides of the Neck Cushion with snap button.

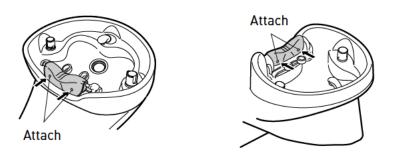


3 Attach the head pillow as shown below.

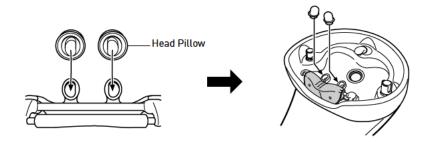


1 Turn on the power.

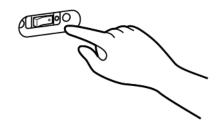


2 Press the auto return switch to bring the chair to its initial position.

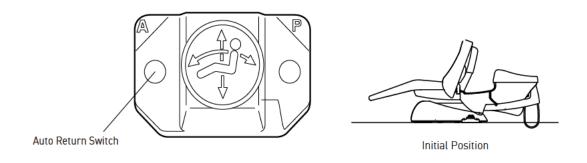

Instruct the customer to sit from the side, then face front.

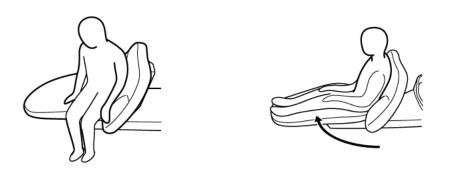


4 Press the preset switch (or manual mode control) to bring the chair to its approximate position.

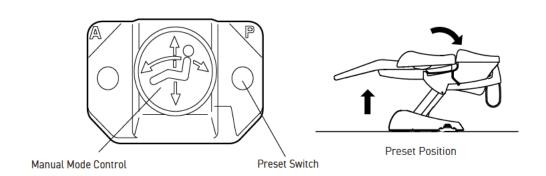

5 Adjust the chair height according to the shampoo technique.

<Sitting position>



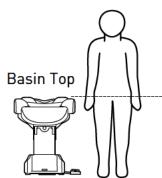

The basin top height should match the practitioner's hip



Do not operate the chair while the practitioner is sitting or when the stool is in the way.

It may cause physical injury or property damage.



<Standing position>


Rear Shampoo




Side Shampoo




6 After the shampooing, return the chair to its initial position.

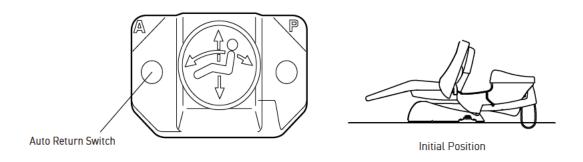

7 Wipe off the remaining water after use.

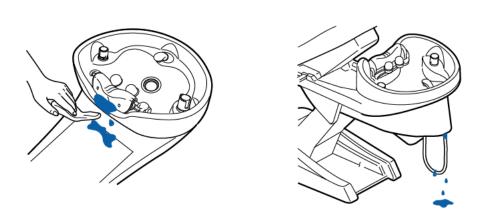

8 Clean the consumable parts.

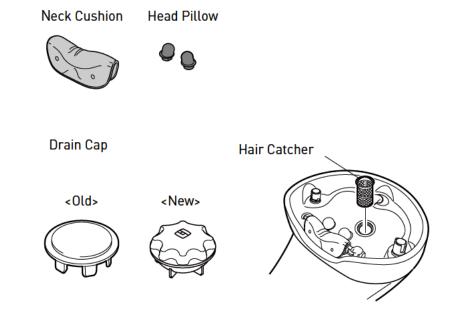



TAKARA BELMONT CORPORATION

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL: 81-6-6213-5945 FAX: 81-6-6212-3680