


YUME

QUICK OPERATION GUIDE

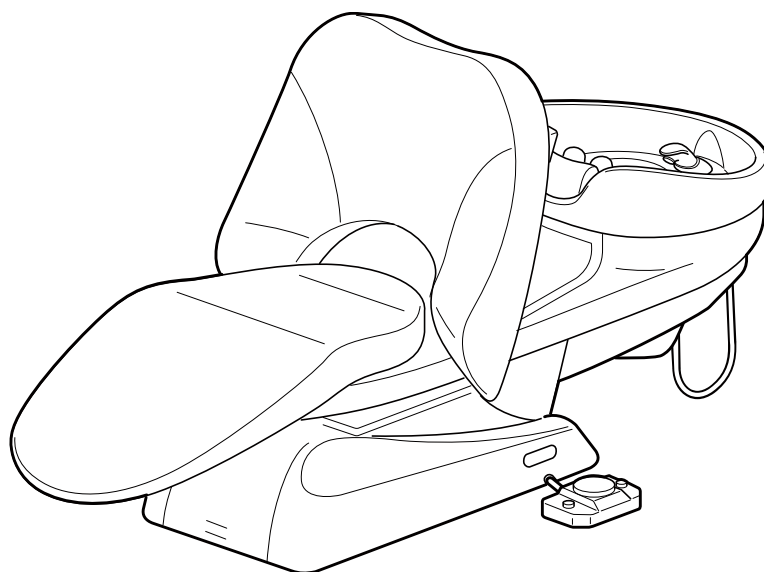


For details and safety information
see the operating instructions.

<https://beauty.takarabelmont.co.jp/manual-site/>




1 Foot Control

EX-YML : left side foot control

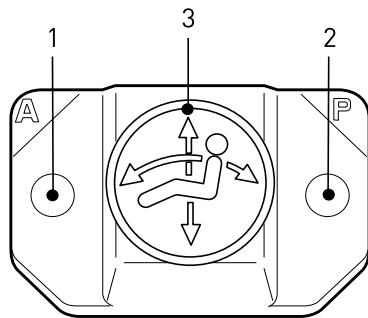

EX-YMR : right side foot control

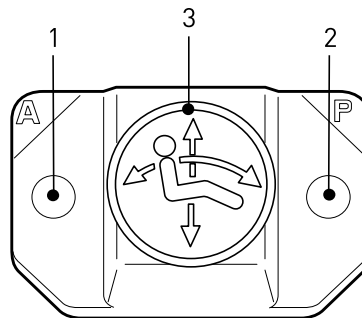

1 Auto Return Switch



Seat fully lowered / Backrest upright position

2 Preset Switch




Chair will move to the preset position automatically


How to set the preset position

- 1) Set the chair to the desired position
- 2) Turn off the main switch
- 3) While depressing the Preset Switch, turn on the main switch
- 4) Keep depressing the Preset Switch until the buzzer sounds, then release

3 Manual Mode Control


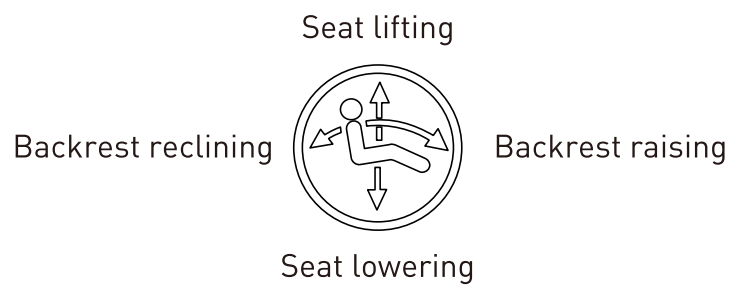


2 Shampoo Basin/Shower Head


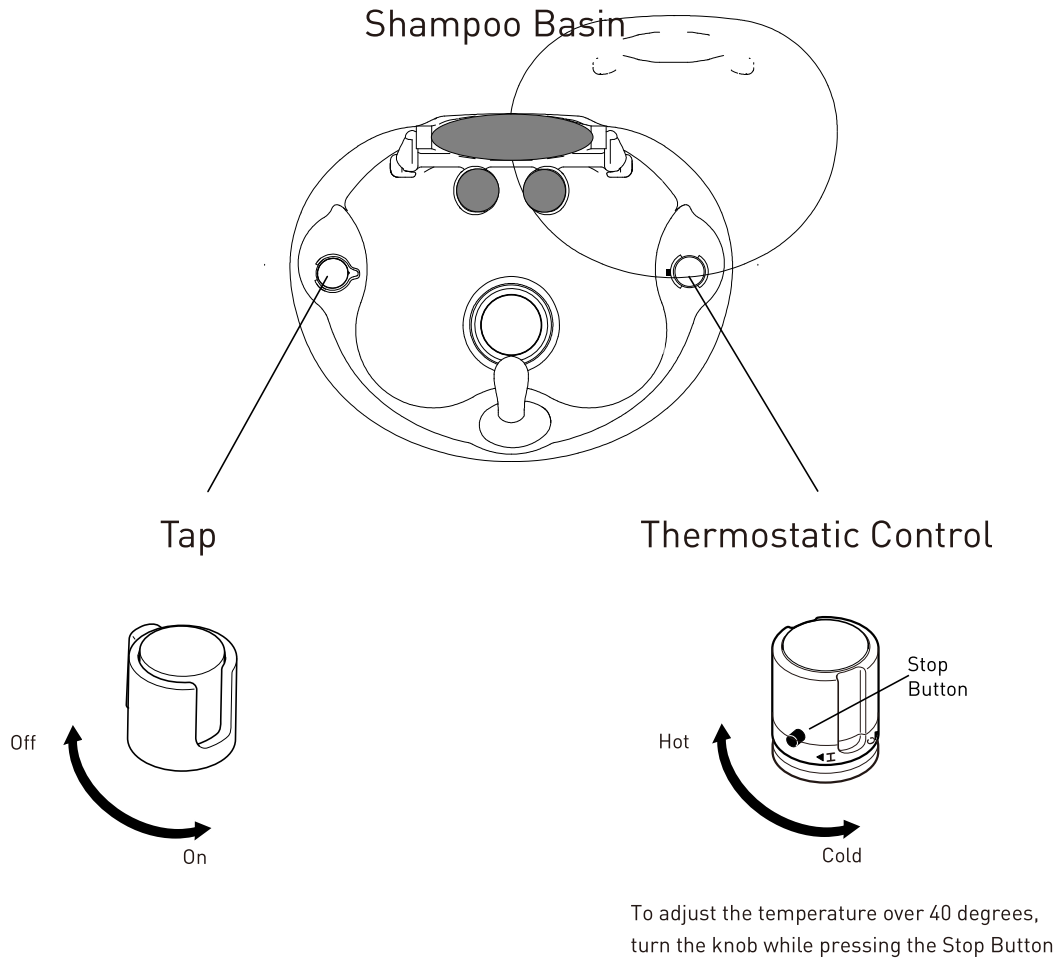


Drain Cap (Old)

Drain Cap (New)

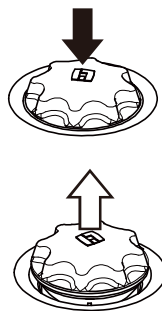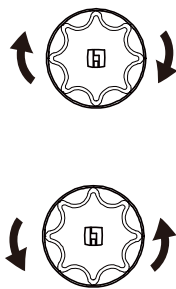


<YUME shower head>

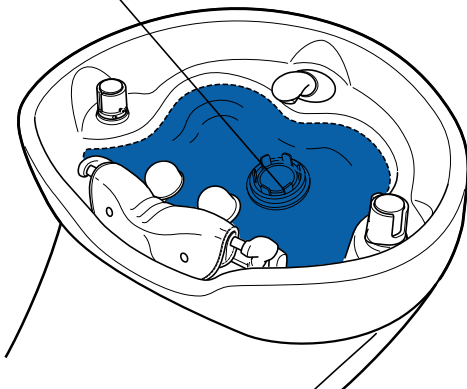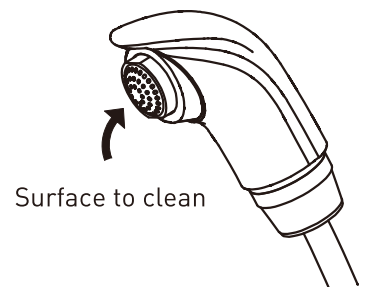

3 Preparation

<Dual Function Showerhead [OPTION]>

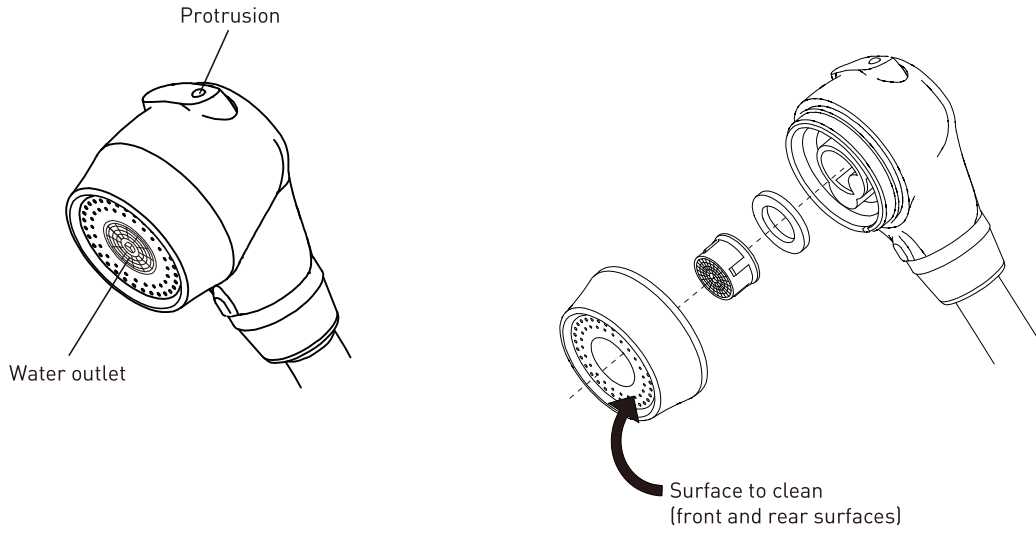


<Shower Mode>


<Shower Mode>




<Low-splash Mode>

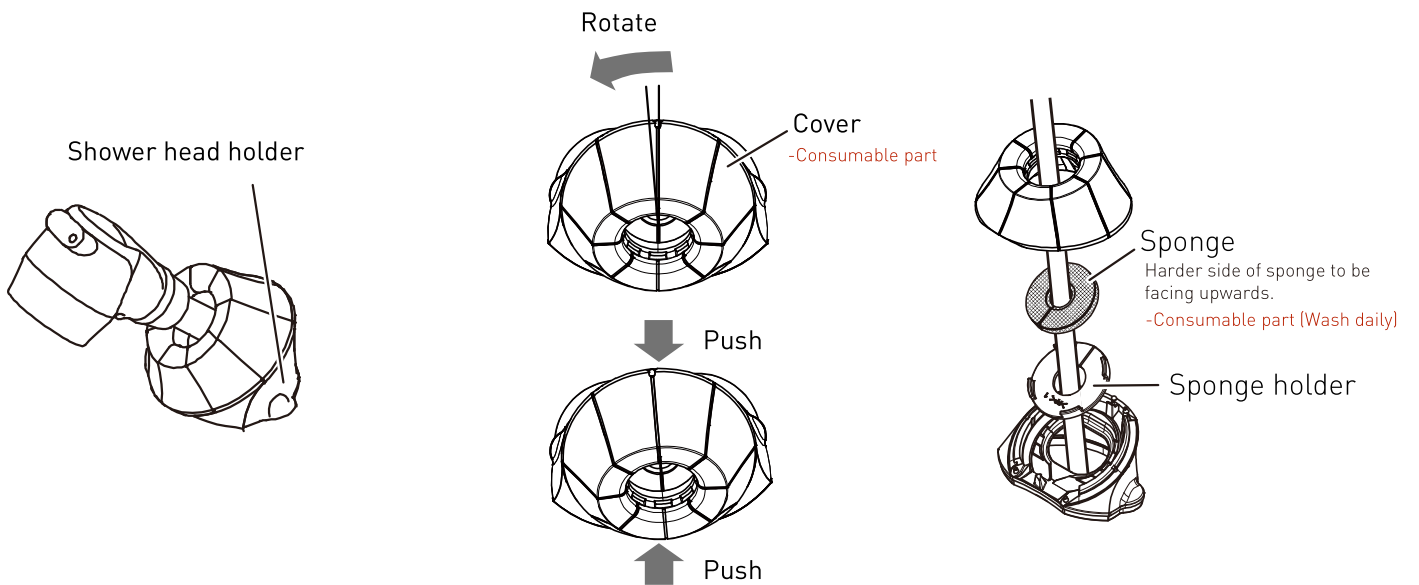


1 Attach the Neck Cushion and Head Pillow.

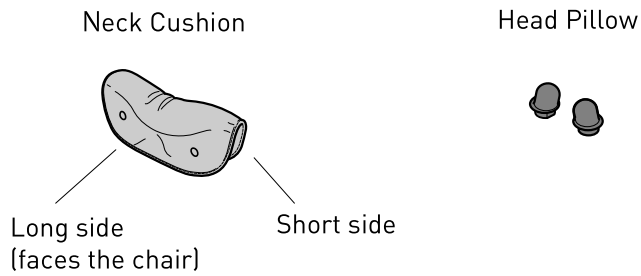

2 Attach both sides of the Neck Cushion with snap button.

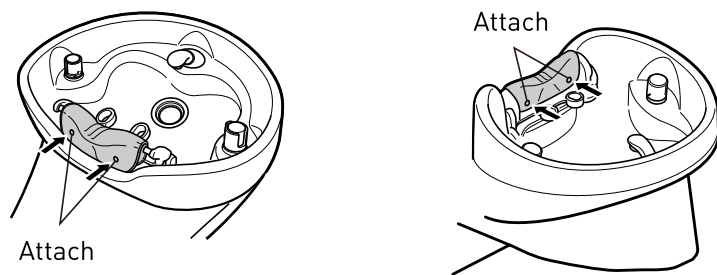


3 Attach the head pillow as shown below.

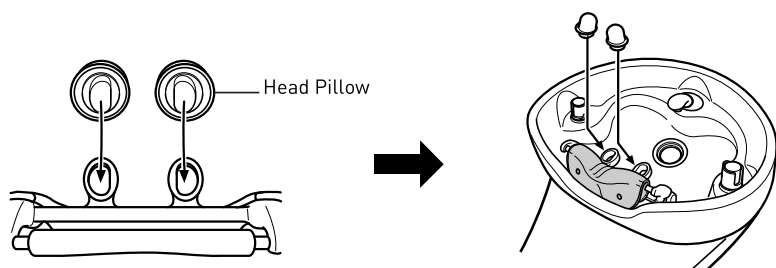


4 Operation procedures


- 1 Turn on the power.

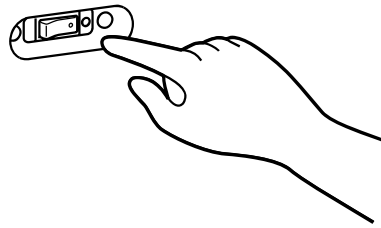


- 2 Press the auto return switch to bring the chair to its initial position.

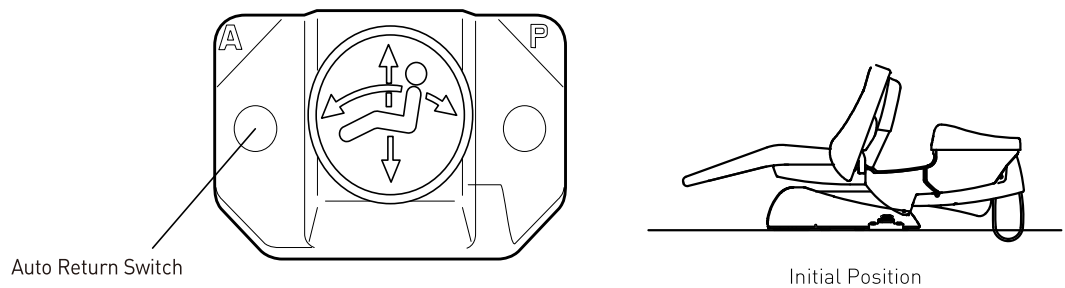

- 3 Instruct the customer to sit from the side, then face front.

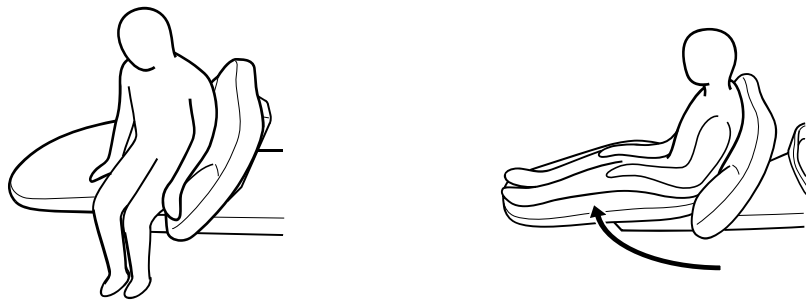


- 4 Press the preset switch (or manual mode control) to bring the chair to its approximate position.

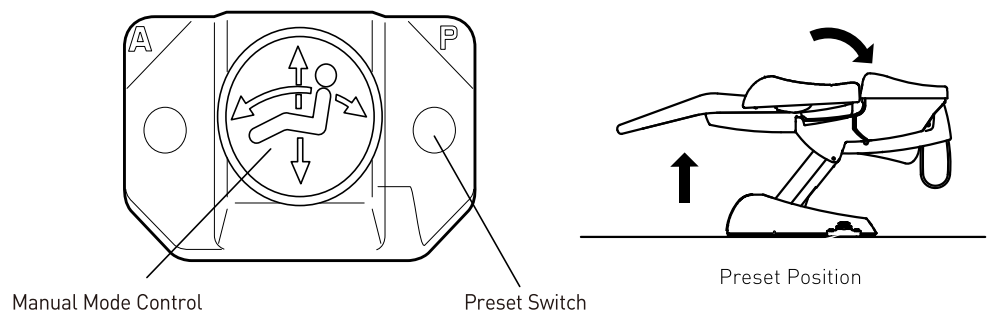


- 5 Adjust the chair height according to the shampoo technique.

<Sitting position>

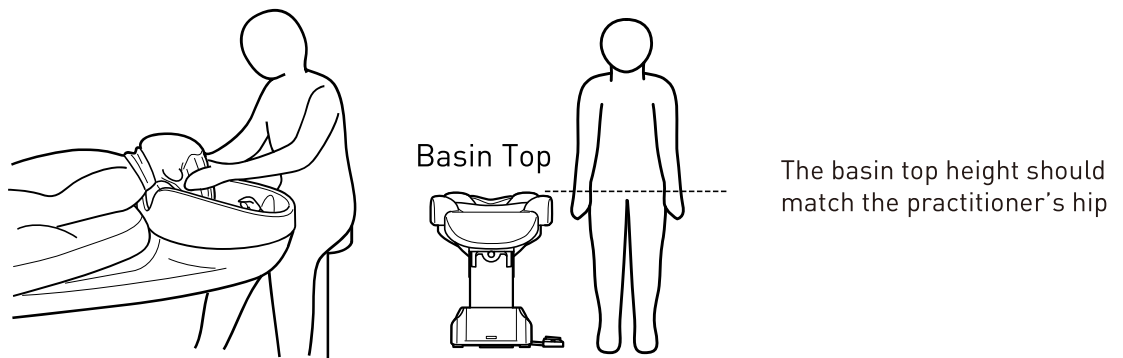

CAUTION

Do not operate the chair while the practitioner is sitting or when the stool is in the way. It may cause physical injury or property damage.

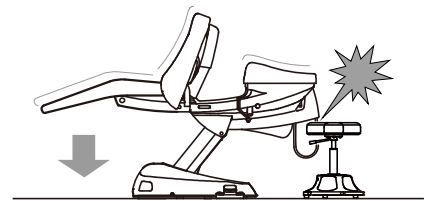

<Standing position>

Rear Shampoo





Side Shampoo




4 Operation procedures

- 6 After the shampooing, return the chair to its initial position.

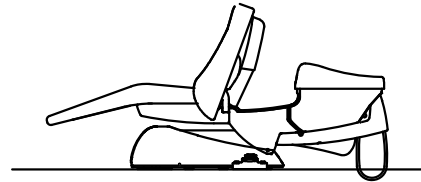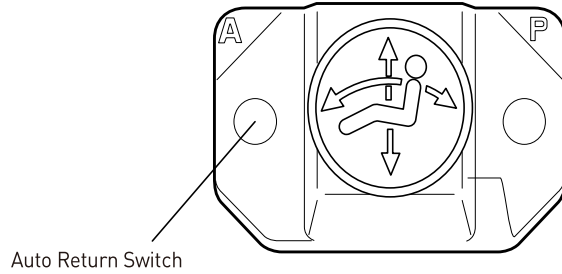


Initial Position

- 7 Wipe off the remaining water after use.

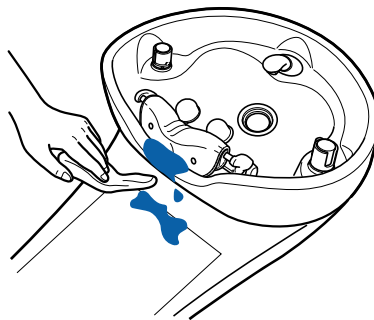

- 8 Clean the consumable parts.

Neck Cushion




Head Pillow



Drain Cap


<Old>

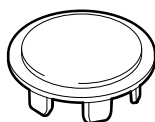

<New>



Hair Catcher

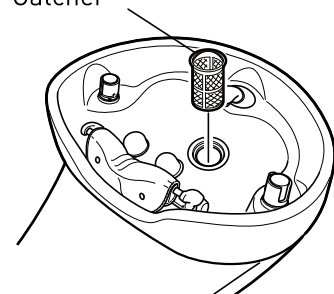



TAKARA BELMONT CORPORATION

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL : 81-6-6213-5945

FAX : 81-6-6212-3680

