


YUME OASIS Installation Instructions



Upper unit Back Wash Basin (YUME Basin) Model No.AY-OAYMYM-* AY-OAYMYM-*NB

The latter of Model No. is without "NB" This product is battery specification. Be prepared for AA size battery (LR6,2 pcs)[not included]

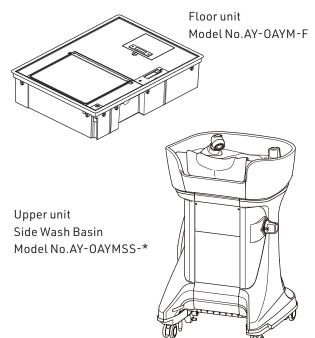

The "*" part of the individual Model No. shown above depends on the product color.

Contents

Before Installation	2
Usage Conditions	5
Preparation Before Installation Of floor unit	6
YUME OASIS Packing	12
Installation Of Floor Unit	13
Piping In Floor Unit	16
Carrying The Upper Unit	18
Connection Check With The Upper Unit	22
Test Water Flow	23
Cleaning And Check Of The Floor Unit	24
Cleaning And Check Of The Upper Unit	25
After Installation	27
Specifications	29
Chair Correlation Dimension	30
MEMO	35

To the installer

• The instructions should be thoroughly read and understood before installation to ensure that YUME OASIS is installed correctly.

• After installation, give these instructions to the customer.


To the customers

- Customers must not install YUME OASIS by themselves.
- Please give us your order of installation. Never install this product by yourself.
- Customers must store these instructions in a safe place so as not to lose them.

% The actual shape of YUME OASIS and the images and dimensions listed in these instructions may be modified and are subject to change without notice.

The CAUTIONs listed here are to ensure that YUME OASIS can be installed safely, and to prevent and danger or risk to the person installing YUME OASIS or those around them.


All of these CAUTIONs are important for safety. TAKARA BELMONT is not responsible for any damage or risk to the person installing YUME OASIS or those around them due to accidents if YUME OASIS is installed without adhering to the CAUTIONs.




Version 7

Before Installation

• Plumbing Drawing

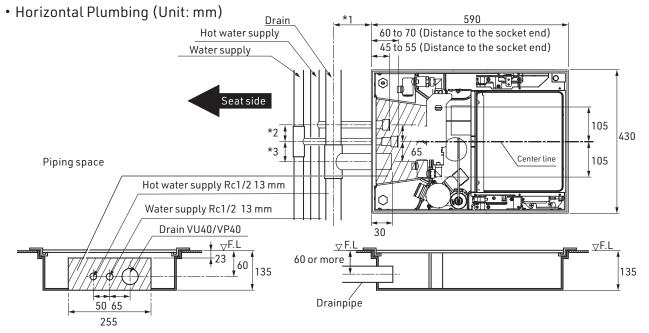


• Vertical Plumbing (Unit: mm)

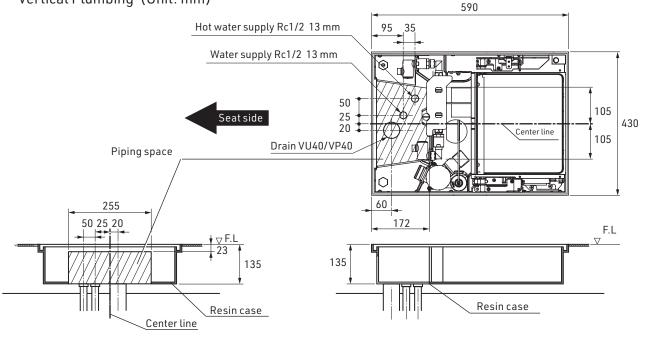

- Always ensure the gradient of drain line according to the number of units to be installed as shown on page 4.
- For vertical plumbing, make sure to adjust the top end of the piping to be lower than the lower end of the resin case. The space for attaching the stop valve and for piping connection with the floor unit is necessary in the resin case.
- In general, vertical plumbing is recommended when the floor mount pump is fastened. (The floor-fastening bolt may interfere with the pipe.)
- If horizontal plumbing is necessary, pay careful attention to the interference with the floor-fastening bolt.
- When the floor mount high locks pump (SP-CH) is fastened onto the floor, be aware of the following dimensions:
 - *1=350 mm or more
 - *2=85 mm or less
 - *3=68 mm or less
- In the case of horizontal plumbing, a floor-fastening type pump such as SP-FM, SP-FT and SP-FD cannot be used because of interference between the pipe and the fastening bolt.

• Plumbing Layout Of Horizontal Plumbing

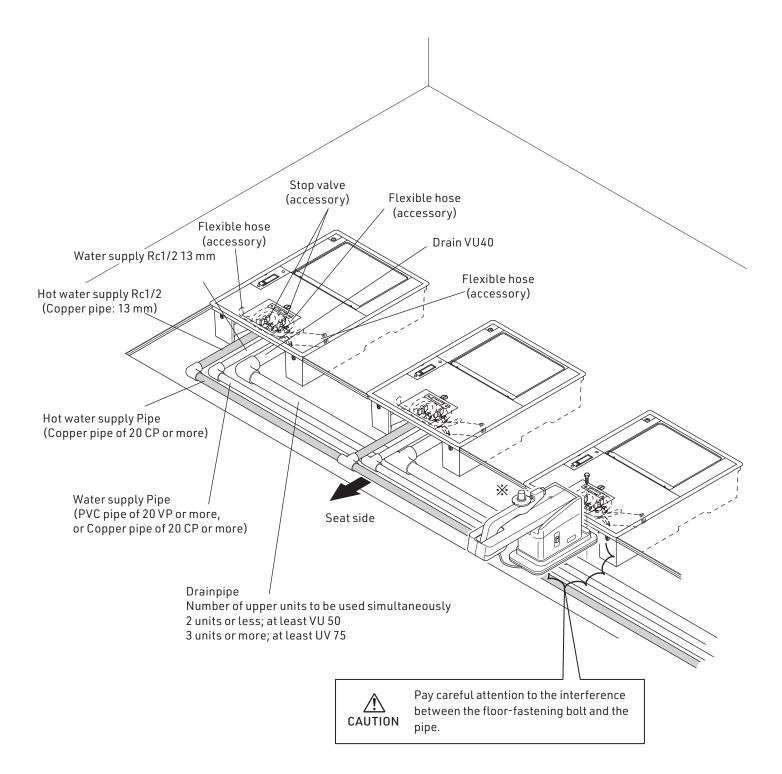

Floor Surface

- \circ Ensure that the material or finishing of the floor surface is waterproof or has a waterproof coating applied.
- \circ Always ensure that the floor surface is horizontally level.
- \circ Ensure that the floor surface is smooth and free from bumps around the attachment areas.
- \circ Prevent the step height of floor joint.
- \circ Be sure to use a floor panel of 3 mm thickness.
- \circ Use a hard floor panel made of polyvinyl chloride (PVC) tiles, etc.
- \circ Do NOT use a cushion floor. Using a cushion floor may cause troubles in detaching and attaching the upper unit.
- \circ For installation of upstairs, make sure to take appropriate waterproof measures.
- \circ Do not use a floor panel with significant bumps or dents that disturb transfer of the upper unit.
- \circ Do not use a floor panel that becomes slippery when water is leaking.

Water Leakage

Make sure to prevent the water leakage for the worst.

- \circ Use the waterproof material for the floor.
- If the product is installed on the floor above a room, always make sure to take appropriate waterproof measures (waterproofing work, installation of a stainless steel pan, attachment of a leakage sensor, etc.).
- \circ This company will not bear any responsibility whatsoever for water leakage due to the waterproof installation failure.

Installation Of Pipes

The following are important points to adhere to during the installation of pipes.

Read through the details carefully and ensure that the pipes are installed correctly.

- When installing this product, ensure that installation of pipes adheres to the instructions outlined in "CAUTIONs during installation of pipes". Installing pipes without reading through the CAUTIONs will mean water may not mix properly, and a set temperature will not be achieved.
- This product is designed for indoor installation. Always install this product indoors.

Plumbing

- Diameter of pipes and gradient of drain line
 - Use dependent drainage for YUME OASIS only.
 - Layout the drain line in a straight line as best as possible.

Number of upper units to be used simultaneously	Diameter of Drainpipe	Gradient of drain line
2 units or less	At least VU 50	At least 1/50
3 units or more	At least VU 75 <caution> Use a drainpipe of appropriate diameter according to the number of units to be installed.</caution>	At least 1/100



Make sure that the drainpipe does not have double trapping. Drain failure or abnormal noises may occur.

• Drainpipe end treatment (Ascending part dimensions)

Refer to the *Plumbing Drawing* on page 2.

CAUTIONs During Installation Of Pipes

- Water supply (primary) plumbing
 - In the case of using city water direct pressure line, consult to local contractors designated by the water supply Works Department. Installation must be made in compliance with the plumbing code requirements such as the "Water Supply Works Department Installation Standard", etc. in your area.
 - In the case of using lines other than the city water line (fall supply line from elevated water tank), consult to local contractors designated by the water supply Works Department. Installation must be made in compliance with the plumbing code requirements such as the "Water Supply Works Department Installation Standard", etc. in your area.
- Do not use pipes made of materials that may introduce rust for the water supply Pipe.
 In general, VP pipes or other materials specified by regulations in that particular region, are recommended for installation.
- In general, Type L deoxidized copper pipes are recommended for hot water pipes.
- \circ In general, the same diameter and same pressure is recommended for hot water pipes and water supply pipes.
- \circ Always use a reamer to demurred the ends of cut pipes.
- \circ Avoid using inverted U-shaped pipes (siphon) as these can cause air to become trapped.
- Always connect hot water pipes and water supply pipes after removing all contaminants such as dirt, sand and oil as these can cause problems.
- \circ After connecting the pipes and testing water flow, clean the filter and shower head.
- Ensure that the Drainpipe is installed at a gradient of 1/50 for a diameter of φ75 or less, or 1/100 for a diameter of φ75 or more.
- Do not connect the hot water pipes and water supply pipes in reverse.
 Connecting pipes in reverse will mean the temperature of water cannot be controlled properly by the water taps, which can cause problems including burns.
- Ensure that the hot water pipes from water boilers are only run over a short distance so as to minimize resistance. Longer pipes can cause fluctuations in temperature and poor hot water delivery.
- Always wrap pipes with lagging material after installation is complete.
- Plumbing particulars for water heater
 - In general, the same diameter and same pressure is recommended for main hot water pipes and main water supply pipes.
 - Contact a professional for installation of water heater.
- \circ Equipment comes with hair trap installed.

Conditions Of Use


Hot Water Supply And Water Supply Conditions

Water used	 Public water supply (do not use non-drinkable well water or water that contains rust or sand.) If the water hardness is 80 ppm or higher, install a water softener to prevent the buildup of scale. Aeration may be minimal when using shampoo even if drinkable well water is used, so a water softener should be installed.
Hot water supply, water supply pressure	 Use a pressure set between 0.1 to 0.4 MPa (1 to 4 kg f/cm²). If multiple YUME OASIS are used, ensure that the pressure does not drop below 0.1 MPa (1 kg f/cm²). Set the water supply pressure ≥ hot water supply pressure. Set the difference between the hot water supply pressure and water supply pressure to within 0.2. MPa (2 kg f/cm²).
Hot water supply temperature	 Set the hot water temperature to 80°C or less. Set the temperature 10°C or higher than the shower temperature used.
Hot water temperature into the product	 For a water heater, TAKARA simultaneous hot water supply system "DANRYU" for barber and esthetic salon is recommended. Refer to the installation manual of "DANRYU" for installing "DANRYU." When using an instantaneous water heater, the equivalence of No.16 or better is recommended. (Shampoo capacity equals to one unit of RS OASIS per one unit of instantaneous water heater.) When using a hot water storage system boiler, refer to the installation manual of the boiler. A high temperature fluid (steam) that is hotter than the hot water supply specified above may damage the hot water supply pipe. Do not connect the hot water supply pipe with a steam generator to cause high temperature steam.


Preparation Before Installation Of Floor Unit

There are two preparation methods for installation; "Mortar Bury Method" and "Composite Panel Platform Method". Select either of the methods according to the installation site conditions.

Refer to the following procedure for *Mortar Bury Method*, and refer to page 9 for *Composite Panel Platform Method*.




Mortar Bury Method

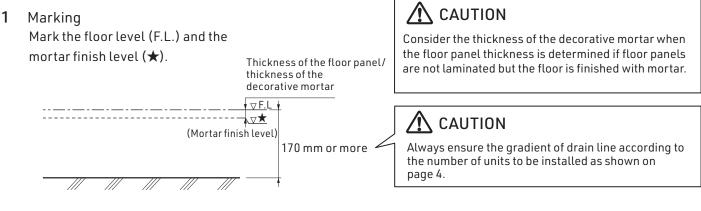

2 Marking (Installation position)


Refer to the *Chair Correlation Dimension* (on pages 30 to 34) and mark the position to place the floor unit. (The A-dimension and the D-dimension depend on the chair to use and the reclined posture.) Rule lines as many as possible so that you can see the layout of the water supply Pipe, the hot water supply Pipe and the drainpipe and the floor unit position.

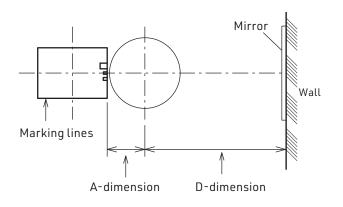


3 Installation of form

Install a wooden form for pouring mortar.


Align the center of form and floor unit marked in Step 2, and then install those.

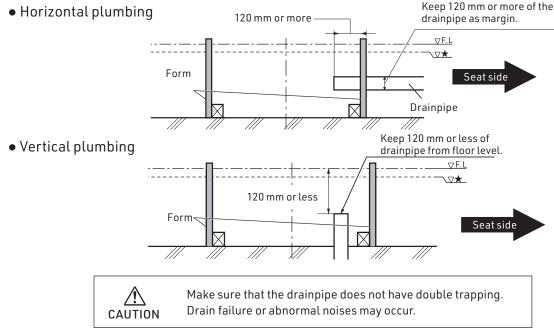

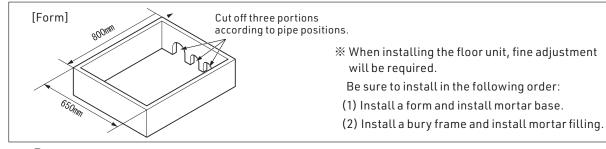



Mortar Base

4 Installation of mortar base

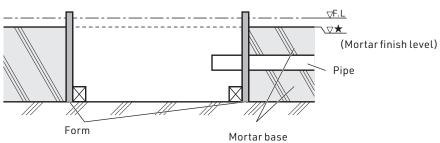


- 5 Removal of form, Installation of bury frame, and Installation of mortar base
 - 1. Remove the form, and then install the bury frame of floor unit to the position where marked in Step 2.




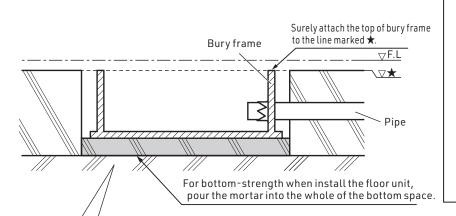

\bigwedge caution

If floor panels are not laminated but the floor is finished with mortar, it is always required that the top end of the mortar work form is also finished with mortar.

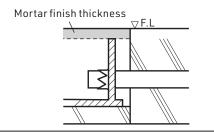


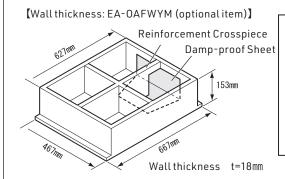


A CAUTION

- Do no remove the reinforcement crosspiece until the mortar filling is dried. The bury frame may bend and prevent the resin case of floor unit from fitting.
- Do not remove the damp-proof sheet. It prevents the moisture of mortar from entering the floor unit.

※ Floor units installed into the bury frame. (After the bury frame is installed and the floor is completely finished, the floor unit is installed.)

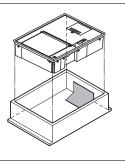


2. Install mortar filling so as to level the surface with the top end of the bury frame.

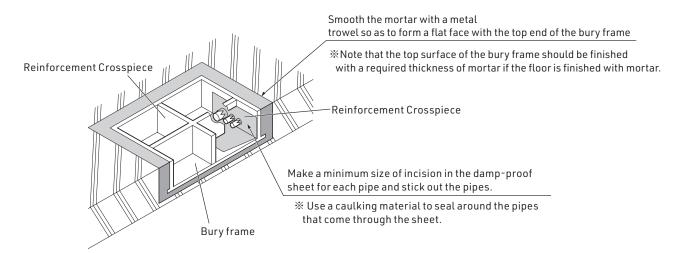


6 Finishing of floor surface (finishing of floor unit lid) Laminate a floor panel of 3 mm thickness on the floor and the floor unit lid.

Contact an expert agency in advance for lamination of floor panels.

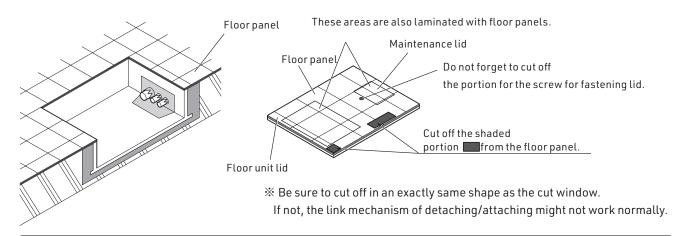

\triangle CAUTION

- Laminate a 3 mm thick floor panel on the floor and the floor unit lid. If a different thickness is applied, normal detachment/attachment or shower outlet may be disturbed.
- Use a hard floor panel made of PVC tiles, etc. Do NOT use a cushion floor. Using a cushion floor may cause troubles in detaching and attaching the upper unit.
- Laminate the floor panels so that the top end of the white bury frame is hidden and trim them to the opening.

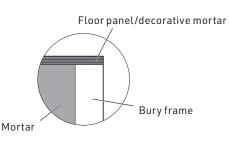


When wood flooring or tiles are used around the openings, select a material equal to or thinner than 12 mm. Otherwise, the floor unit cannot be secured.

- * Even in the case of the installation site with wood flooring or tiles used around the openings, laminate 3 mm thick hard floor panels made of PVC tiles.
- % For the floor panels to laminate, the optional YUME OASIS floor panel kit is available in two colors. Place another order if necessary.

Preparation for installation is completed. Go to Installation Of Floor Unit on page 13.

Composite Panel Platform Method

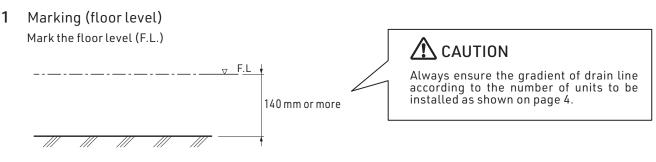


2 Illustrates the markings (installation position), the support legs and the base panel and mark the position to place the floor unit.

Refer to the *Chair Arrangement Correlation Dimension* (on pages 30 to 34) that illustrates the markings (installation position), the support legs and the base panel and mark the position to place the floor unit.

(The A-dimension and the D-dimension depend on the chair to use and the reclined posture.)

As for markings, rule lines as many as possible so that you can see the layout of the water supply Pipe, the hot water supply Pipe and the drainpipe and the floor unit position. Arrange the support legs and the floor base panel at this timing.

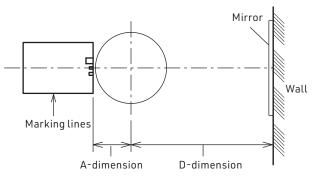


3 Piping

Lay pipes to meet the floor unit position marked in Step 2 according to the *Plumbing Drawing* on page 2.

For plumbing, check the position of the support legs to hold the floor in advance and avoid the position to lay the pipes.

When the floor mount high rocks pump (SP-CH) is fastened onto the floor, pay attention to the following dimensions:

- *1=350 mm or more
- *2=85 mm or less
- *3=68 mm or less

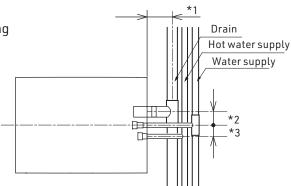



Make sure that the drainpipe does not have double trapping. CAUTION Drain failure or abnormal noises may occur.

4 Laying the subflooring material

Before laying the subflooring material, cut off the opening in the floor base panel for the unit attachment position.

Check the flexural level of the floor base panel with the opening and place additional support legs.




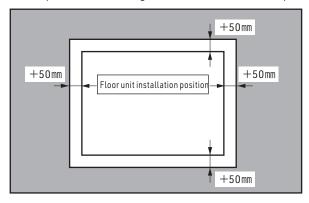


%Cut the panel + 50 mm larger around the attachment position.

5 Lamination of floor panels

After laying the subflooring material and the finishing material on the base, attach the reinforcement frame for unit mounting onto the back surface of the subflooring material.




% Check the flexural level of the floor base panel again and place additional support legs under the reinforcement frame if required.

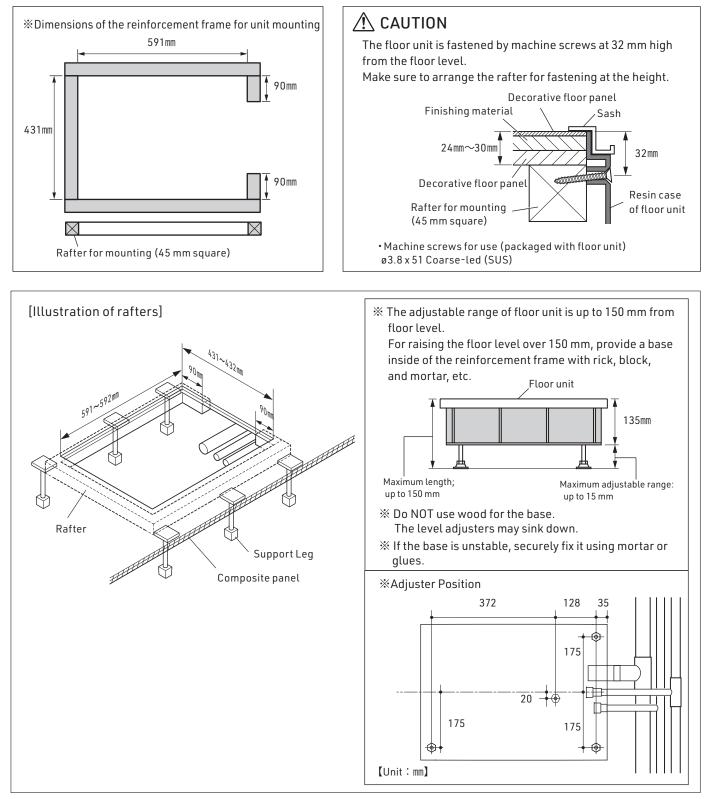

6 Finishing of floor surface (finishing of floor unit lid)

Laminate a floor panel of 3 mm thickness on the floor and the floor unit lid. Contact an interior agency in advance to complete the lamination of the floor panel before installation of the floor unit.

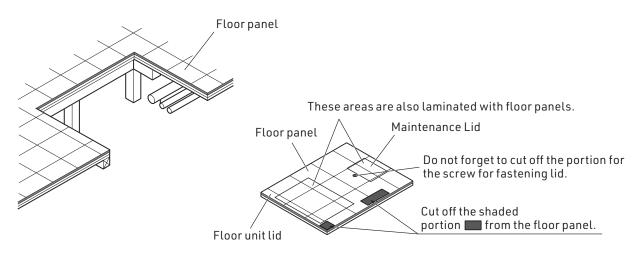

%Be sure to cut off in an exactly same shape as the cut window.
If not, the link mechanism of detaching/attaching might not work normally.

A CAUTION

- Laminate a floor panel of 3 mm thickness on the floor and the floor unit lid. If not, normal detaching/attaching or shower outlet may be disturbed.
- Use a hard floor panel made of PVC tiles, etc.
- Do NOT use a cushion floor. Using a cushion floor may cause troubles in detaching and attaching the upper unit.
- Laminate the floor panels so that the top end of the white bury frame is hidden and trim them to the opening.

When wood flooring or tiles are used around the openings, select a material equal to or thinner than 12 mm. Otherwise, the floor unit cannot be secured.

% Even in the case of the installation site with wood flooring or tiles used around the openings, laminate 3 mm thick hard floor panels made of PVC tiles.

% For the floor panels to laminate, the optional YUME OASIS floor panel kit is available in two colors. Place another order if necessary.

Preparation for installation is completed. Go Installation Of Floor Unit on page 13.

YUME OASIS Packing

YUME OASIS Packing

Tick the boxes below to confirm that all contents are provided.

- Floor unit
 - □ Floor unit main body ...1



□ Drainpipe hose (long/short) ...1 (for each)



□ A set of machine screws (for fastening floor unit/attaching sash) Φ3.8×32...12 Φ3.8×51...12 Cap Nut M10...1

□ Flexible pipe (long/middle/short and for hot water/ water supplies)...1 (for each)



□ Stopper ring for drain hose (large/small) ...1 (for each)



Drainpipe side Floor unit side

□ Stop valve...1 (for hot water/water pipes)...2



Drain hose packing (large/small) ...1 (for each)





• Upper unit of Back Wash Basin (YUME Basin)

□ Upper unit main body...1 (image is EX-OAYMYM.)



- □ Head pillow ...a set of two pillows (a set is spare)
 - □ Hair trap...1

□ Drain cap ...1



□ Drain cap...1

Neck cushion...1



□ Grease...1



□ Tickle stopper rubbers...2 (one spare)



□ Instruction Manual □ Tickle stopper rubber Instruction Manual □ YUME SPA Technical Manual (except for China)

Surface water travel prevention cloth...1

• Upper unit of Side Wash Basin

□ Upper unit main body...1 (image is EX-OAYMYM.)




□ Neck cushion...1





□ Neck core...1





prevention cloth...1



□ Hair trap...1






Instruction Manual

□ YUME SPA Technical Manual (except for China)


1 Installation Of Floor Unit

- % A wrong installation procedure of this product may prevent proper installation of the basin body or the chair body. Make sure to follow the installation procedure below:
- **1** Take out the floor unit from the packing.

Hold the sections indicated by the arrows \oint to take out the unit.

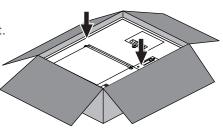


- **2** Remove the top panel.
 - 1. Use a straight slot screwdriver to completely loosen the screw for fastening lid.

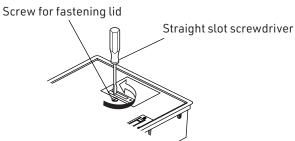


3. Hold the handle part of the top panel swing to open the top panel swing to right angle.


2. Pull the release lever upward to open the top panel swing.

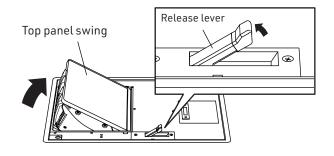


4. Remove the maintenance lid and insert it into the gap of the opened top panel swing .

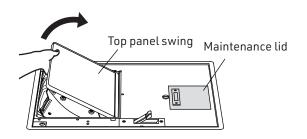


5. Hold the opening generated by removing the maintenance lid and lift the top panel upward.

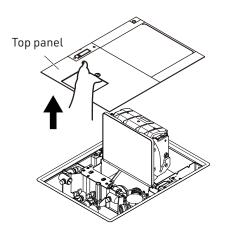

- Maintenance lid Gap
- 6. Take out the accompanying items from the inside.

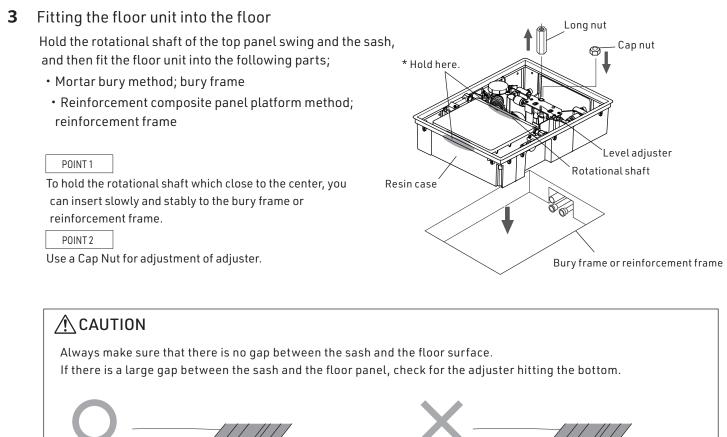

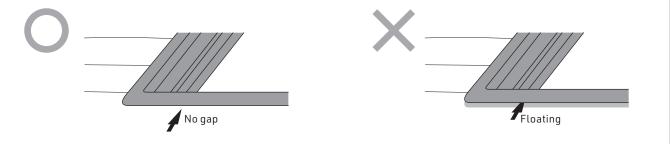


4 Fastening floor unit


Apply machine screws to the resin case of the floor unit and fasten the screws to fit the case to the bury frame or the reinforcement frame. (12 points) Fasten the unit from the drain trap side as shown in the image below.

If a screw is difficult to turn into the rafter, orient the screw obliquely downward to fix.

ACAUTION

Make sure to fix resin case of floor unit with the side of drain trap on the wall when fixing one. Failure to follow this instruction may cause difficulty to close the top panel.

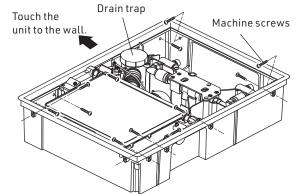


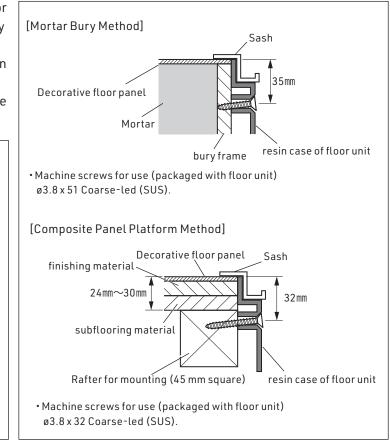

5 Adjust the adjuster


1. Loosen the level adjuster nut. Central adjuster Corner adjuster [Resin case top view] Cap nut Cap nut Level adjuster nut _•□ Resin case of Resin case of floor unit floor unit Adjuster **Central adjuster** Corner adjuster POINT 1 2. Use a nut driver or a wrench to turn the adjuster To turn the Level adjuster nut clockwise by a box or for level adjustment.

Do not use an electric tool. It may cause damage. (Arrange the adjuster so that it reaches the floor surface.)



POINT 2

The deep of adjuster is minimum at factory shipping. Tighten the adjuster to the floor for adjustment.



∧ CAUTION


Arrange the adjuster so that it surely reaches the floor surface of the frame. Otherwise, detachment/attachment of the upper unit may be disturbed or the top panel may bend.

Note

- The height is adjustable by the level adjusters of the floor unit up to 150 mm. For adjustment exceeding 150 mm, provide a base of brick, block, and mortar, etc. inside of the reinforcement frame to raise the level.
- For level adjustment of the corner adjuster, it is convenient to use a nut driver or a deep socket with the distance across flats of 17 mm.

3. Fasten the Level Adjuster Nut.


- X Use a wrench to hold the adjuster and the cap nut in order to prevent rotation of the adjuster while tightening the adjuster nut.
- % Make sure to fasten the central adjuster using the long nut after completion of adjustment.

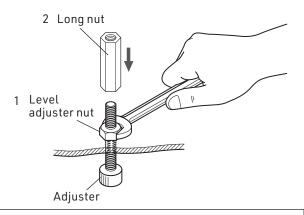

CAUTION

In the case of replacement with existing RS OASIS (use of the mortar work form), adjust the central adjuster to reach the mortar floor surface.

If the adjuster cannot reach the floor or the mortar surface is sandy, lay bricks or blocks to make the adjuster reach it.

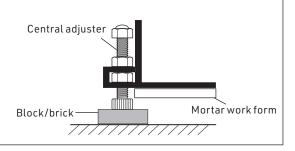

2 Piping In Floor Unit


1 Attachment of stop valve

- 1. Confirm that the ascending part of the pipe is in accordance with the plumbing drawing.
- 2. Attach the stop valve to the pipes for hot water supply and water supply.

Attach the stop valve so that its knob faces upward.

2 Attach the drain hose

1. Attach the drain hose packing (large) to the drainpipe end (VU40).

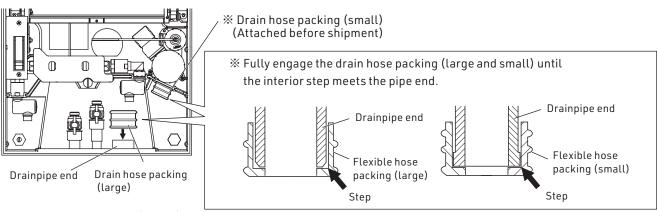

2. Attach the flexible hose (small)

Point 1

The drain hose may be too short if the pipe position is not proper.

Use the supplied drain hose (long) for the connection.

The drain hose (long) can be cut at the dashed line position.

Use an appropriate hose depending on the required length.


% Check the distance between the drain trap and the drainpipe carefully before cutting the flexible drain hose.

Point 2

Put the flexible drain hose through the stopper rings for flexible hose (large and small) in advance and connect it to the drain trap and the drainpipe.

Point 3

If the drainpipe end position is extremely deviated, it is recommended to use the elbow joint for VU40 to shift the end position. (Prepare the elbow joint in advance.)

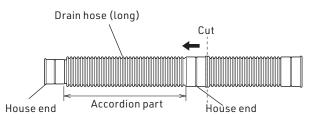


A CAUTION

Make sure to hold the house end when you attach the drain hose. If you hold the accordion part of drain hose, the hose may be damaged and it may course the

drainage failure or broken.

- Check for any kink to disturb the flow of the drain hose and any scratches and breaks on the surface. The flow of the drainage can be interrupted or the drain hose can be broken, causing water leakage.
- - Check for double-trapping. It reduces the flow of drainage.
 In the case of double-trapping, check the installation position of the basin body and the ascending part dimensions of the pipes and adjust them again.

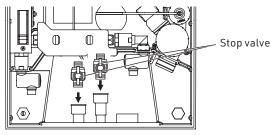


• Check that the stopper ring for drain hose is surely fastened.

If not, leakage or slip-off of the drain hose may occur.


3 Fasten the screws of the stopper ring for drain hose.

X Tightening too hard may damage the flexible drain hose. Do not tighten too hard.

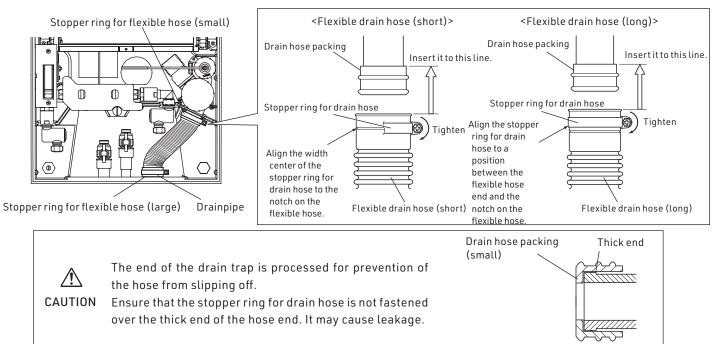


3 Attach the hot water supply Pipe and the water supply Pipe

Attach the flexible pipes (for hot water/water supplies) and the stop valves to the check valves and hot water/ water supply pipes of the floor unit.

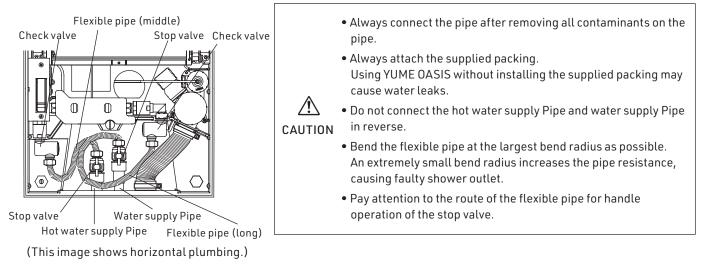

- 1. Bend the flexible pipe to suit the position of the filtered check filtered check valve.
- 2. Insert the supplied packing to the flexible pipe and attach to the check valve with the strainer.
- 3. Insert the supplied packing to the flexible pipe and attach to the stop valve.
- 4. After plumbing, check that the packing fit on the wall has not been moved. If it is moved, hold down the packing again.



- Always attach the supplied packing. Using YUME OASIS without installing the supplied packing may cause water leaks.
 - Do not connect the hot water supply Pipe and water supply Pipe in reverse.
 - Check that water is not leaking from the joint.

POINT

Three lengths of flexible pipes are provided in the packing for the use of piping water and hot water supply. The piping shown in the image above may be impossible depending on the position of the ascending part of the pipes. Use an appropriate length of flexible pipe for your piping.

4 Attachment of lid

Attach the lid to the floor unit and then tighten the screw for fastening lid with a straight slot screwdriver.

Screw for fastening lid-

ℜ The screw for fastening lid can be tightened with a coin, etc.

Carrying The Upper Unit 3

- Carrying The Basin
 - 1 Remove the resin case (blue).
 - 2 Unpack the wood frame.

CAUTION

This work should always be done by two people. The basin body may fall over if it is not supported when the bolt is removed.

3 When the upper unit is carried

- \circ Hold the top end of the basin and the bottom of the bumper as shown in the image on the right hand when the unit is carried.
- \circ Carry the unit without removing the air mat mounted on the basin and the film tapes attached on the main body cover.
- Do not hold the stepped part under the basin or the main body cover. Make sure to carry it by two people. (See the image on the right hand.)
- Basin Bumper

Straight slot screwdriver

l id

• Never hold the stepped part under the basin or the main body cover. Doing so may cause damage to the main body cover. • Take care when handling the basin as it is heavy and fragile. • Remove all metallic objects such as watches when carrying the basin. If watches or belts are rubbing against basin, the basin may have a scar. CAUTION • Take extra care to ensure not to damage the covers. • Do not touch the basin body pipes. Doing so may cause water leaks.



The upper unit main has casters.

It can automatically roll down an incline or a slope. Make sure to place it on a level floor surface. The basin is unstable when it is not fixed to the floor. Pay full attention to turnover.

■ Attachment Of Batteries <Back Wash Basin (YUME Basin) The latter of Model No. is without "NB" >

This product is battery specification. Be prepared for AA size battery (LR6,2 pcs) [not included]


This product has a function to sound a warning beep in the case of dangerous action to the basin such as pushing up the basin by the chair back rest. The batteries are necessary for sound the warning.

Set them properly according to the descriptions below:

Basin tilting function is for avoiding damage of the product. It is not for adjusting difference in height.

1 Remove the maintenance cover.


The maintenance cover is mounted by slotting to the screws as shown in the image below. It is not required to remove the screws.

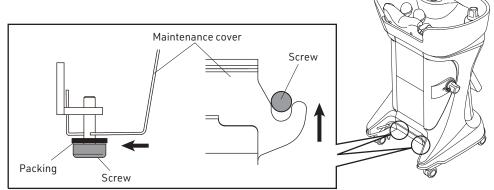


1. Loosen the screws (two positions: left and right)

X Loosen each screw on the left and right hand side.


X Loosen the two left and right screws until the gap between the maintenance cover and the front cover becomes around 1 cm.

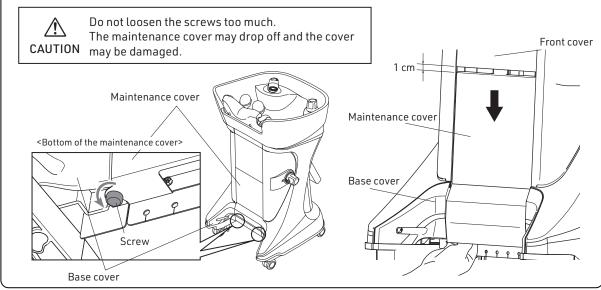

2. Remove the maintenance cover.

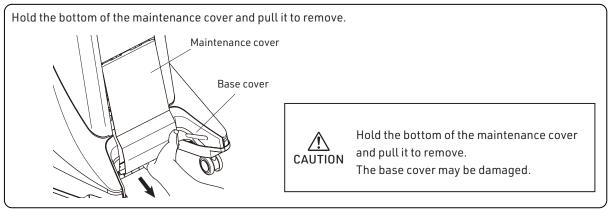


2. Apply your finger to tab of the battery box cover to detach the battery box cover.

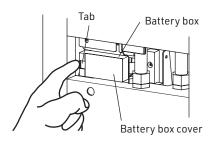


oThis product uses two AA batteries.


4. Close the battery box cover.


3. Properly set new batteries according to the indication in the image below.

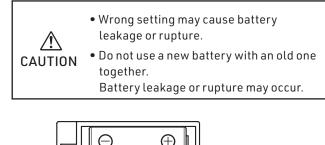




Write the date of setting in the battery replacement label.
 It can be the rough guide to replace the batteries next time.




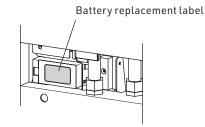


6. Attach the maintenance cover.

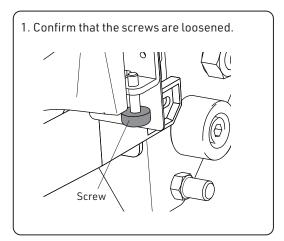

2. Insert the maintenance cover into the main body cover. Insert the maintenance cover Front cover. into the Front Cover. Maintenance cover

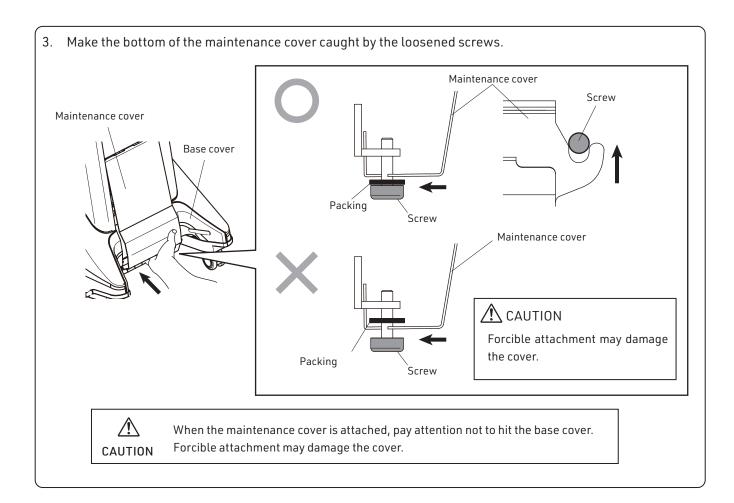

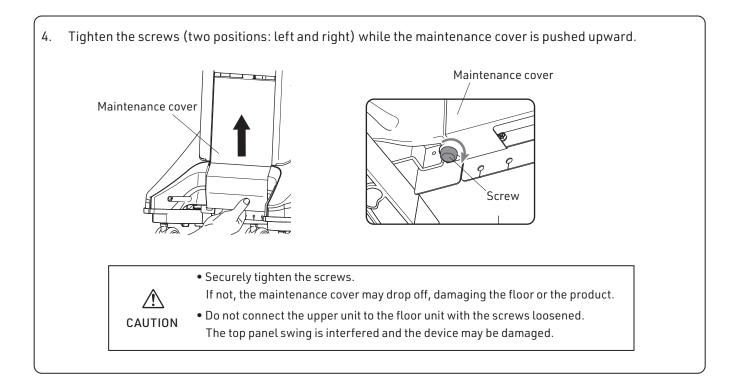


Connection Check With The Upper Unit

1 Open the top panel swing.

4

1. Step on the assist button to lift the release lever.

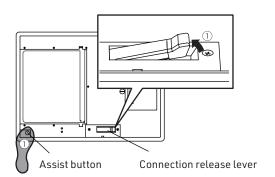


2 Fit the upper unit to the top panel swing.


Hold the basin and slowly move the upper unit forward. Fit it so that the top panel swing of the floor unit is inserted to the opening of the upper unit.


Keep moving it forward slowly until the upper unit is locked. % You feel a light click when it is locked.

- When the upper unit is transferred, securely hold the basin with both hands and move it slowly.
- Pay attention to any obstacles on the floor.
- When the upper unit is fit to the top panel swing and it comes near the lock position, support the basin with your hand and move it slowly. If you rush to fit it to the top panel swing or lock it, damage to the devices or injury may be caused.

2. While the assist button is held down, use another foot to raise the release lever to the angle shown in the image. The top panel swing opens.

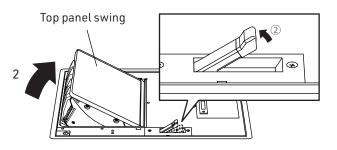

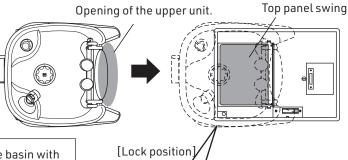

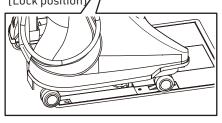

CAUTION When the upper unit is transferred, check the surroundings of the upper unit. Collision to a person or an object may result in injury or damage.

Positioning and securing completed.

3 Connect the piping


Depress the connecting pedal with your foot until a click sound is heard to connect the supply/drainpipes.

Insert your foot to the end of the connecting pedal and step on the pedal further.
 If it is not firmly secured, the connecting pedal will come up. Depress the pedal again.

<If connection is difficult>

Repeat depressing two or three times.

If it is still difficult, depress the detaching pedal and then retry the step 2 and 3.

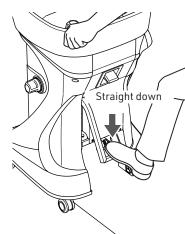

Connection of hot water supply, water supply and drain completed.

Connection pedal

CAUTIONDo not stand on the connection pedal or apply excessive force.It may damage the product or alter the shape of product.

5 Test Water Flow

1 Test the water flow.

\land CAUTION

- Always test the water flow to prevent accidents during use.
- When the product is shipped, the faucet handle (on the basin) is not tightly closed up. If you open the stop valve while the upper unit is connected, water may come out from the shower head.

% For Test Water Flow, check the followings:

The hot water may be slightly tainted at the start of the test water flow, however this does not indicate any problem.

 \approx For safety reasons, the product's thermostat is designed so that the hot water does not exceed 49°C.

(If the supply pressure is the same, water is 20 $^\circ\text{C}$ and hot water is 60 $^\circ\text{C}$.)

1. Check for leakage from the piping connection part and the floor unit piping connection part.

The connection may get loosen during transportation.

Closely check the piping connection part inside the upper unit.

2. Check the shower outlet flow rate, refer to the following standards.

	Shower outlet flow rate				
	hot water supply pressure, water supply pressure: 0.1 MPa each				
	Shower outlet temperature : 40	°C			
[【Back Wash Basin (YUME Basin)】				
	YUME shower head : : Approximately 8.5 L/min				
	(Aerator) : Approximately 7.5 L/min				
[【Side Wash Basin 】				
	YUME shower head : Approximately 9.5 L/min				


(Aerator) : Approximately 8.0 L/min

- 2 After the test water flow is finished, turn the mixer handle back to the initial position to stop water.
- Release the connection of the upper unit and the floor unit.
 Pull the connection release lever depressing the detaching pedal slowly.
 The connecting pedal return to the initial position.

The connection is released.

Note

The piping connection part has the mechanism that the valve blocks the flow path after the connection is released. However, a tiny amount of water droplets may fall into the floor unit, which does not cause a problem. Use it as it is.

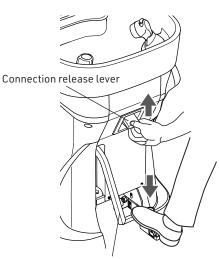


Connecting pedal

6 Cleaning And Check Of The Floor Unit


Cleaning

Be sure to clean the strainer (incorporated in the check valve) of the floor unit after the flow test is finished. If not cleaned, enough amount of water may not come out from the shower or troubles may occur in temperature adjustment.


- 1 Prepare cloth to receive water (two or more sheets of cloth in the A4 paper size).
- 2 Close the stop valves on the hot water and water supplies.

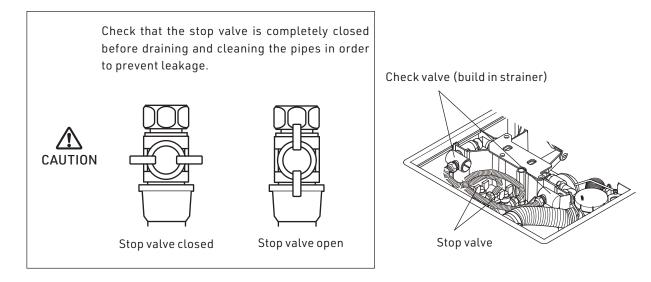

- 3 Pack the cloth beneath the check valve.
- 4 Use a straight slot screwdriver to remove the strainer and then clean the dirt with water and a rag.

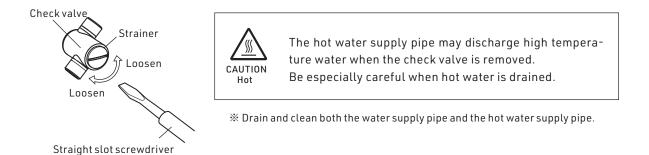

5 Drain and clean both the water supply pipe and the hot water supply pipe.




- 6 Open the stop valve and check that water is not leaking.
- 7 Wipe off spilled water and remove the packed cloth.

Checking Of Floor Unit

For checking of the floor unit, refer to the followings;

CAUTION Be sure to check the floor unit in order to prevent accidents in operation.

- No leakage in the piping connection part. The connection may get loosen during transportation. Tighten the piping connection part in the floor unit again.
- 2. All machine screws are attached.
- The floor unit is firmly secured. If the floor unit is loosened, tighten the machine screws of the level adjusters or the attaching part again.
- The overflow window is closed.
 If the overflow window is open, lower the overflow float to the specific position and close the overflow window.

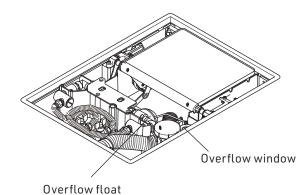

5. Check for any defects such as scratch in appearance.

7 Cleaning And Check Of The Upper Unit


Cleaning

• After the hot water becomes clear during the water flow test, always clean the filter (build in check valve) and shower head.

▲ CAUTION

Failure to do so can result in insufficient flow rate and faulty temperature regulation. Take care not to damage or lose the O-rings and packing.

Remove and clean any dirt trapped within the filter pipe.

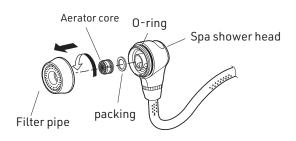

Checking Of Filter Pipe

For checking of the upper unit, refer to the followings;

- 1. There is no cracks or dirt on the basin.
- 2. There is no defects such as scratch in appearance.
- Lift the front of the basin and tilt it to check that the buzzer sounds.
 (Only for Back Wash Basin (YUME Basin)


Countermeasure Against Low Water Pressure

- When the both pressures of hot water/water supplies are 0.18 MPa (1.8 kg f/cm2) or less, select the floor unit "without pressure reducing valve".
- % If the hot water or water supply pressure is too low and the outlet flow from the shower head is small (7.6 L/min or less for a rough guide), change the pressure reducing valve to the joint (our optional item EA-OARS-T).
- % If solely the hot water supply pressure is low, change the parts only for the hot water supply.

<How to detach pressure reducing valve>

- 1. Close the stop valves on both sides of hot water/water supplies.
- 2. Remove the flexible pipe.
- 3. Loosen the Cap Nut and remove the check valve unit and the pressure reducing valve unit.
- 4. Detach the pressure reducing valve and attach the joint.
- 5. Perform the steps after (4) in the order of $(3) \rightarrow (2) \rightarrow (1)$.


※ Be sure to apply packing on both sides of the joint. If not applied, leakage may occur.

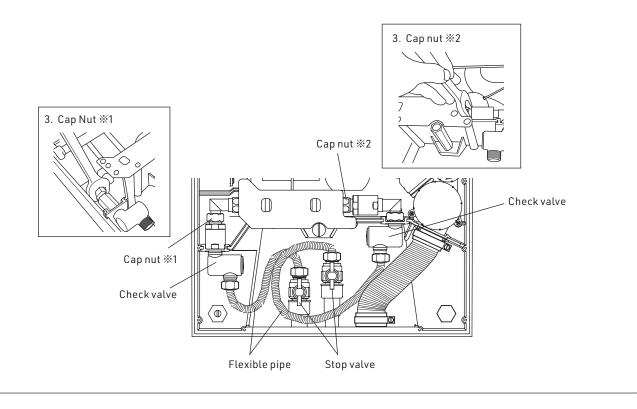

After Installation


Attachment Of The Hair Trap And The Drain Cap

Put the hair trap into the drain port and place the drain cap on the top as shown in the image.

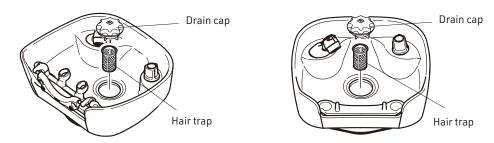


Attach neck cushion

- <Back Wash Basin (YUME Basin)>
- 1. Insert the neck cushion to the mounting bracket in the direction as shown in the image.
 - (Pay attention to the front/back direction.)

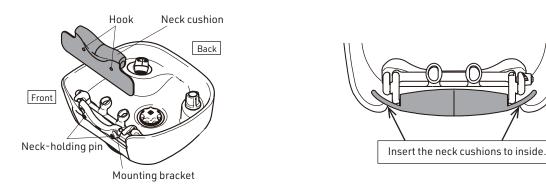

- 2. Attach the left hooks of the neck cushion to the neck-holding pins of the mounting bracket. (Check that both front and back hooks are attached.)
- Adjust the shape of the neck cushion to suit the mounting bracket, and attach the basin side hooks of the neck cushion to the neck-holding pins. (Check that both front and back hooks are attached.)

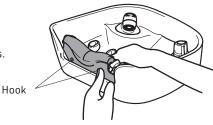




The neck-holding pins are detachable. Take care not to lose the neck-holding pins.

\triangle caution

- Arrange the shape of the neck cushion along the mounting bracket and attach the right hooks to the neck-holding pins of the mounting bracket. When the neck cushion is removed, detach the four hooks from the neck-holding pins and lift the neck cushion. If an excessive force is applied to forcibly detach the hooks, the part can be damaged.
- Check that the neck cushion is entirely contained in the basin and it is not folded or attached in a stressed condition. The neck cushion may be damaged or water may splash from the front of the basin.
- Do not apply excessive force when the neck cushion is attached. The neck cushion may be damaged.

Attach the Head Pillow


Insert the head pillow in the direction as shown in the image.





<Side Wash Basin >

- Align the neck cushion to the center of neck core as the below.
 Check the direction of the neck cushion-and neck core.
 - Align the height of the neck core and neck cushion ends (both ends).
 Fix the hook light pulling the neck cushion on the under surface of neck core.

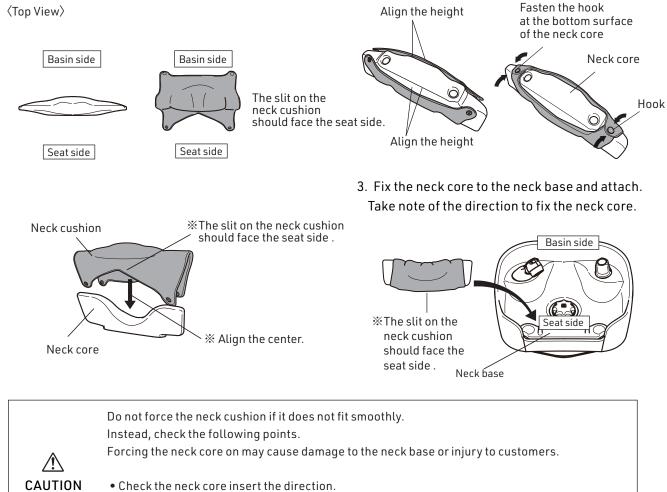


• If the neck cushion is loose, check the direction of the neck cushion toward the neck core.

• If the neck core dowel hole is clogged with dirt, clean and remove the dirt before use.

Attachment Of The Surface Water Travel Prevention Cloth To The Shower Hose

Wrap the cloth at the lowest face of the shower hose with the hook-and-loop fastener facing upward as shown in the right image.

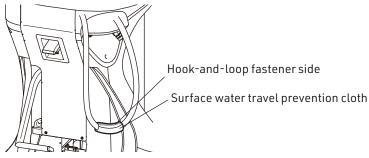

Lowest face of the hose


Specifications (YUME OASIS)

Model No.	AY-OAYMYM-* AY-OAYMYM-*NB	AY-OAYMSS-*	
Faucet fittings	Thermo mixing system	Thermo mixing system	
Outlet	Switching system (aerator/shower)	Switching system (aerator/shower)	
Outlet flow rate (hot water supply pressure, water supply pressure: 0.1 MPa each)	Aerator: Approximately 7.5 L/min Aerator: Approximately 8.5 L/min	Aerator: Approximately 8.0 L/min Aerator: Approximately 9.5 L/min	
Faucet system	Single faucet (handle type)	Single faucet (handle type)	
Mass	Upper unit 48 kg Floor unit 16 kg	Upper unit 46 kg Floor unit 16 kg	
Operating Condition	Operating temperature 10 to 40 °C Operating temperature		


External View Drawing


- Upper unit/Floor Unit Combination
 - <Back Wash Basin (YUME Basin)> AY-OAYMYM-* AY-OAYMYM-NB*


931





<Side Wash Basin > AY-OAYMSS-*




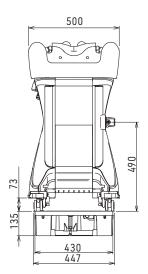


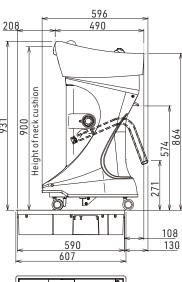



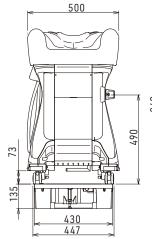


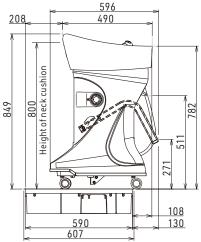



Chair Correlation Dimension

- Back Wash Basin (YUME Basin)
 - Men's Chair (Flat)

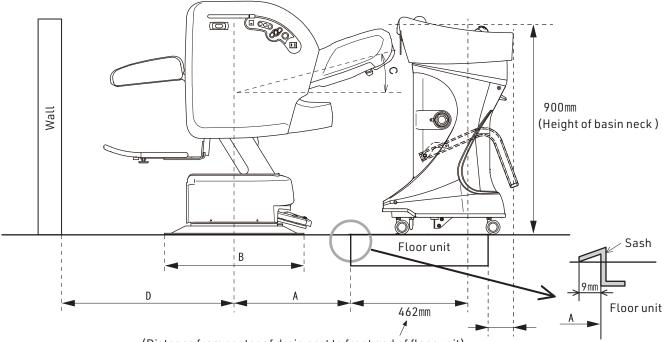

(Distance from center of drain port to front end of floor unit) 108mm


	Distance from center of chair base to front end of floor unit (A)	Base dimension (B)	Angle of back rest (C)	Distance from center of chair base to wall (D)
MARVEL	450 mm	ф600 mm	15°	1200 mm or longer
LUAR	450 mm	ф600 mm	15°	1200 mm or longer
LEGEND	465 mm	ф600 mm	16°	1200 mm or longer
INOVA	450 mm	D620×W580mm	15°	1200 mm or longer
Divan	540 mm	ф600 mm	10°	1200 mm or longer
LANCER	420 mm	D620×W580mm	19°	1200 mm or longer
REGALOI	540 mm	ф600 mm	12°	1200 mm or longer
Alivio Type A	440 mm	D620×W580mm	18°	1200 mm or longer
SPX	450 mm	D620×W580mm	15°	1200 mm or longer
Able	485 mm	D590×W560mm	11°	1200 mm or longer
LUXUARY MAXIM	550 mm	φ600 mm	11°	1200 mm or longer

A-dimension

The A-dimension is the distance from the center of the chair rotation to the front end of the resin case of the floor unit. (As above illustration, A-dimension is not the distance to the sash.)

D-dimension

• Men's Chair (Lay Flat)

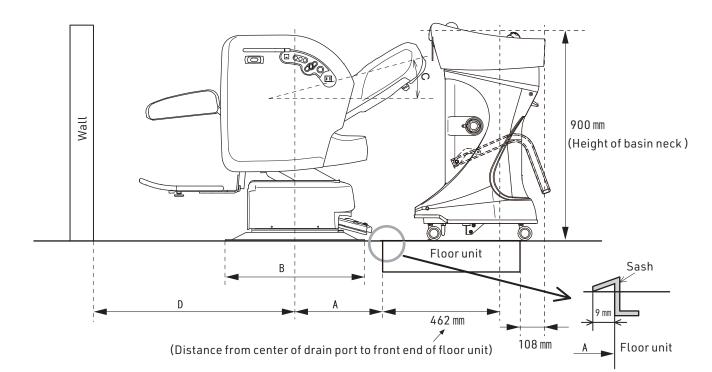


	Distance from center of chair to front end of floor unit (A)	Base dimension (B)	Angle of back rest (C)	Distance from center of chair base to wall (D)
MARVEL	335 mm	ф600 mm	30°	1200 mm or longer
LUAR	335 mm	φ600 mm	30°	1200 mm or longer
LEGEND	355 mm	ф600 mm	30°	1200 mm or longer
INOVA	330 mm	D620×W580 mm	30°	1200 mm or longer
Divan	335 mm	φ600 mm	30°	1200 mm or longer
LANCER	385 mm	D620×W580 mm	30°	1200 mm or longer
REGALOI	395 mm	φ600 mm	30°	1200 mm or longer
Alivio Type A	390 mm	D620×W580 mm	30°	1200 mm or longer
SPX	330 mm	D620×W580 mm	30°	1200 mm or longer
Able	305 mm	D590×W560 mm	30°	1200 mm or longer
LUXUARY MAXIM	345 mm	φ600 mm	30°	1200 mm or longer

A-dimension

The A-dimension is the distance from the center of the chair rotation to the front end of the resin case of the floor unit. (As above illustration, A-dimension is not the distance to the sash.)

D-dimension

• Shampoo Chair (Lay Flat)

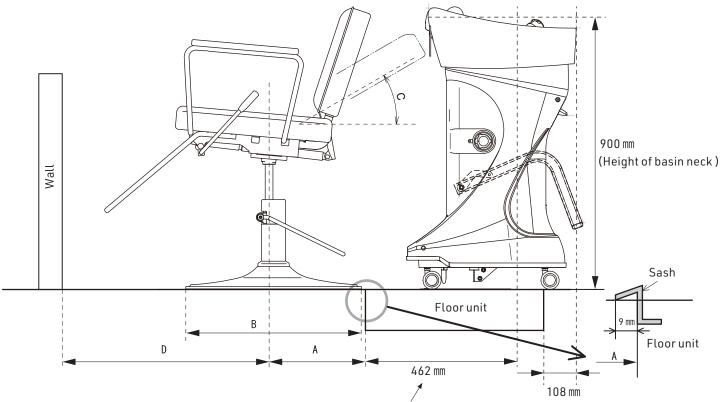

(Distance from center of drain port to front end of floor unit)

	Distance from center of chair rotation (ram) to front end of floor unit (A)	Base dimension (B)	Angle of back rest (C)	Distance from center of chair rotation (ram) to wall (D)
Vintage alt+SP-Y	325 mm	φ580 mm	30°	900 mm or longer
Vintage alt+SP-YE	325 mm	φ512 mm	30°	900 mm or longer
Penta+SP-AH/AI	285 mm	φ565 mm	30°	900 mm or longer
CADILLA+SP-AC/AD	310 mm	φ565 mm	30°	900 mm or longer
205+SP-AC/AD	310 mm	φ565 mm	30°	900 mm or longer
MACCOWD+SP-AC/AD	335 mm	φ565 mm	30°	900 mm or longer
215+SP-202C	295 mm	φ565 mm	30°	900 mm or longer


A-dimension

The A-dimension is the distance from the center of the chair rotation to the front end of the resin case of the floor unit. (As above illustration, A-dimension is not the distance to the sash.)

D-dimension

Side Wash Basin

• Men's Chair

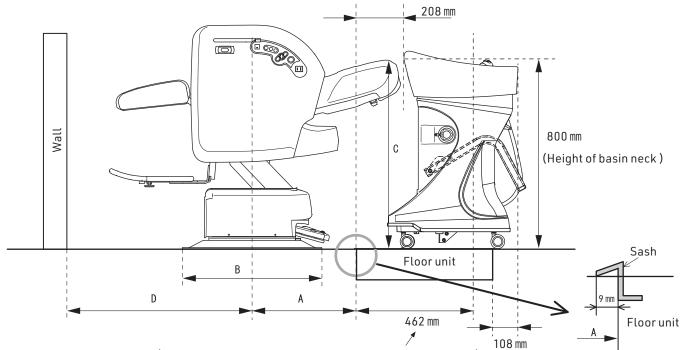

(Distance from center of drain port to front end of floor unit)


	Distance from center of base to front end of floor unit (A)	Base dimension (B)	Angle of back rest (C)	Distance from center of chair to wall (D)
MARVEL	440 mm	φ600 mm	775 mm	1200 mm or longer
LUAR	400 mm	φ600 mm	765 mm	1200 mm or longer
LEGEND	400 mm	ф600 mm	765 mm	1200 mm or longer
INOVA	390 mm	D620×W580 mm	760mm	1200 mm or longer
Divan	435 mm	ф600 mm	765 mm	1200 mm or longer
LANCER	410 mm	D620×W580 mm	750 mm	1200 mm or longer
REGALOI	465 mm	ф600 mm	780 mm	1200 mm or longer
Alivio Type A	435mm	D620×W580 mm	775mm	1200mm or longer
SPX	450 mm	D620×W580 mm	760 mm	1200 mm or longer
Able	425 mm	D590×W560 mm	770 mm	1200 mm or longer
LUXUARY MAXIM	485 mm	φ600 mm	485 mm	1200 mm or longer

A-dimension

The A-dimension is the distance from the center of the chair rotation to the front end of the resin case of the floor unit. (As above illustration, A-dimension is not the distance to the sash.) For the distance to the front end of the sash, subtract 20 mm (sash dimension) from the A-dimension.

D-dimension

• Shampoo Chair

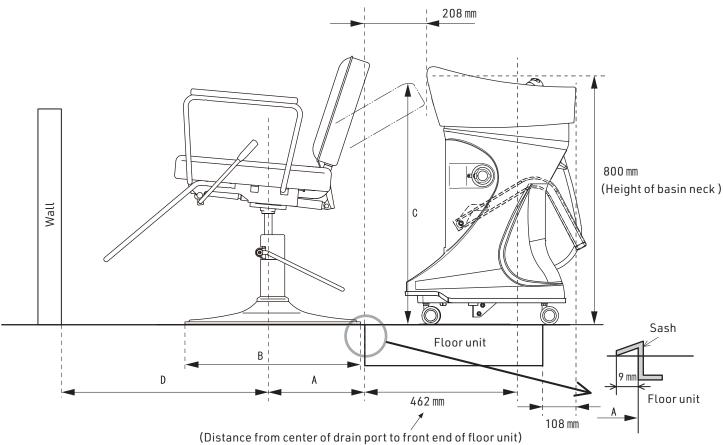

	Distance from center of chair rotation (ram) to front end of floor unit (A)	Base dimension (B)	Angle of back rest (C)	Distance from center of chair rotation (ram) to wall (D)
Vintage alt+SP-YC	350 mm	φ580 mm	765 mm	900 mm or longer
Vintage alt+SP-YE	350 mm	φ512 mm	765 mm	900 mm or longer
Penta+SP-AH/AI	330 mm	φ565 mm	770 mm	900 mm or longer
CADILLA+SP-AC/AD	310 mm	φ565 mm	750 mm	900 mm or longer
205+SP-AC/AD	310 mm	φ565 mm	750 mm	900 mm or longer
215+SP-202C	320 mm	φ565 mm	745 mm	900 mm or longer

A-dimension

The A-dimension is the distance from the center of the chair rotation to the front end of the resin case of the floor unit. (As above illustration, A-dimension is not the distance to the sash.)

For the distance to the front end of the sash, subtract 20 mm (sash dimension) from the A-dimension.

D-dimension

The D-dimension is given as a reference for non-disturbance of the seated person to the operation.

Set it depending on the site condition and customer's request.

ΜΕΜΟ



Takara Belmont (UK) Ltd. BELMONT HOUSE,ONE ST.ANDREWS WAY,BOW,LONDON E3 3PA,ENGLAND http://www.takara.co.uk/ TEL: +44 (0) 20 7515 0333



Printed in Japan

Book Number | 1E05LKA0